

Assembly Instruction

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: Integrated LED 30W

Estimated Assembly Time: 20-30 minutes


Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.


These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Package Contents

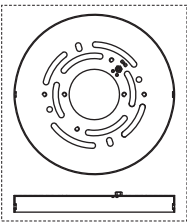


A Crossbar
x 1

B Mounting Screw
x 2

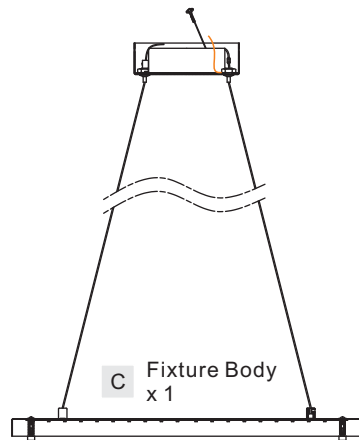

C Fixture Body
x 1

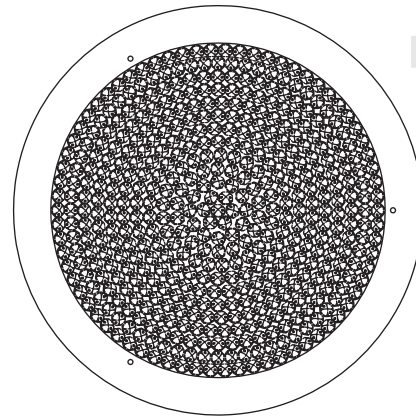

D Glass Panel
x 1




E Allen Wrench
x 1

STEP 1 – Install Glass Panel

A. Remove lock screws with rubber washers from the Fixture Body (C). Place the Glass Panel (D) onto the Fixture Body (C) with crystal beads against the Fixture Body (C). Secure the Glass Panel (D) by threading lock screws with rubber washers back onto the Fixture Body (C). Hand tighten until snug.

Figure 1

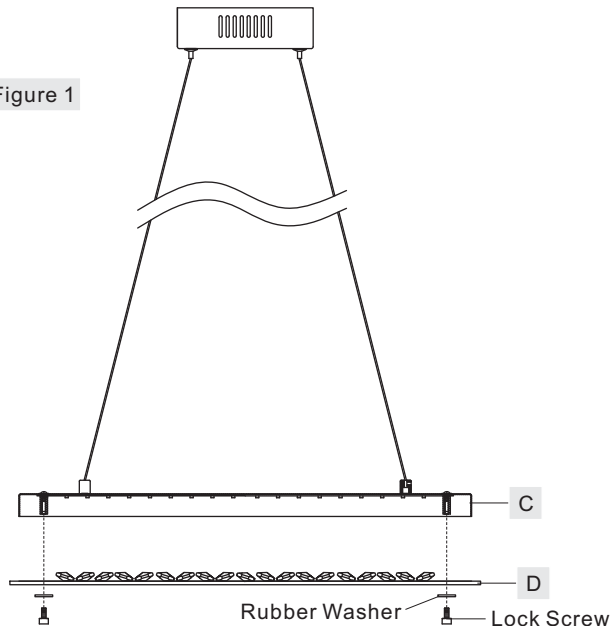

STEP 2 – Adjust the Fixture Body Height

A. By using the Allen Wrench (E), unscrew the set screw on the cable clasp. Push the pin on the bottom of the ceiling canopy and adjust the cable to your desired hanging height. Release your hand on the pin and move the cable clasp to the hex nut inside of the ceiling canopy. Tight the set screw on the cable clasp until snug to engage the cable.

B. Move the wire clasp to the hex nut inside of the ceiling canopy. Carefully tuck all slack wires inside of the ceiling canopy.

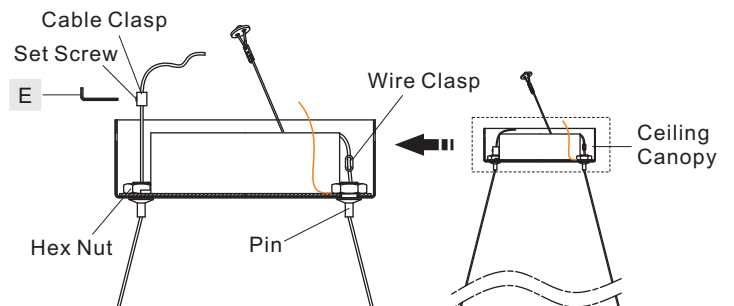


Figure 2

Thank you for purchasing a product.

STEP 3 - Attach Crossbar to Outlet Box

- A. Attach the Crossbar (A) to Outlet Box and secure by threading Outlet Box Screws (not supplied) into the Mounting Holes on the Outlet Box. Tighten until snug.

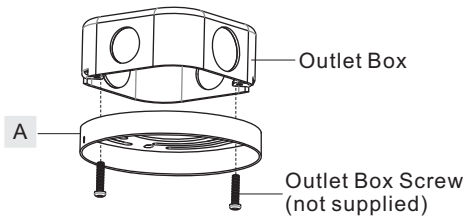


Figure 3

STEP 4 - Attach the Lanyard

- A. The purpose of the lanyard is to provide a means to support the fixture hands free from the junction box while connecting the electrical wires.
- B. Turn the Button Stop so it may be inserted into a Crossbar slot. Make sure the Button Stop is completely inside the Crossbar. Slowly release the fixture to make sure it is supported by the Button Stop. Proceed to the wiring steps in the next step. Once you are complete with the wiring, the Lanyard will push into the junction box when the fixture is placed for final mounting.

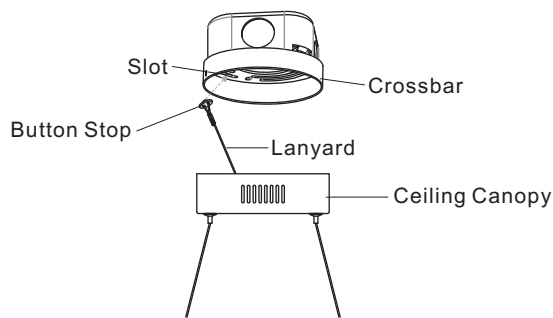


Figure 4

STEP 5 - Make Wire Connections

- A. Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw.
- B. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

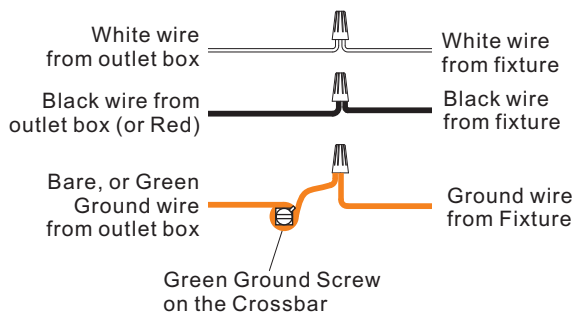


Figure 5

STEP 6 - Install Fixture to Ceiling

- A. Place ceiling canopy on the Fixture Body (C) over the Crossbar (A). Line up holes on the side of ceiling canopy and the Mounting Hole on the side of the Crossbar (A). Secure by threading Mounting Screws (B) into the Crossbar (A). Tighten until snug.

Your fixture is now assembled and ready to use. Enjoy!




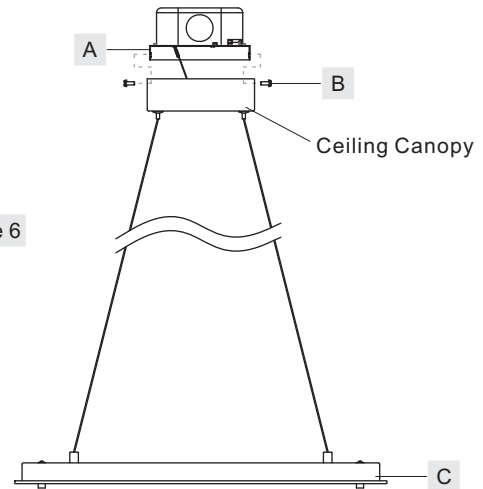


Figure 6

FINISH: POLISHED CHROME

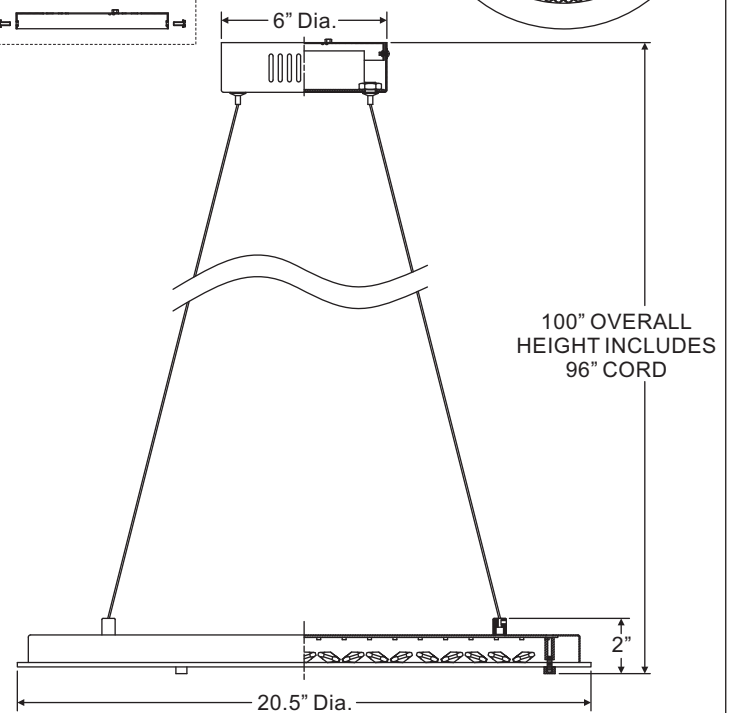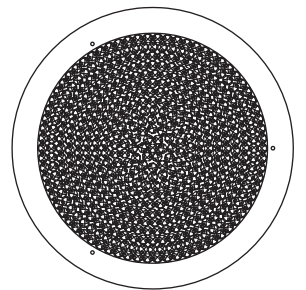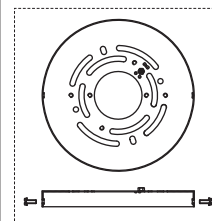

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"

Thank you for purchasing a product.