



Judge 2 Year Domestic Electrical Guarantee

The Judge Guarantee covers the product to be free of defects in

materials and workmanship for a period of TWO YEARS from the date of original retail purchase. During this period, JUDGE will, at our option, repair or replace defective parts of the product, or replace the product, providing the Use Care and Safety Advice has been followed.

The Guarantee does not cover damage, defect or failure caused by or resulting from accidents, external damage, alteration, modification, abuse, misuse or misapplication.

The Guarantee does not cover any damage caused by taking the appliance apart yourself, or attempting to repair the appliance yourself.

THE PRODUCT IS INTENDED FOR DOMESTIC USE ONLY.

Please keep your Purchase Receipt and contact us directly if you encounter any problems with your product.

HORWOOD SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT (INCLUDING COLOUR FADING, SCRATCHES OR ACCUMULATED DIRT) WITHOUT FOLLOWING THE USE, CARE & SAFETY INSTRUCTIONS.

Note: Due to the introduction of improvements from time to time, the right is reserved to supply products which differ slightly from those illustrated and described in this publication.

Errors and Omissions Excepted.

JUDGE CUSTOMER SERVICES, HORWOOD,
AVONMOUTH WAY,
BRISTOL, BS11 9HX, GREAT BRITAIN

customerservice@horwood.co.uk
www.judgecookware.co.uk
Tel: 0117 940 0000

Model No. and Specifications

Name	Judge Hand Blender
Model No	JEA18
Rated Voltage	220-240v
Rated Frequency	50Hz
Rated Power	200W Max



CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

FOR DOMESTIC USE ONLY

JUDGE Hand Blender



Instruction Manual


Model No. JEA18

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USE AND SAVE FOR LATER REFERENCE.

UNPACK YOUR HAND BLENDER CAREFULLY (CUTTER BLADES IN BLENDING UNIT ARE SHARP!) AND REMOVE PACKING PIECES, LABELS AND STICKERS.

Identifying the parts

1. Motor Unit
2. Blending Unit
3. Cutter Head
(Beware SHARP CUTTING BLADES)
4. Low Speed Switch
5. High Speed Switch
6. Power Cord and Plug

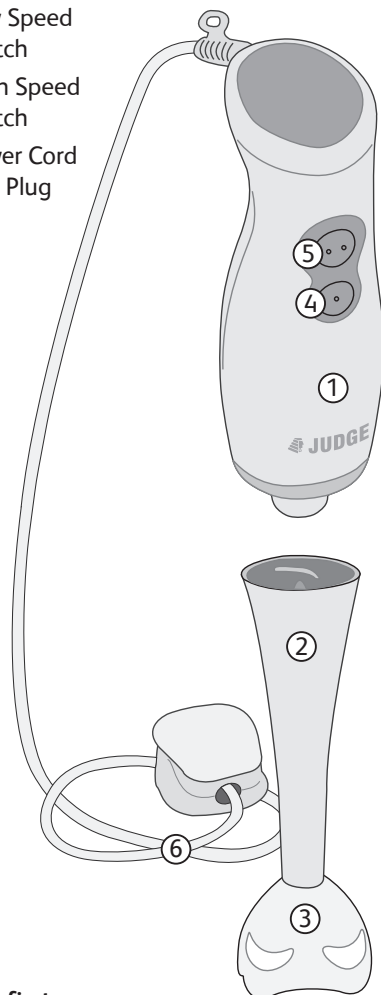

Before first use

- Wash Blending Unit (2) in warm soapy water, rinse and dry: the Blending Unit (2) is Dishwasher Safe. Beware Sharp Blades in the Blending Unit (2). Wipe the Motor Unit (1) with a damp, soapy cloth and dry thoroughly. **DO NOT IMMERSE THE MOTOR UNIT (1) IN WATER.**

Assembly

- Ensure that the Motor Unit (1) is disconnected from the electricity supply before assembly.
- The Motor Unit (1) drops into the Blending Unit (2), and positively LOCKS when rotated clockwise.

How to Use

- The Hand Blender should be used with a suitable bowl which is sited on a dry, level and stable surface, away from direct heat. Start blending by using the Low Speed (4) to avoid splashing.
- Allow cooked solid food to cool a little before blending - recommended maximum temperature is 65°C. The maximum temperature of liquid foods that can be processed is also 65°C, but it is better to process all foods at a lower temperature if possible.
- Food to be blended should be cut into approx. 2cm / ¾" pieces - if you want an even blend, start with pieces of about the same size. If 'stringy' ingredients are being processed such as celery or leeks, regularly clean the Cutter Head (3).

Cleaning

- Unplug the Hand Blender from the electricity socket before cleaning. Thoroughly wash the Blending Unit (2) in warm soapy water and dry with a soft cloth. The Blending Unit (2) is dishwasher safe.
- Wipe the Motor Unit (1) with a damp, soapy cloth and dry thoroughly. **DO NOT IMMERSE THE MOTOR UNIT IN WATER.**
- Store the Hand Blender, with blades protected, in a safe place to prevent accidents - out of the reach of children

Cautions

- Before use, check that your Mains power supply corresponds to the voltage shown in this Manual (also shown on the Rating Label of the Hand Blender, located on the Motor Unit).
- Do not connect the plug into your socket with wet hands.
- Do not operate the Hand Blender with wet hands.
- Unplug the unit whenever it is not in use, and before cleaning or dismantling.
- The Power Cord should not hang over the side of the worktop, where it could accidentally snagged or pulled by children.
- Pull the plug (do not pull Power Cord) to disconnect from mains socket. Do not move the Hand Blender around by pulling the Power Cord.

CAUTIONS (CONTINUED)

- Do not allow the Power Cord to touch any hot surface.
- If the Power Cord has been damaged in any way do not operate the appliance - contact Judge Customer Services at the address given in the Warranty section.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Always keep the Hand Blender out of the reach of children.
- The Hand Blender should only be used as instructed: there is potential for injury from misuse.
- Care must be taken when handling the sharp blades in the Blending Unit: always unplug the Hand Blender before cleaning or clearing the Cutter Head.
- Do not use fingers to scrape food away from the sharp blades - keep fingers well away from rotating blades at all times. A plastic scraper may be used, but only when the electricity supply has been disconnected.
- The bowl used must be located in a level, stable position before operating the Hand Blender.
- Do not switch on or attempt to operate the appliance if it appears to be faulty in any way - contact Judge Customer Services at the address given in the Warranty section.
- Never attempt to make any repair to the Hand Blender yourself - contact Judge Customer Services at the address given in the Warranty section.
- Do not immerse the Motor Unit in water to clean.
- Make sure that all surfaces that come into contact with food are kept scrupulously clean. Wipe work surfaces before and after use with an antibacterial cleaner.
- Please keep your Purchase Receipt.