

**Catnapper Recliner unpacking and repackaging**


Depicted is a KD recliner in the carton



Roll the carton over so that the bottom is facing up.



Using a staple puller or pliers carefully remove the carton staples to prevent injury and damage.

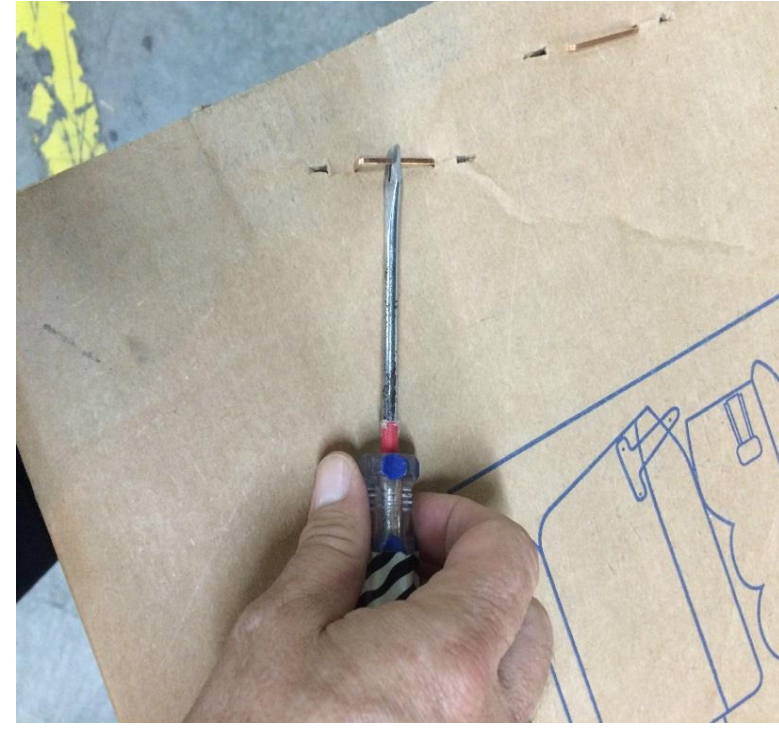

In this picture the staples have been removed, and the carton flaps are folded down for easy access.

The cartoned recliner pictured with the bottom of the carton open, now the chair can be accessed.

Carefully place the carton on its side, now the recliner can be easily removed.



Pictured is the rear view of the recliner with the backs laying in the arms.



This picture shows the KD male upright that is part of the scissor assembly



This picture shows the female kd bracket that is attached to the inside back



Align the female and male brackets on each side of the back.



Press down firmly on each side of the back until you hear a click, the back is locked in...if it isn't repeat.



Now the outside back velcro can be done up, and the chair is ready to be used.



### Removal of the back for storage or moving

To remove the back from the arms, first loosen the outside back at the bottom, it is simply secured using velcro.

Tuck the outside back up into the back cavity to keep it out of the way.

Use a flat tip screwdriver, and pry open locking clip on each side of the back, sometimes it may be necessary to pull up while prying.



In this picture the screwdriver is left in place to hold the locking clip open, then the back is pulled up to loosen.

Pull up on both sides of the back to remove the female from the male brackets.

The back is removed for easier handling.

