




ASSEMBLY INSTRUCTIONS

Parts List				
Pieces	Schema		Description	QTY
A			Screw	4
B			Flat washer	4
C			Lock washer	4
D			Nut	4
E			Alu plate	4
F			Nut cap	4
G			Wrench	1
H			PE cap	Factory already assembled
I			Seat	1
J	1		Base	1
	2		Alu plate	2
	3		Spring plate	2
	4		Screw	4
	5		Flat washer	4
	6		Lock washer	4
	7		Nut	4
	8		TR	1
K			Seat Cushion	1




WARNING!

- This chair has a 250 lbs weight capacity.
- Hang cushion over chair frame to dry if it gets wet to prevent mold/mildew.

ATTENTION:

1. Please read these instructions carefully before assembly.
2. Aluminum is soft metal over tighten may strip threads or break the part.
3. DO NOT use power tools.
4. Check parts against the parts list to make sure you have all parts needed for proper assembly.
5. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly.

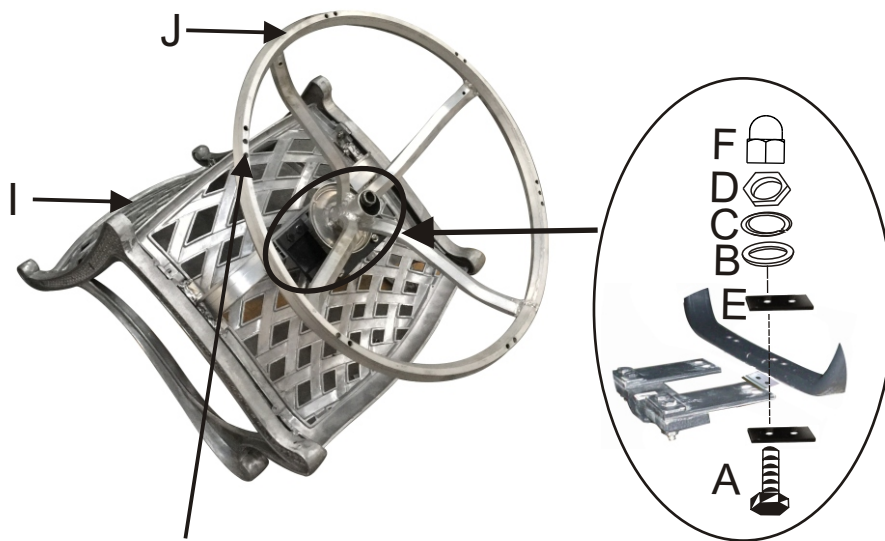

H : This part have been assembled by factory already.

1. Before removing all protective packing material and position base on floor. Attach the seat(I) onto the base (J)with Alu plate as the picture, then assemble using bolt(A), flat washers(B), lock washers(C), nuts(D) and nut cap(F). Be sure to the arrows face to front.
2. Tighten all the bolts and nuts. Test the swivel rocker gently. If the rocker does not rock properly, double check the assembly procedure.
3. Remove all protective packaging.
4. Put Cushion(K) on the unit(as shown in the picture).

Warning : DO NOT use acid or alkaline washing liquid to clean the product.



*** DO NOT OVER TIGHTEN**

*** NO SOCKET DRIVERS**



Made in China

*** NO POWER TOOLS**

