

CHAISE PROFESSIONNELLE DE DIRECTEURS DE DOS DE GRILLE D'AIR INSTRUCTIONS DE MONTAGE

la liste et s'assurer que les quantités des pièces reçues sont correctes.

ÉTAPE 1 Insérer les roulettes (2) dans la base (1). S'assurer que toutes les roulettes (2) sont verrouillées en place. Placer la base (1) à la verticale de façon à ce que les roulettes (2) soient par terre.

ÉTAPE 2 Attacher le plateau du siège (4) à l'assemblage du siège (5) en utilisant quatre vis moyenne (8). Attacher les bras (7L et 7R) à l'assemblage du siège (5) en utilisant six vis longue (9) et six rondelles (10). **RESSERRER COMPLÈTEMENT TOUTES LES VIS.**


ÉTAPE 3 Insérer l'assemblage du dossier entre le siège relié (5) au plateau du siège (4). Les attacher en utilisant trois courtes vis Allen (11). **RESSERRER COMPLÈTEMENT TOUTES LES VIS.**

ÉTAPE 4 Insérer le vérin pneumatique (3) dans la base (1). Placer le siège assemblé sur le dessus du vérin pneumatique (3). Appliquer de la pression pour verrouiller le siège.


ATTENTION : AVANT D'UTILISER LE FAUTEUIL, S'ASSURER D'AVOIR RESSERRÉ COMPLÈTEMENT TOUTES LES VIS.

PARTS.....	QTY
1. BASE	1
2. ROULETTE.....	5
3. VÉRIN PNEUMATIQUE	1
4. PLATEAU DU SIÈGE	1
5. ASSEMBLAGE DU SIÈGE	1
6. ASSEMBLAGE DU DOSSIER	1
7. BRAS (7L ET 7R)	2
8. VIS MOYENNE (PLATEAU DU SIÈGE)	4
9. VIS LONGUE (BRAS)	6
10. RONDELLES	6
11. VIS ALLEN COURTE (ASSEMBLAGE DU DOSSIER)	3
12. CLÉ ALLEN	1


ÉTAPE 1

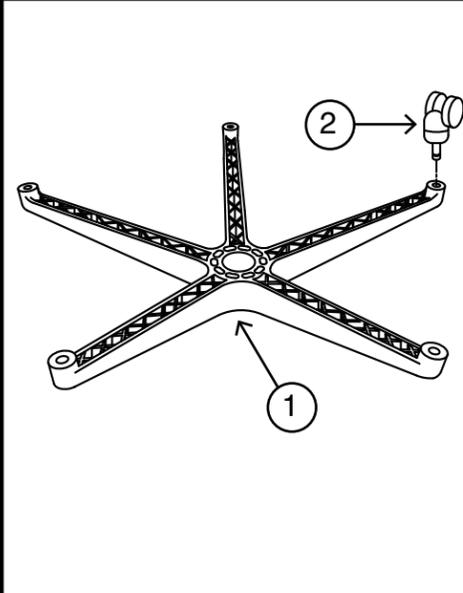


ÉTAPE 2

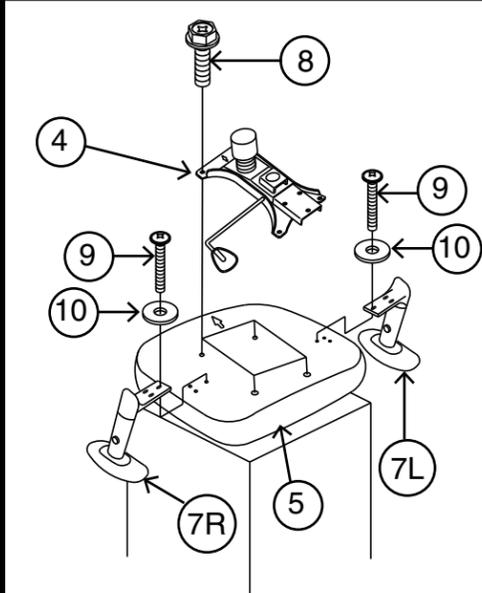

ÉTAPE 3

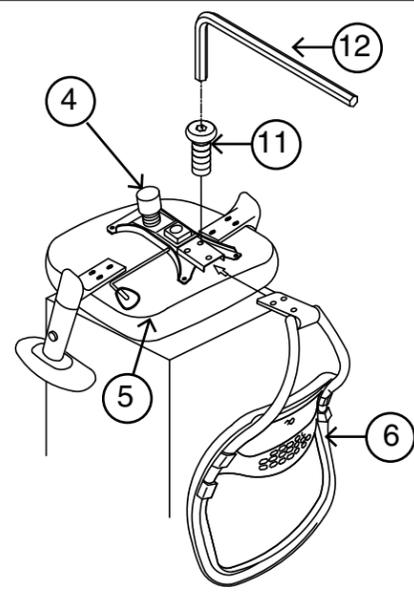

ÉTAPE 4

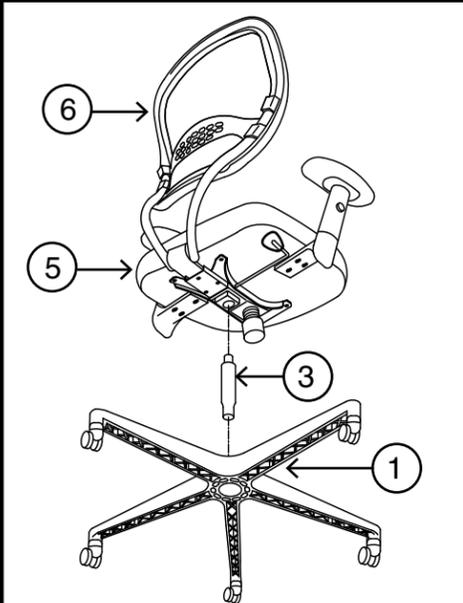

ÉTAPE 5



AIR GRID BACK PROFESSIONAL MANAGERS CHAIR OPERATING INSTRUCTIONS



FEATURE

• PNEUMATIC SEAT HEIGHT ADJUSTMENT

To raise seat remove pressure from seat and pull lever (1) up. To lower seat height sit on chair and pull lever (1) up.

• SYNCHRO TILT

To lock return chair to the upright position and push lever (1) in. To unlock pull lever (1) out.

• TILT ADJUSTMENT

For individual comfort, this chair has been equipped with an adjustment that will allow the user to change the tension of the tilting feature. Turn knob (2) clockwise to increase tension and counter-clockwise to decrease or ease the tension.

NOTE: Be careful not to loosen back tilt adjustment knob completely.

• ARM HEIGHT ADJUSTMENT

To adjust arm height, push button (3) in to allow the arms to move up or down freely. Release the button (3) once the desired height is reached.

WARNING

1. Use this product only one person at a time.
2. Do not use this chair unless all bolts screws and knobs are securely tightened.
3. Check that all bolts screws and knobs are tight every three months or as needed.
4. Do not overturn back tilt knob when decreasing tension.
5. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
6. Do not use chair as a stepladder.
7. Use this chair for its intended purpose only.
8. Use mild detergent only for cleaning.

LIMITED WARRANTY

These chairs are warranted* from the date of purchase against failure due to material and workmanship as follows:

- Lifetime on component parts including pneumatic cylinder, control mechanism, base and casters.
- 3 Years on upholstery fabric and foam against wear and deterioration.

**All warranties are limited to the original purchaser for normal commercial usage defined as a standard forty hour work week by persons weighing 250 lbs. or less. This warranty will not cover labor, freight or damage from misuse, abuse, negligence, alteration, accident, vandalism, rusting, acts of nature or any other event beyond the control of us. The warranty does not cover cosmetic damage that may result from normal use. Liability for incidental or consequential damages is excluded. The user assumes all risk of injury resulting from use of this product. When usage is more than 40 hours per week, a five year warranty on all parts applies. Fabric is warranted for one year. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.*

To make a warranty claim, contact Parts Department via e-mail, by Fax, or toll free parts number. Provide model number and description of the problem and obtain confirmation number. At it's option will:

- (a) Supply compatible components of current manufacture.
- (b) Repair the customer's component.

It is the customer's responsibility to prepay freight on any components returned to the factory. Return freight on components covered by warranty will be paid by us.

AIR GRID BACK PROFESSIONAL MANAGERS CHAIR ASSEMBLY INSTRUCTIONS

CHAISE PROFESSIONNELLE DE DIRECTEURS DE DOS DE GRILLE D'AIR MODE D'EMPLOI

Remove all parts from carton, separate into part numbers indicated on parts list and make sure part quantities are correct.

STEP 1 Insert Carpet Casters (2) into Base (1). Be sure all Carpet Casters (2) are inserted properly. Place Base (1) upright so that Carpet Casters (2) are on the floor.

STEP 2 Attach Seat Plate (4) to Seat Assembly (5) using four Medium Screws (8). Attach Arms (7L & 7R) to Seat Assembly (5) using six Long Screws (9) and six Washers (10). **FULLY TIGHTEN ALL SCREWS.**


STEP 3 Insert Back Assembly between Seat Assembly (5) and Seat Plate (4). Attach using three Short Allen Screws (11). **FULLY TIGHTEN ALL SCREWS.**

STEP 4 Insert Pneumatic Cylinder (3) into Base (1). Place assembled seat on top of Pneumatic Cylinder (3). Apply pressure to lock seat in place.


ATTENTION: MAKE SURE ALL SCREWS ARE FULLY TIGHTENED BEFORE USING CHAIR.

PARTS	QTY
1. BASE	1
2. CARPET CASTER	5
3. PNEUMATIC CYLINDER	1
4. SEAT PLATE	1
5. SEAT ASSEMBLY	1
6. BACK ASSEMBLY	1
7. ARMS (7L & 7R)	2
8. MEDIUM SCREWS (Seat Plate)	4
9. LONG SCREWS (Arms)	6
10. WASHERS	6
11. SHORT ALLEN SCREWS (Back Assembly)	3
12. ALLEN WRENCH	1


STEP 1

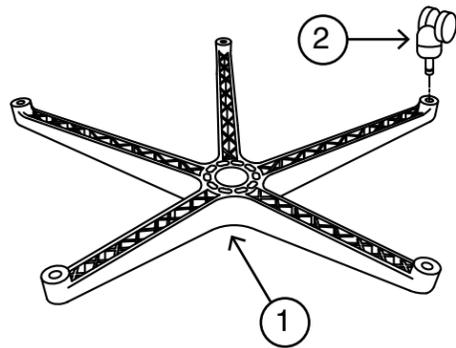


STEP 2

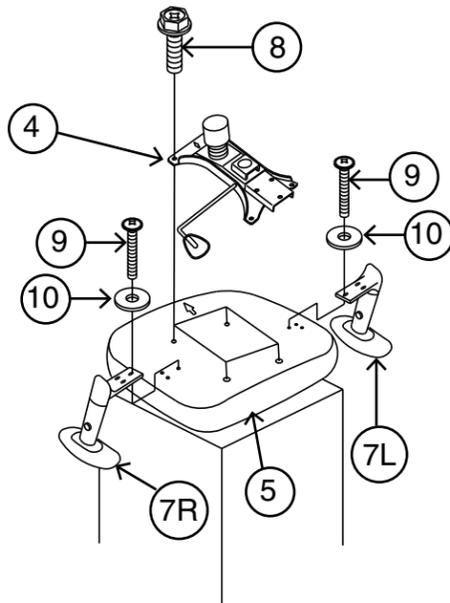

STEP 3

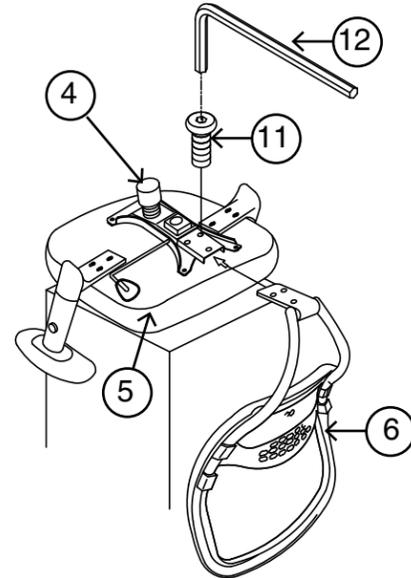

STEP 4

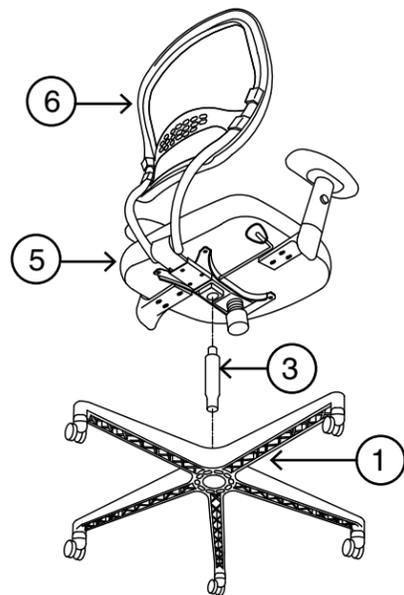

STEP 5



CARACTÉRISTIQUES

RÉGLAGE PNEUMATIQUE DE LA HAUTEUR DU SIÈGE

Pour élever le siège, enlever toute pression du siège et tirer le levier (1) vers le haut. Pour baisser le siège, s'asseoir sur le fauteuil et tirer le levier (1) vers le haut.

INCLINAISON SYNCHRO

Pour bloquer le basculement, retourner le siège à la position verticale et pousser le levier (1) vers l'intérieur. Pour débloquent, tirer le levier (1) vers l'extérieur.

RÉGLAGE DE L'INCLINAISON

Afin d'assurer un confort individuel, ce siège a été muni d'un réglage qui permet à l'utilisateur de changer la tension du basculement. Tourner le bouton (2) dans le sens des aiguilles d'une montre pour augmenter la tension et dans le sens inverse pour réduire la tension.

Note : Veillez à ne pas desserrer complètement le bouton de réglage de basculement arrière.

AJUSTEMENT DE LA HAUTEUR DES BRAS

Pour ajuster la hauteur des bras, appuyer sur le bouton (3) pour que les bras puissent se déplacer vers le haut ou vers le bas. Relâcher le bouton (3) une fois que la hauteur désirée est atteinte.

AVERTISSEMENT

1. Seule une personne à la fois peut utiliser ce produit.
2. Ne pas utiliser ce fauteuil à moins que toutes les vis et tous les boulons et boutons soient resserrés.
3. Vérifier à tous les trois mois ou au besoin que toutes les vis et tous les boulons et boutons sont resserrés.
4. Ne pas trop tourner le bouton d'inclinaison du dossier lors de la diminution de la tension.
5. Éliminer les matériaux de conditionnement d'une manière convenable. Ne pas utiliser la couverture en plastique pour couvrir la tête à cause du risque d'étouffement.
6. Ne pas utiliser le fauteuil comme un escabeau.
7. Ce fauteuil ne doit servir qu'à l'usage pour lequel il a été conçu.
8. N'utiliser qu'un détergent liquide doux pour le nettoyage.

Nos normes de qualité sont parmi les plus élevées de l'industrie. De temps en temps, malgré nos efforts, il arrive que des pièces soient endommagées ou manquantes. Notre département de pièces fera tout son possible pour régler le problème promptement.