

CUIR FAUTEUIL DE DIRECTION
INSTRUCTIONS DE MONTAGE


ÉTAPE 1 ÉTAPE 2 ÉTAPE 3 ÉTAPE 4 ÉTAPE 5

Diagram showing assembly steps 1 through 5 for the leather office chair. Step 1: Insert casters (2) into the base (1) and attach the pneumatic cylinder (3) and air hose (4). Step 2: Attach the seat plate (5) to the seat cushion (6) using four short screws (9). Step 3: Attach the backrest support (13) to the seat plate (5) using four medium screws (10). Step 4: Attach the armrests (8) to the seat cushion (6) and backrest cushion (7) using two long screws (11) for each armrest. Step 5: Place the assembled seat on the pneumatic cylinder (3) and push down to lock it.

PIÈCE	QTÉ
1. Base	1
2. Roulettes	5
3. Vérin pneumatique	1
4. Soufflet	1
5. Plaque du siège	1
6. Coussin du siège	1
7. Coussin du dossier	1
8. Bras (8L et 8R)	2
9. Vis courte	4
10. Vis moyen	4
11. Vis longue	4
12. Bouchon en plastique	4
13. Support du dossier (préinstallé)	1
14. Clé allen (non montré)	1

Enlever toutes les pièces du carton, les organiser selon les numéros de pièce indiqués sur la liste et vérifier que les quantités des pièces reçues sont correctes. ÉTAPE 1 Insérer cinq roulettes (2) dans la base (1), les pousser très fort jusqu'à ce que vous entendiez ou sentiez la roulette (2) s'enclencher. Insérer le vérin pneumatique (3) dans la base (1) et glisser les soufflets (4) sur le vérin pneumatique (3). ÉTAPE 2 Fixez la plaque du siège (5) au coussin du siège (6) avec la flèche vers l'avant de la chaise avec quatre vis courte (9). SERREZ TOUTES LES VIS AVEC LA CLÉ ALLEN (14). ÉTAPE 3 Fixer le support du dossier (13) à l'arrière du plaque du siège (5) à l'aide quatre vis moyens (10). NE PAS SERRER LES VIS MOYENS (10). ÉTAPE 4 Fixez les bras (8L et 8R) au coussin du siège (6) et coussin du dossier (7) avec deux vis longues (11) pour chaque bras (8). APPLIQUEZ UNE FORTE PRESSION POUR ALIGNER ET SERRER ENTièrement TOUTES LES VIS AVEC LA CLÉ ALLEN (14). Couvrir les trous des bras (8R et 8L) avec deux bouchons en plastique (12) pour chaque bras (8). ÉTAPE 5 Placer le siège assemblé sur le dessus du vérin pneumatique (3) et pousser vers le bas. ATTENTION: AVANT D'UTILISER LE FAUTEUIL, S'ASSURER D'AVOIR SERRÉ COMPLÈTEMENT TOUTES LES VIS.

EXECUTIVE LEATHER CHAIR
OPERATING INSTRUCTIONS

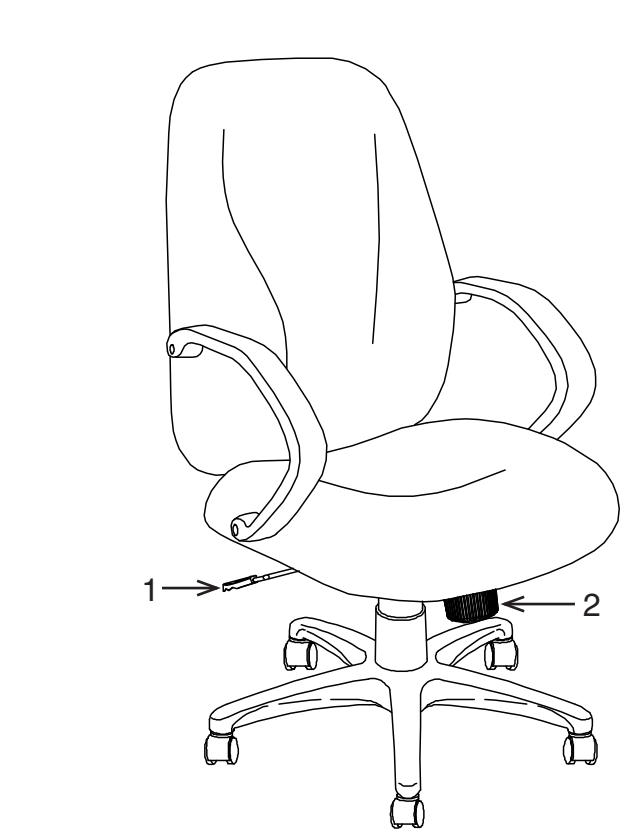

FEATURES

- PNEUMATIC SEAT HEIGHT ADJUSTMENT
To raise seat remove pressure from seat and pull lever (1) up.
To lower seat height sit on chair and pull lever (1) up.
NOTE: It is normal for chair to slightly lower under body weight.
 - LOCKING TILT ADJUSTMENT
For individual comfort, this chair has been equipped with an adjustment that will allow the user to change the tension of the tilting feature. Turn knob (2) clockwise to increase tension and counter-clockwise to decrease or ease the tension. To lock return chair to the upright position and push lever (1) in. To unlock pull lever (1) out.
- NOTE: Be careful not to loosen back tilt adjustment knob completely.

WARNING

1. Use this product only one person at a time.
2. Do not use this chair unless all bolts screws and knobs are securely tightened.
3. Check that all bolts screws and knobs are tight every three months or as needed.
4. Do not overturn back tilt knob when decreasing tension.
5. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
6. Do not use chair as a stepladder.
7. Use this chair for its intended purpose only.
8. Use mild detergent only for cleaning.

WORK SMART LIMITED WARRANTY

These chairs are warranted from the date of purchase against failure due to material and workmanship as follows:

- 15 Years on all non-moving metal parts.
- 5 Years on component parts including Control mechanisms, pneumatic cylinders, wood, plastic parts, base and casters.
- 3 Years on upholstery fabric and foam against wear and deterioration.
- Leather is not warranted against routine scratching and scuffing, as leather is subject to minor blemishes in use.

To make a warranty claim, contact Parts Department. Provide model number, proof of purchase, description of the problem and obtain return authorization. At it's option will:

- (a) Supply compatible components of current manufacture.
- (b) Repair the customer's component. The customer must prepay freight on any components returned to the factory. Return freight on components still in warranty will be paid by us.


*All warranties are limited to the original purchaser for normal commercial usage defined as a standard forty hour work week by persons weighing 250 lbs. or less. This collection is for persons weighing 300 lbs. or less. This collection is for persons weighing 400 lbs. or less. This collection is for persons weighing 500 lbs.or less. These colleciton are for persons weighing 350 lbs. or less. This warranty will not cover labor, freight or damage from misuse, abuse,negligence, alteration, accident, vandalism, rusting, acts of nature or any other event beyond the control of us. The warranty does not cover cosmetic damage that may result from normal use. Liability for incidental or consequential damages is excluded. The user assumes all risk of injury resulting from use of this product. When usage is more than 40 hours per week, a two year warranty on all parts applies. Fabric is warranted for one year. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

All chairs are built to meet or exceed ANSI BIFMA standards.


Our quality standards are among the highest in the industry. Sometimes, no matter how hard we try, there are times when parts are damaged or missing. Our Parts Department will do everything possible to promptly remedy the problem. Contact us via e-mail, by Fax, or toll free parts number.

EXECUTIVE LEATHER CHAIR
ASSEMBLY INSTRUCTIONS


STEP 1

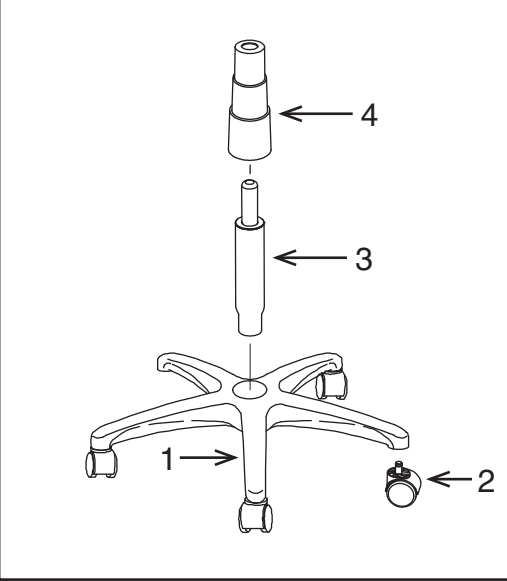


STEP 2

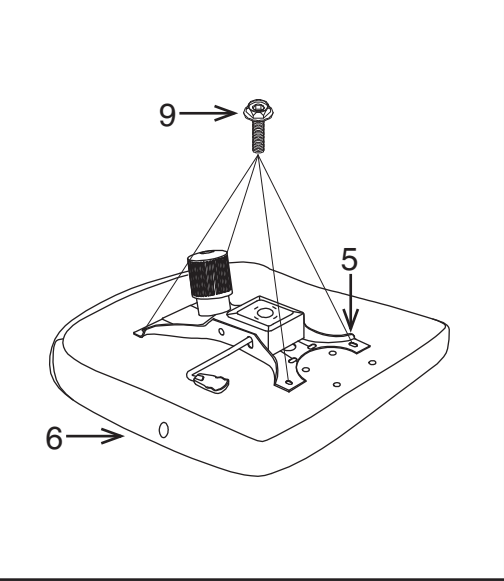

STEP 3

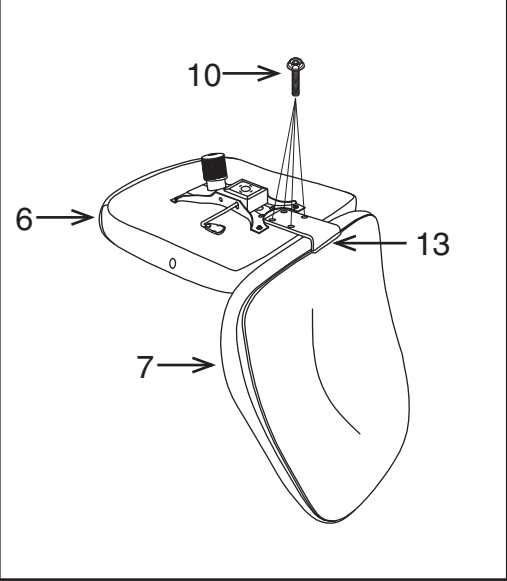

STEP 4

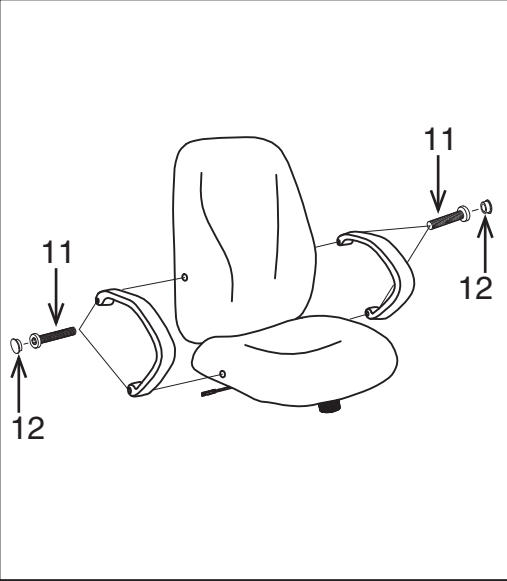

STEP 5



PART	QTY
1. Base	1
2. Caster	5
3. Pneumatic Cylinder	1
4. Bellows	1
5. Seat Plate	1
6. Seat Cushion	1
7. Back Cushion	1
8. Arms (8L & 8R)	2
9. Short Screw	4
10. Medium Screw	4
11. Long Screw	4
12. Plastic Cap	4
13. Back Support (pre-installed)	1
14. Allen Wrench (not shown)	1


CUIR FAUTEUIL DE DIRECTION
MODE D'EMPLOI

CARACTÉRISTIQUES

- **RÉGLAGE DE LA HAUTEUR DU SIÈGE PNEUMATIQUE**
Pour élever le siège, enlever toute pression du siège et lever le levier (1). Pour baisser le siège, s'asseoir sur le fauteuil et lever le levier (1).
NOTE: C'est normal que le fauteuil descende un peu lorsqu'on s'assied.
- **RÉGLAGE DE L'INCLINAISON VERROUILLABLE**
Pour assurer le confort de l'individu, ce fauteuil est muni d'un d'un réglage permettant à l'utilisateur de modifier la tension d'inclinaison. Tourner le bouton (2) dans le sens des aiguilles d'une montre pour augmenter la tension et dans le sens inverse des aiguilles d'une montre pour diminuer la tension. Pour verrouiller, remettre le fauteuil en position verticale et pousser le levier (1) vers l'intérieur. Pour déverrouiller, tirer le levier (1).
NOTE: Prendre garde à ne pas complètement desserrer le bouton de réglage de l'inclinaison du dossier.

AVERTISSEMENT

1. Seule une personne à la fois peut utiliser ce produit.
2. Ne pas utiliser ce fauteuil à moins que toutes les vis et tous les boulons et boutons soient resserrés.
3. Vérifier à tous les trois mois ou au besoin que toutes les vis et tous les boulons et boutons sont resserrés.
4. Ne pas trop tourner le bouton d'inclinaison du dossier lors de la diminution de la tension.
5. Éliminer les matériaux de conditionnement d'une manière convenable. Ne pas utiliser la couverture en plastique pour couvrir la tête à cause du risque d'étouffement.
6. Ne pas utiliser le fauteuil comme un escabeau.
7. Ce fauteuil ne doit servir qu'à l'usage pour lequel il a été conçu.
8. N'utiliser qu'un détergent liquide doux pour le nettoyage.

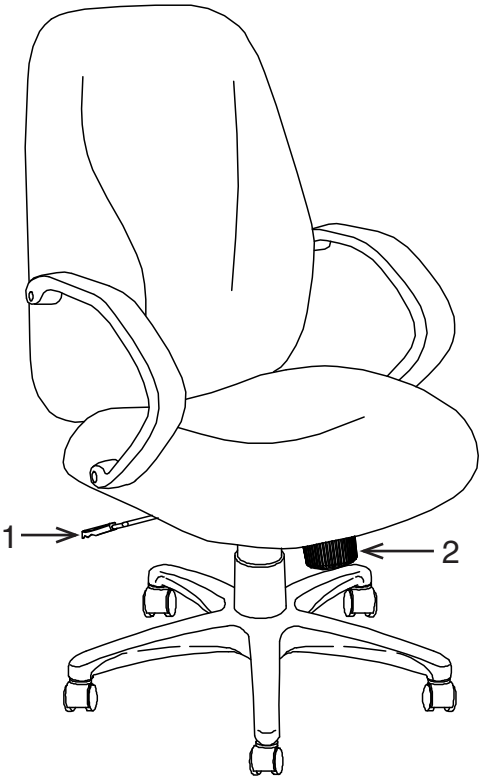

Remove all parts from carton, separate by part numbers indicated on parts list, and verify part quantities.

- STEP 1** Insert five Casters (2) into Base (1), push hard until you feel or hear the Caster (2) snap into place. Insert Pneumatic Cylinder (3) into Base (1) and slip Bellows (4) over Pneumatic Cylinder (3).
- STEP 2** Attach Seat Plate (5) to Seat Cushion (6) with the arrow towards the front of the chair using four Short Screws (9). **FULLY TIGHTEN SHORT SCREWS (9) USING ALLEN WRENCH (14).**
- STEP 3** Attach Back Support (13) to rear of Seat Cushion (6) using four Medium Screws (10). **DO NOT FULLY TIGHTEN MEDIUM SCREWS (10).**
- STEP 4** Attach Arms (8L & 8R) to Seat Cushion (6) and Back Cushion (7) using two Long Screws (11) for each Arm (8). **APPLY FIRM PRESSURE TO ALIGN & FULLY TIGHTEN ALL SCREWS USING ALLEN WRENCH (14).** Cover holes in Arms (8L & 8R) using two Plastic Caps (12) for each Arm (8).
- STEP 5** Place the assembled seat on top of Pneumatic Cylinder (3) and apply downward pressure.
- ATTENTION: MAKE SURE ALL SCREWS ARE FULLY TIGHTENED BEFORE USING CHAIR.**