



SOFA SECTIONAL

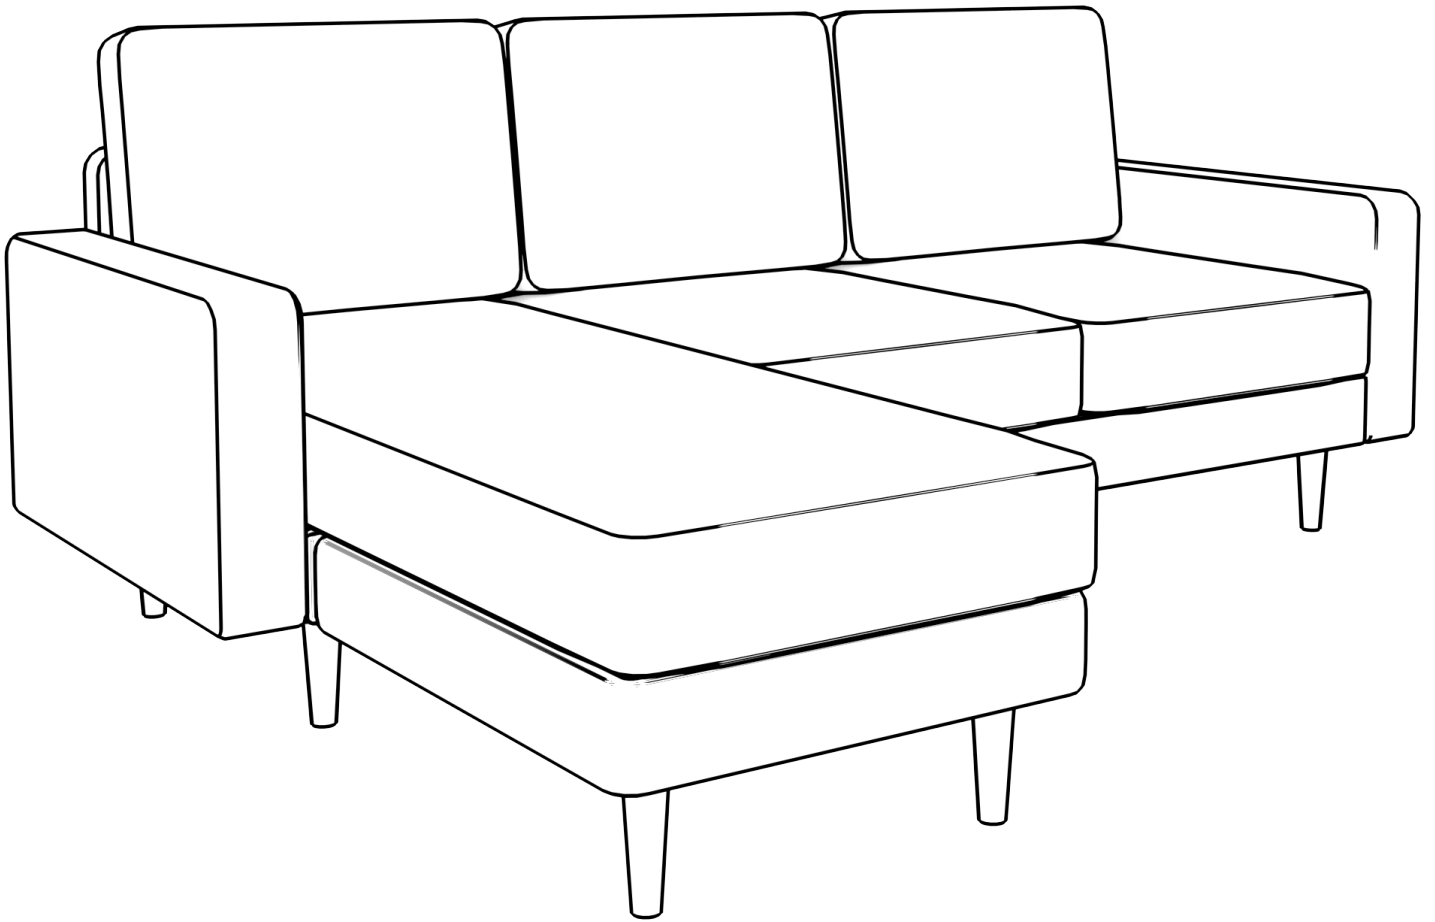


Gather Your Eggs...

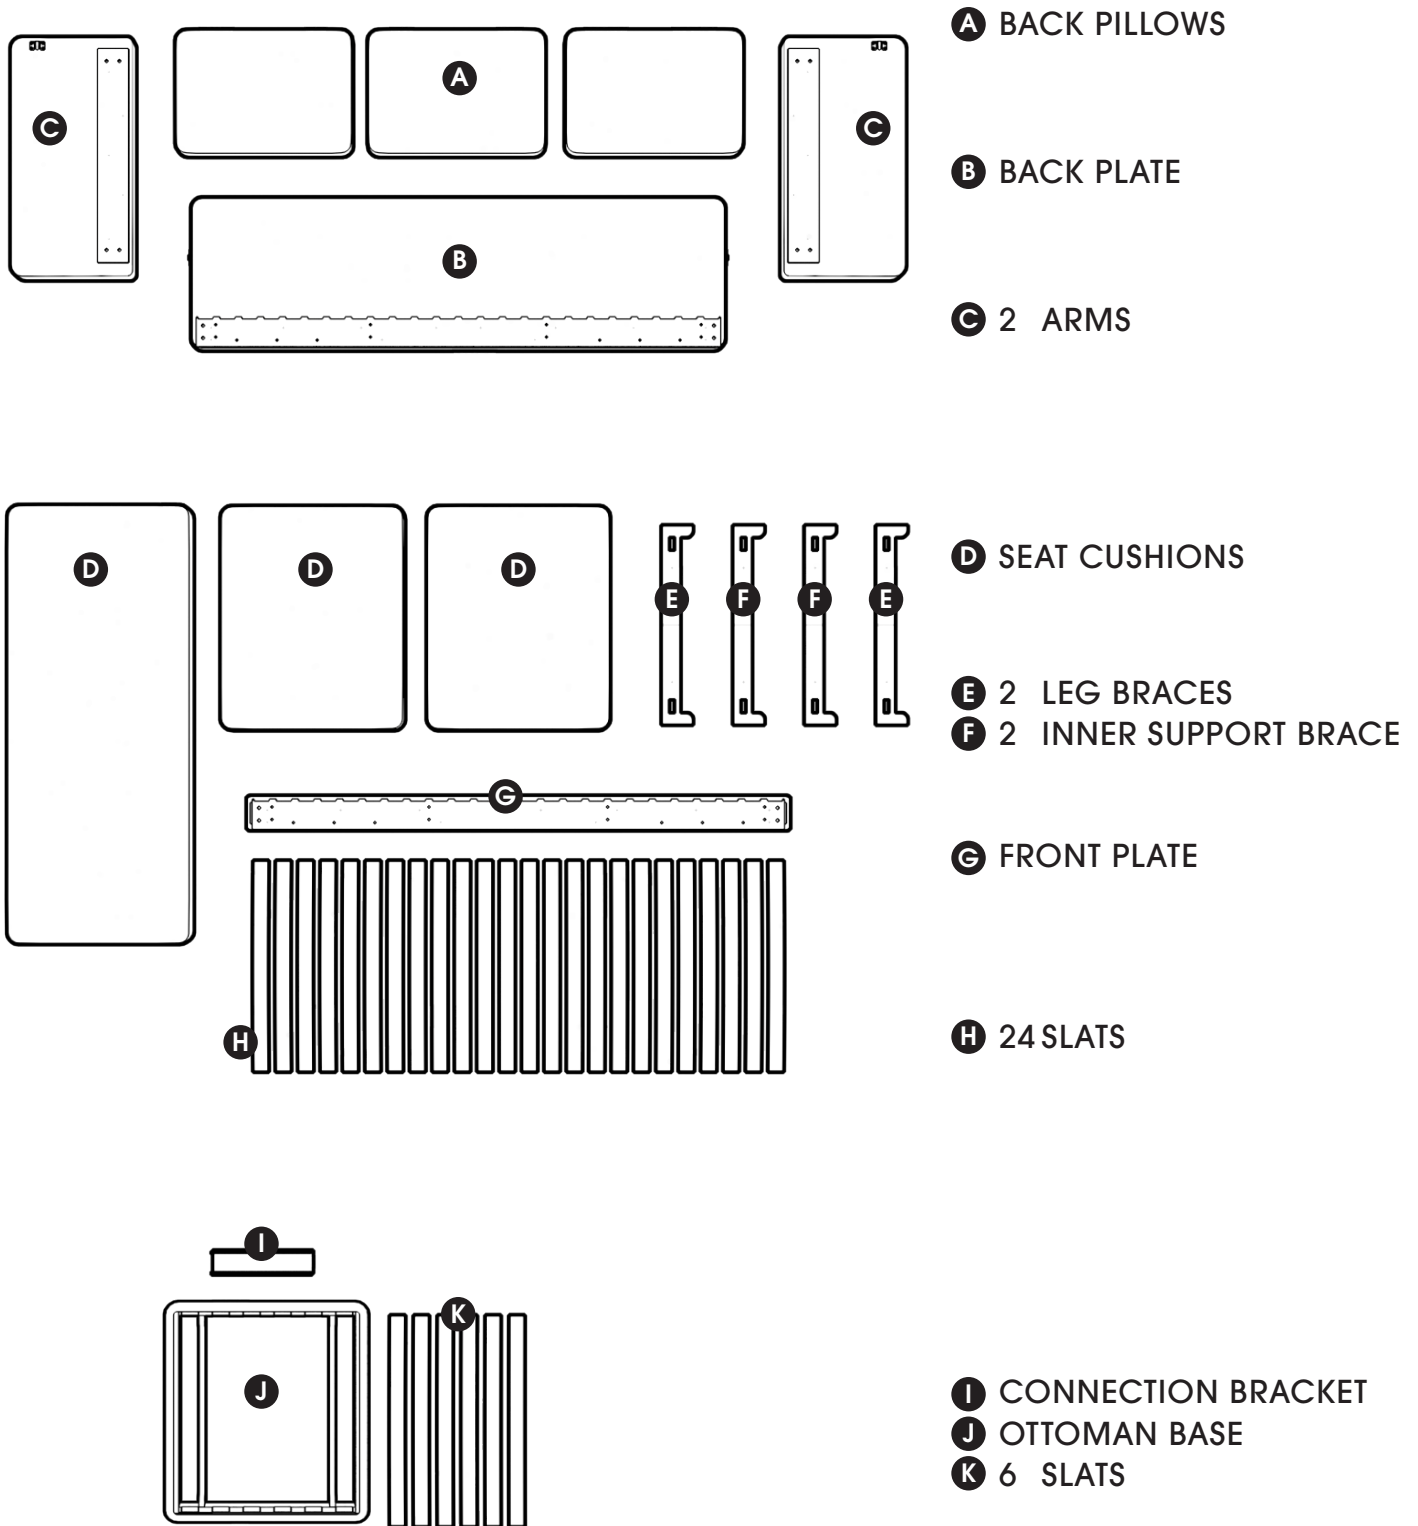


Note: Please retain all boxes until you are certain that your product isn't damaged and that you do not wish to return it. Disposal of boxes may prevent/delay our ability to resolve your request.

You should have:

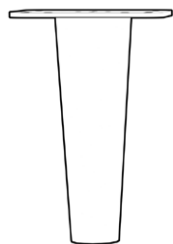

6 LEGS

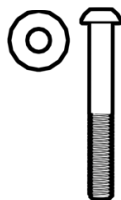


16 LONG BOLT + WASHERS



24 LEG BOLTS
(4MM HEX BIT)




6 KNOB BOLT

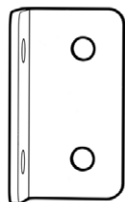


4 L-BRACKETS



16 L-BRACKET BOLTS
(5MM HEX BIT)

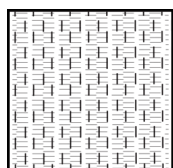

16 NEOPRENE
STICKY PADS

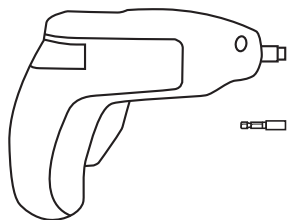


DRILL + EXTENSION
5MM HEX BIT
4MM BALL HEAD BIT

Step 1: Connect the Arms



Let's start by connecting the arms to the back panel. The process is identical for both arms.

Connect the Hooks

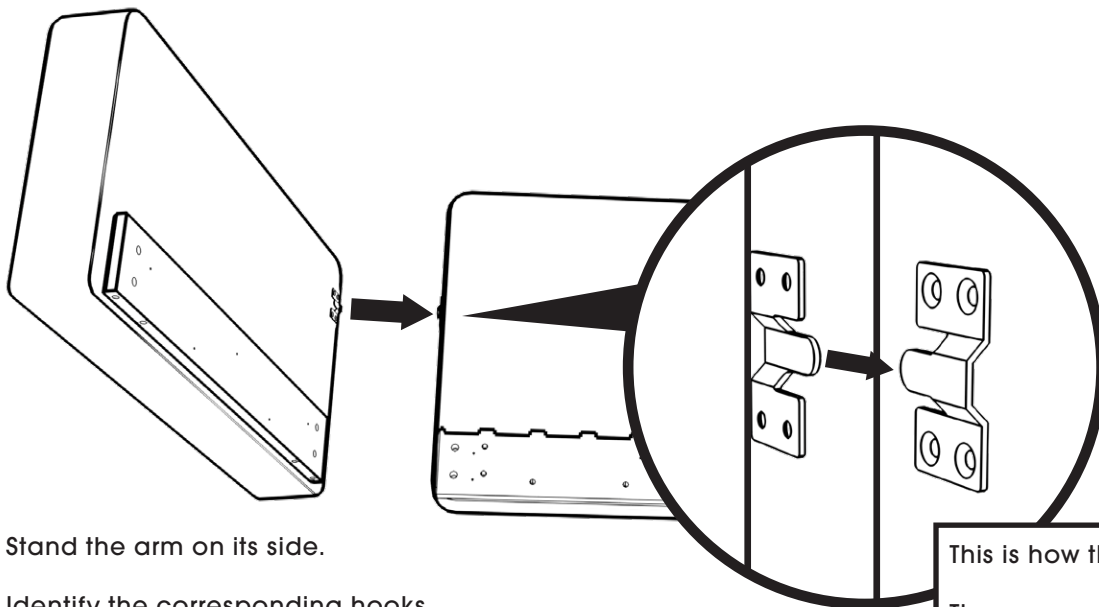


Stand the arm on its side.

Identify the corresponding hooks located on the arm and back panel.


This is how they connect.

The connection is the same for both sides

Align the arm and back panels so that the wooden frames meet at a right angle. Lean the arm slightly away from the back panel. Lift the top of the back panel and gently lower the hook until it connects. Repeat on both sides.

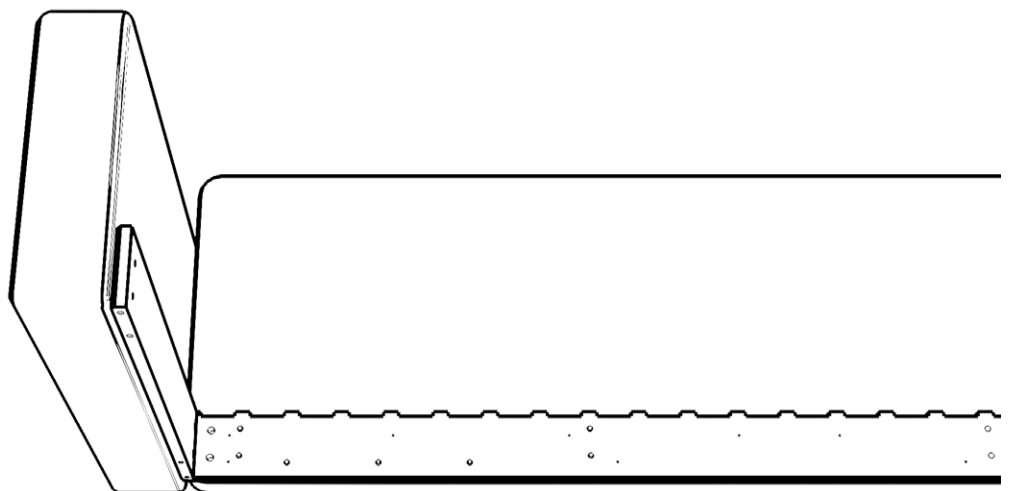


Connect the Arms (Continued)

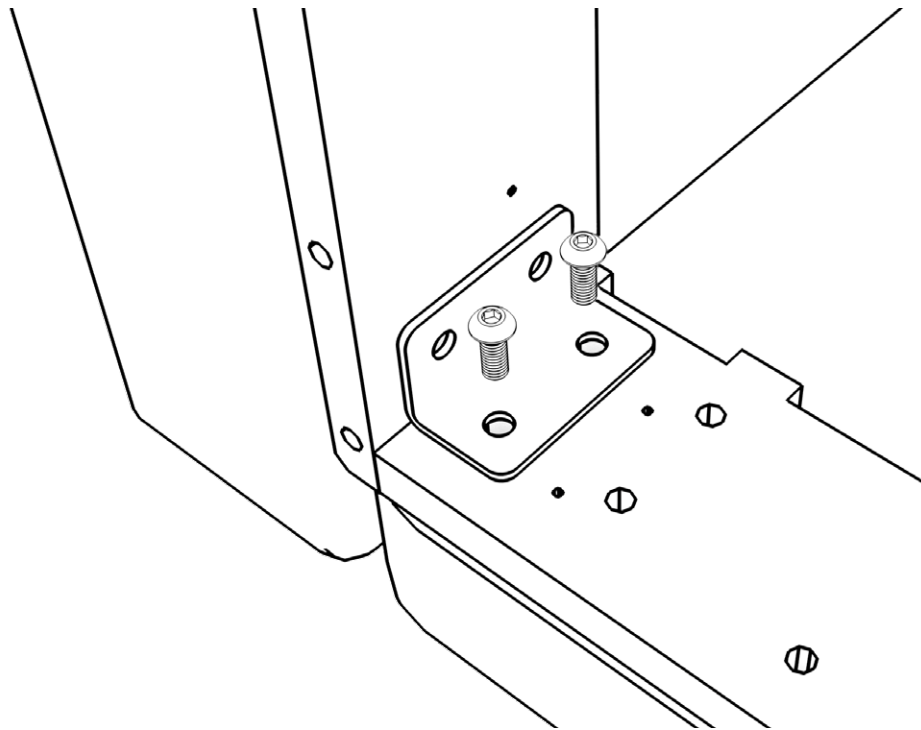


Place an L-bracket to connect the back and arm panels.

Put an L-bracket bolt in each of the two holes in the back panel. Hand tighten only.

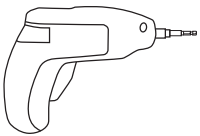


Hold the L bracket so that it sits flat on the back panel. Connect the L-bracket to the arm by hand-threading a bolt into each of the two remaining holes.

Finish securing each bolt using the 5mm hex drill bit. Repeat for the other side.



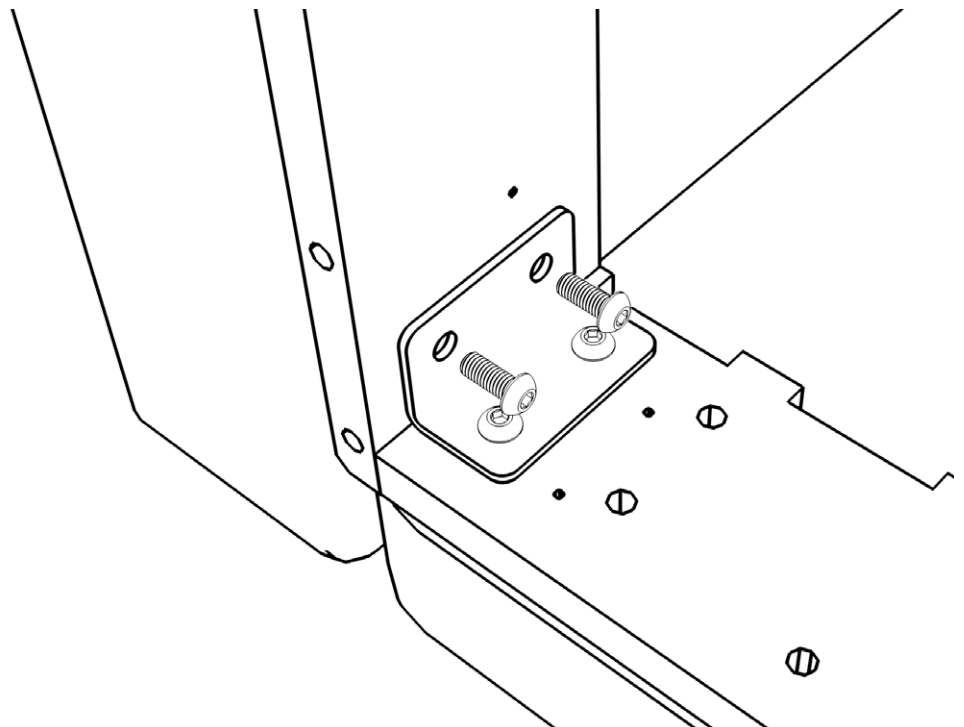


Step 2: Attach the Front Plate

You'll Need: 1 FRONT PLATE
2 L-BRACKETS
8 L-BRACKET BOLTS



In this step we'll be adding the front plate. But first let's make sure everything is ready!

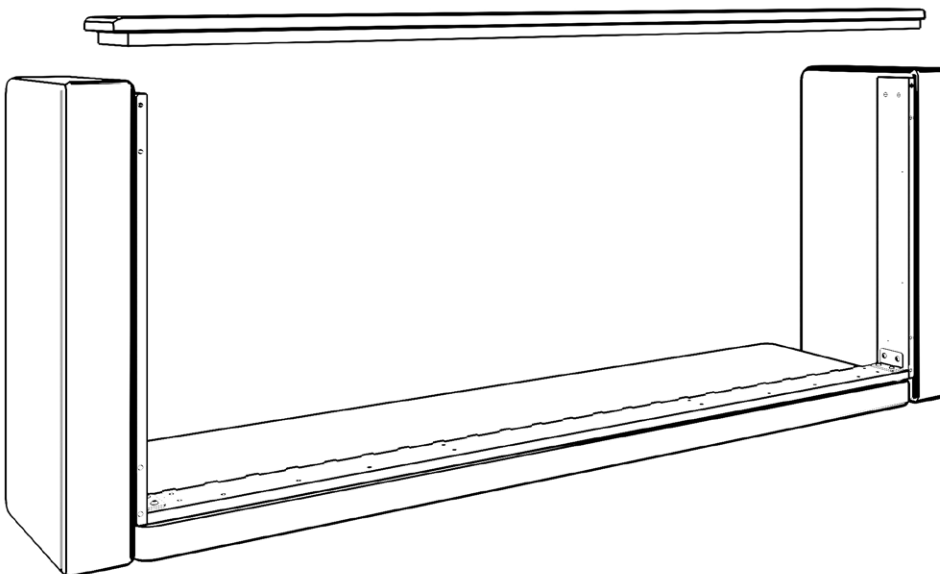

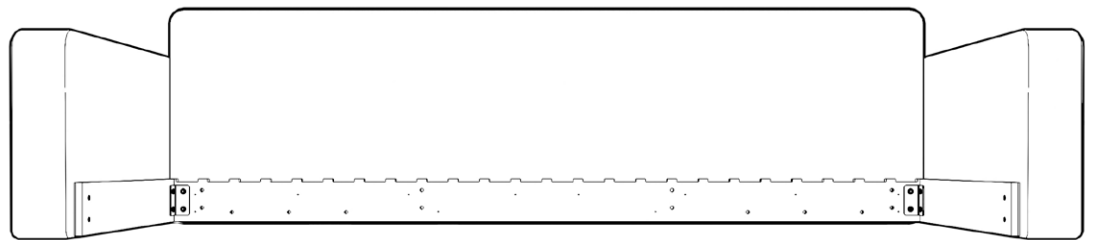


Set the front plate between the two arms as shown. Make sure that the flap of excess fabric is hanging on the inside of the frame.

This will ensure that the plate is rotated correctly.

Attach the Front Plate (Continued)

Attach an L-bracket to the front plate using 2 bolts.
Hand tighten only

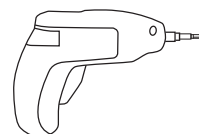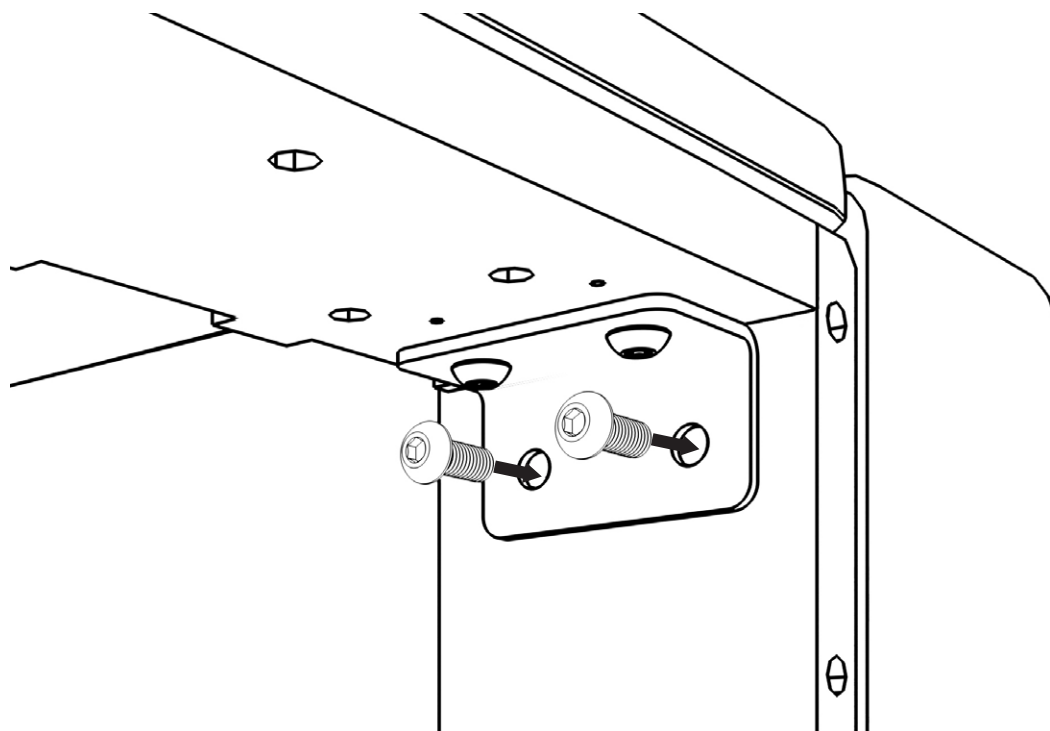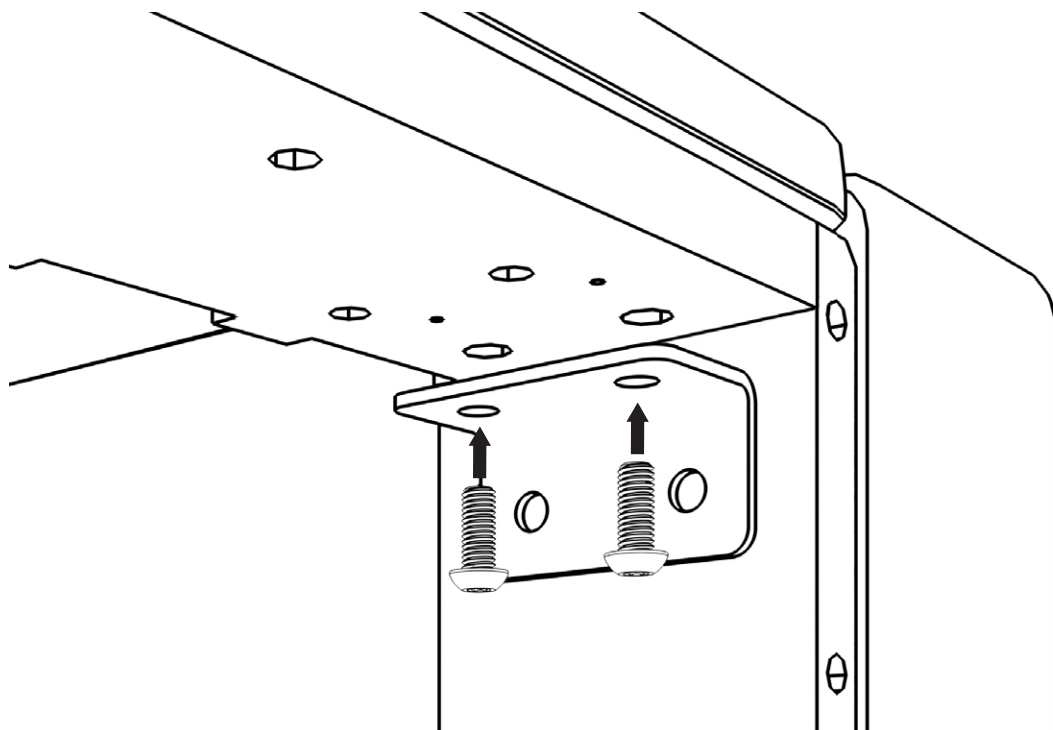


Hold the L-bracket flat against the front plate and add 2 more bolts to attach the bracket to the arm.


Use the drill to fasten each bolt until secure. Repeat on the other side.

Step 3: Install the Inner Support Brace

You'll Need: 1 INNER SUPPORT BRACE
4 LONG BOLTS + WASHERS

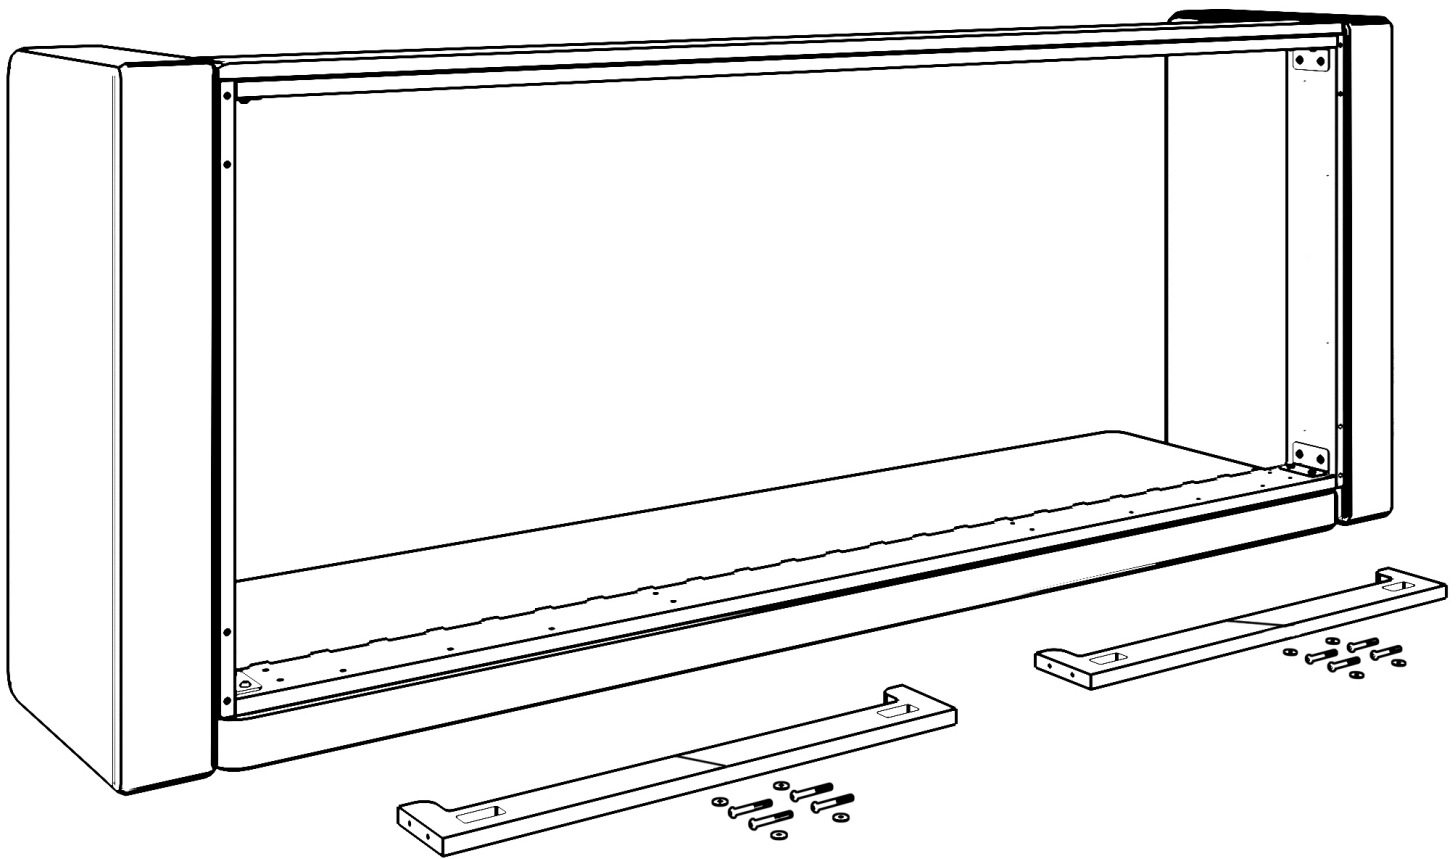

Thread the bolt and
washer together

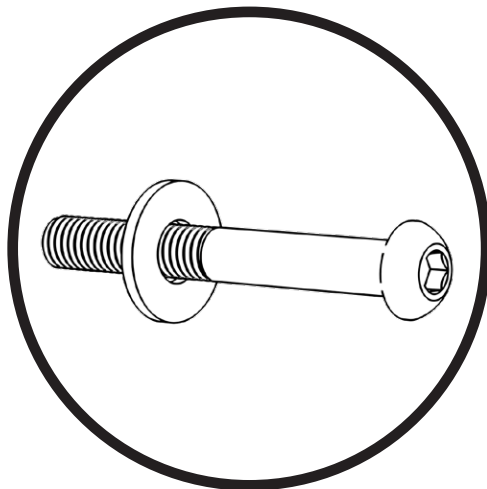

Install the Inner Support Brace (Continued)

Identify the inner support brace.

To do so, ensure that there are no holes along bottom edge of brace.

Line up the holes in the brace with the corresponding holes on the wood frame.



Make sure the edges are flush.
Place a washer over each hole
and insert a brace bolt.

Hand tighten before finishing with
the drill to make sure everything is
properly aligned.

Finish tightening the bolts using
the drill.

For the bolt inside the niche, use
the ball-head bit for easier drilling.


Repeat on the other end of
the brace.

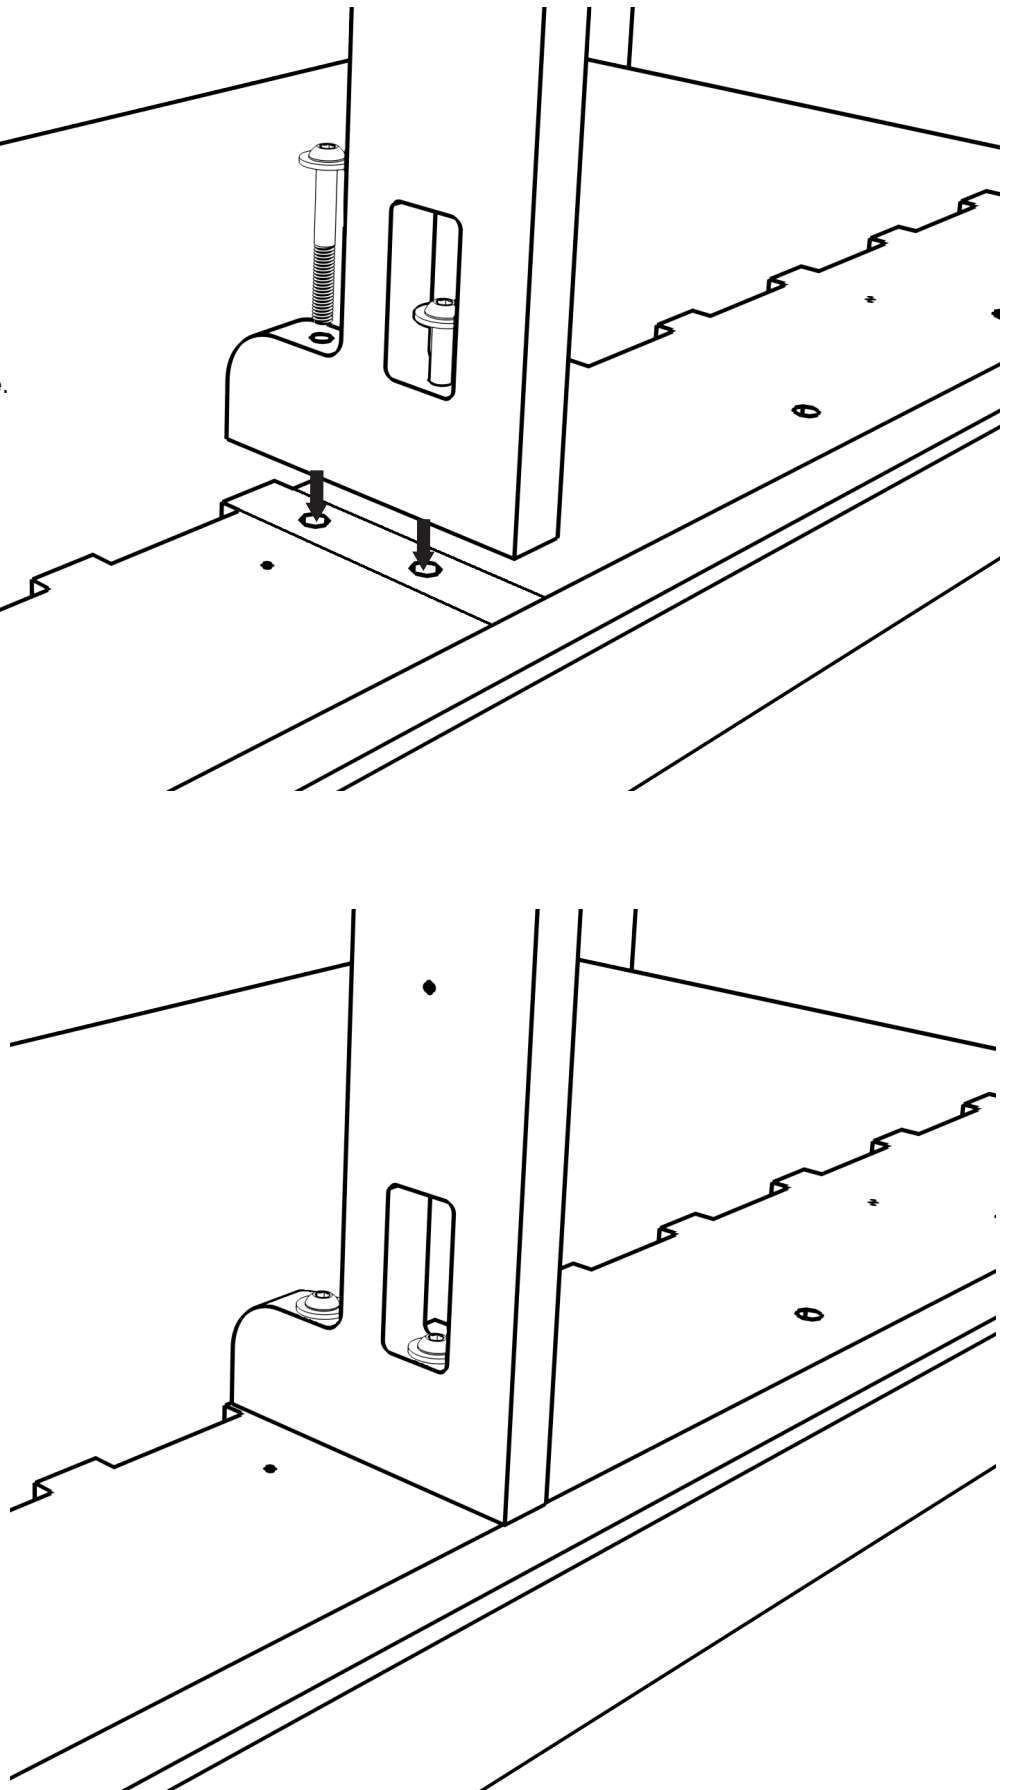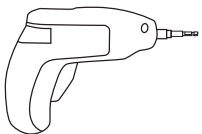


Step 4: Install the Leg Braces

You'll Need: 2 LEG BRACES

8 LONG BOLTS + WASHERS

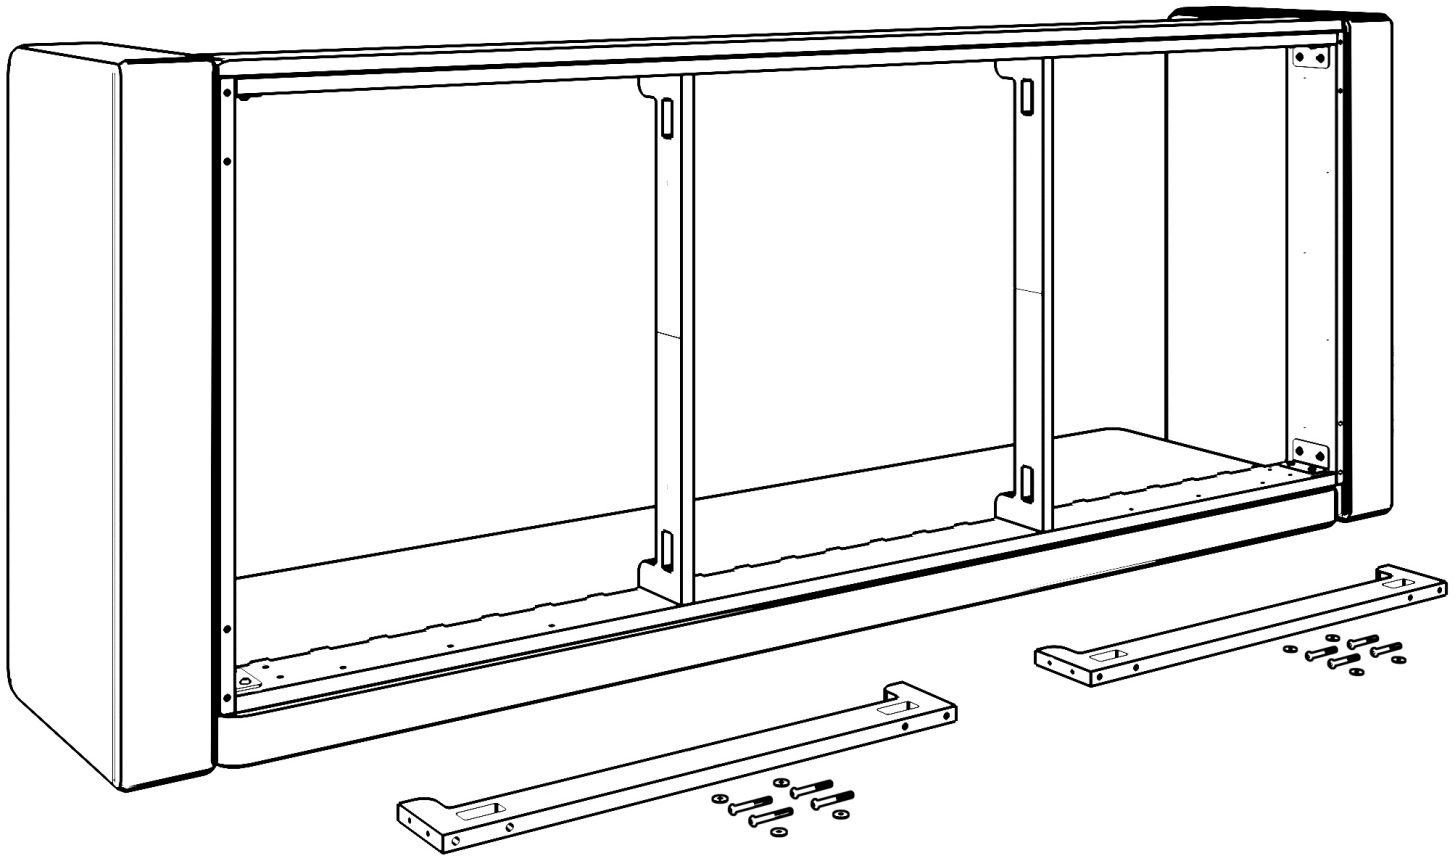

Thread the bolt and
washer together

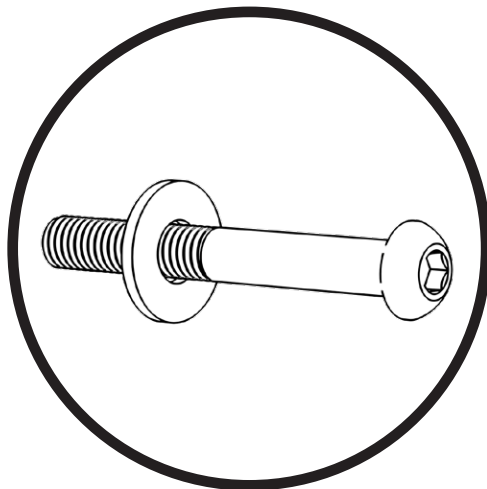


Install the Leg Braces (Continued)

Leg braces have threaded holes along the bottom edge. The legs will be mounted using these threaded holes.



Align the brace with the holes. Note the lines cut into the frame; they'll help guide the brace.

Place a washer above each hole and insert a brace bolt into each. Hand-tighten before finishing with the drill.

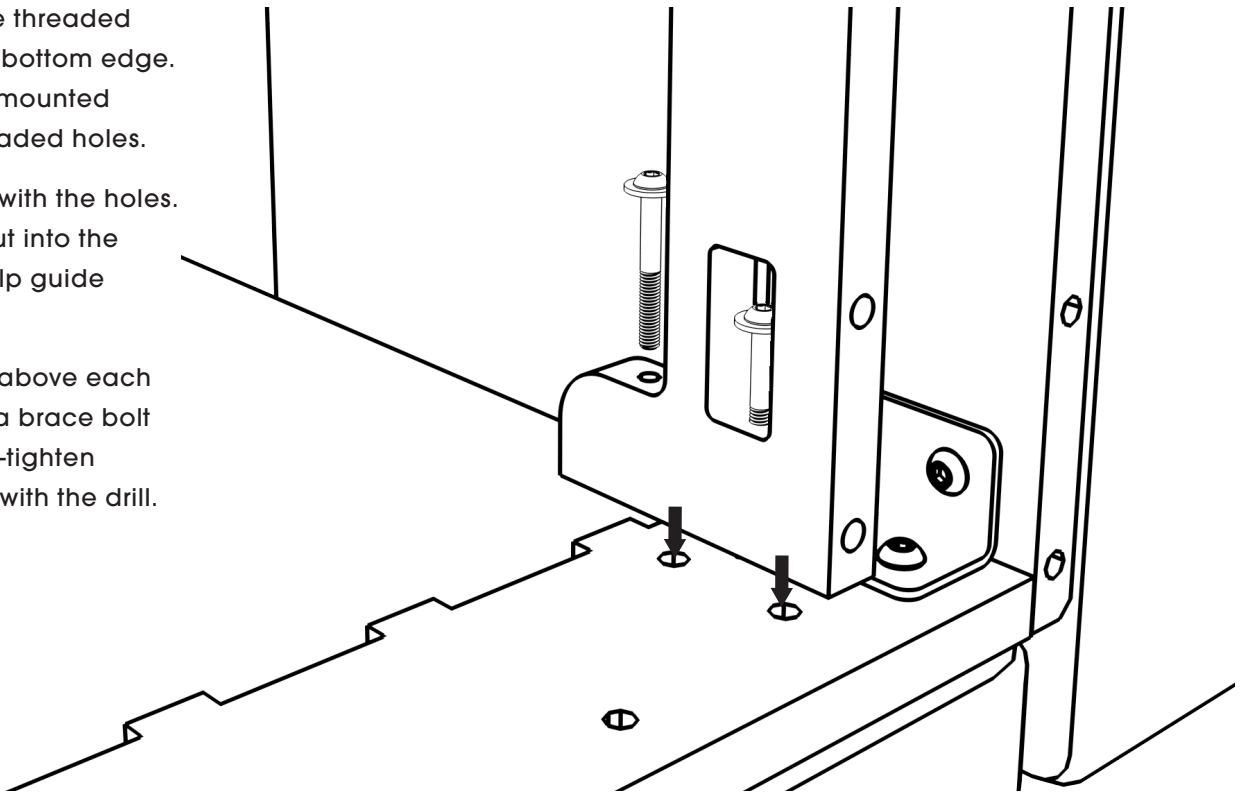

Use the drill to finish securing the brace bolts.



Repeat on the other end, as well as for the second leg brace.

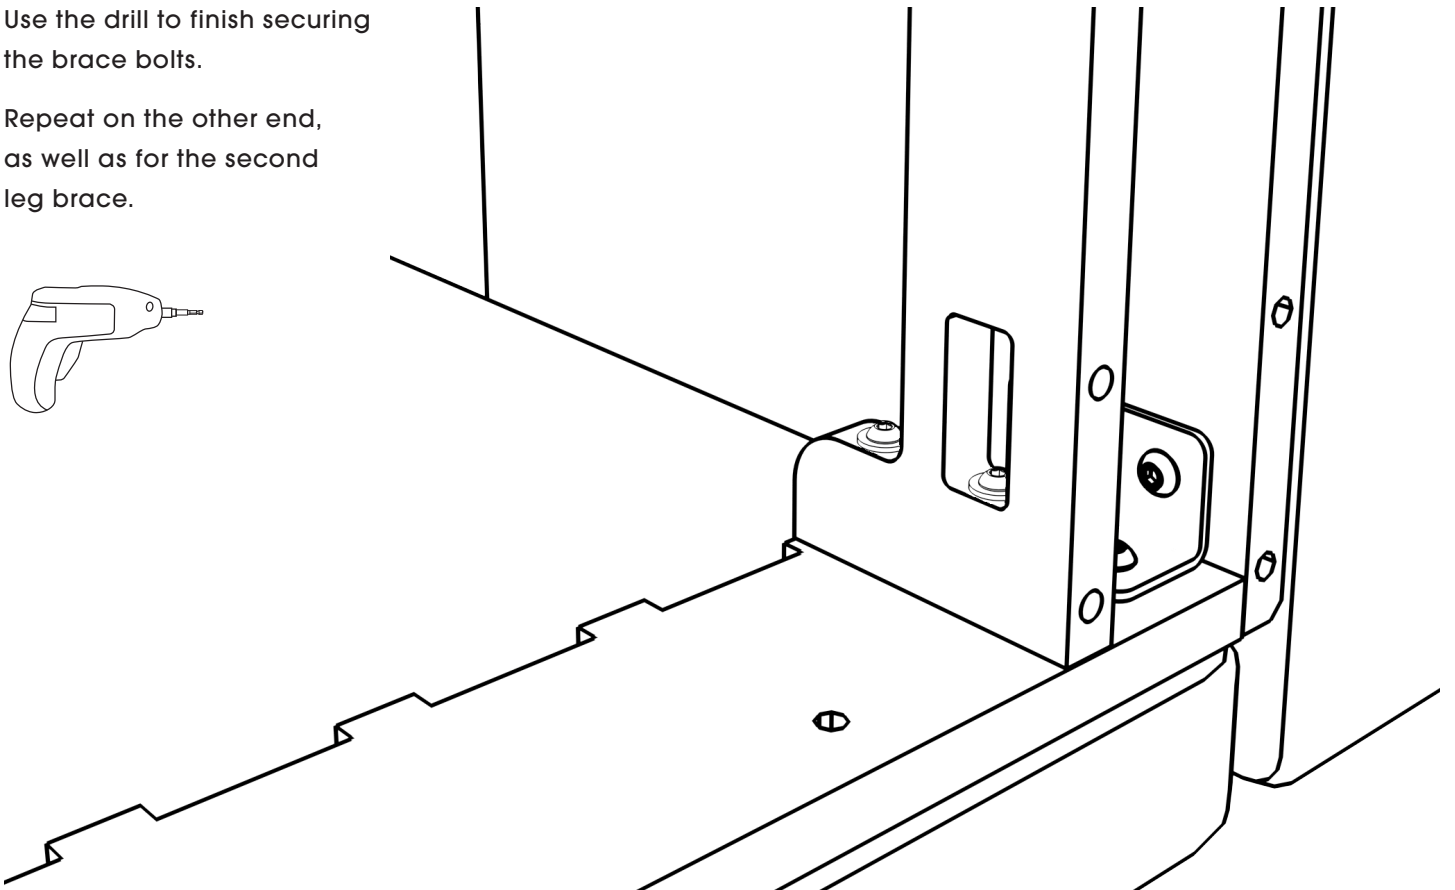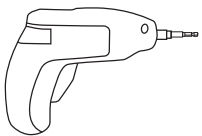

Step 5: Install the Legs (Sofa)


You'll Need: 4 LEGS
12 LEG BOLTS

Note: Our legs are universal, and are used across multiple products. All sofa and ottoman legs will attach securely with 3 fasteners per leg.

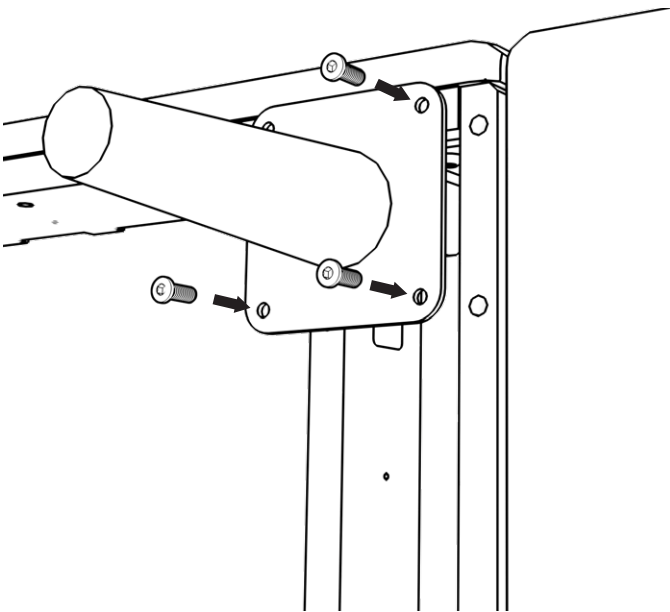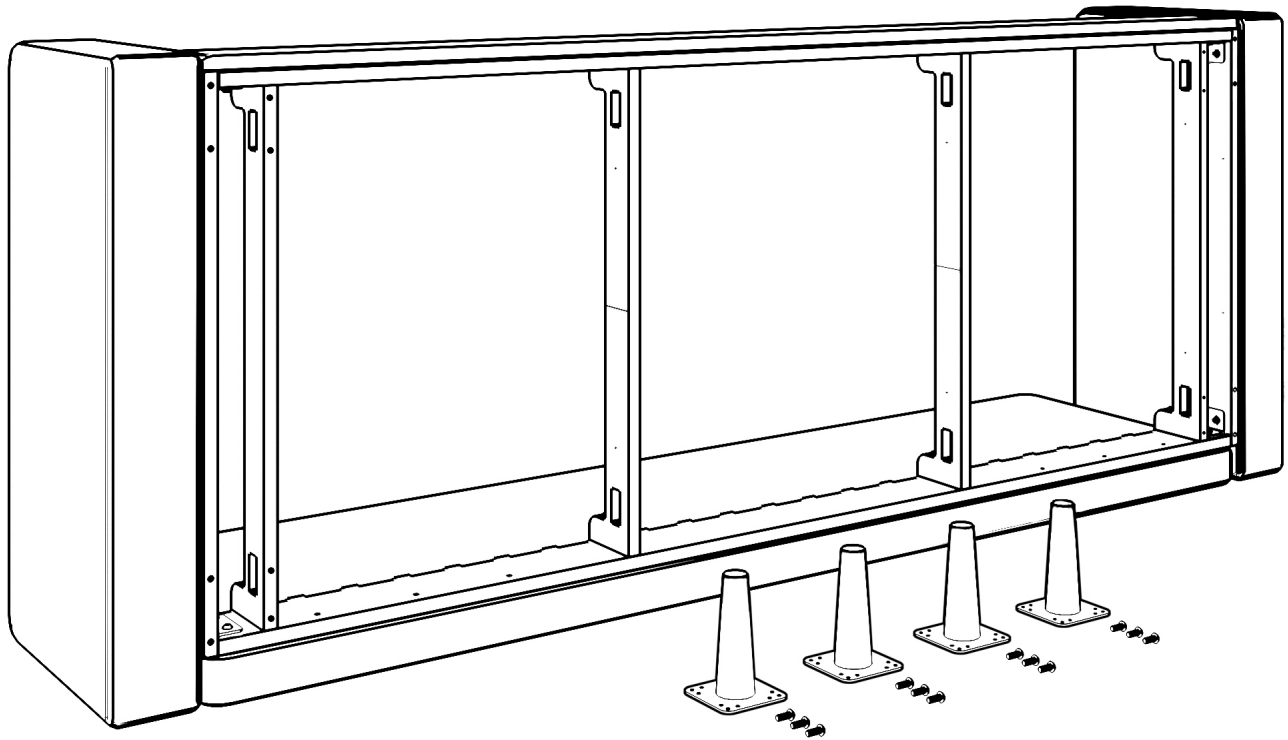


Start by aligning the leg over the mounting holes. Insert bolts into corresponding threaded holes as shown and tighten by hand.

Note: if you have flared legs, make sure that each leg points outward toward its respective corner.

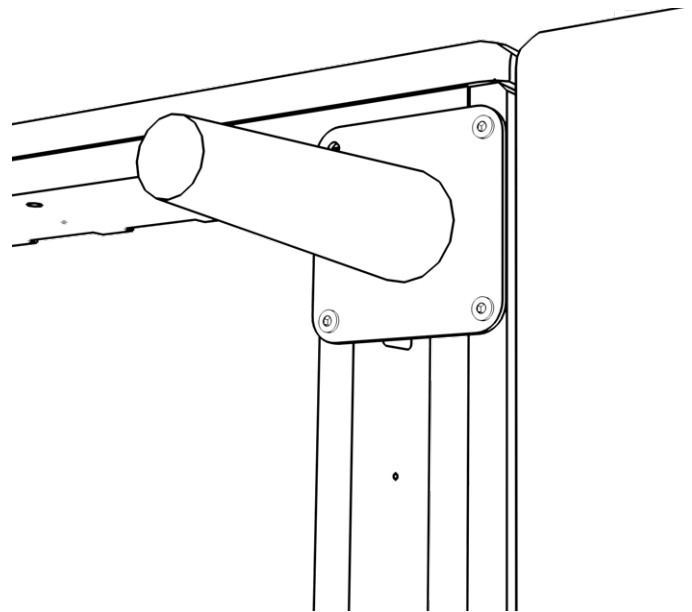

Once each bolt is started by hand, use the drill to finish securing the leg.



Repeat for all four legs.



Step 6: Install the Legs (Ottoman)

You'll Need: 2 LEGS


6 LEG BOLTS

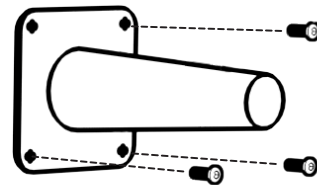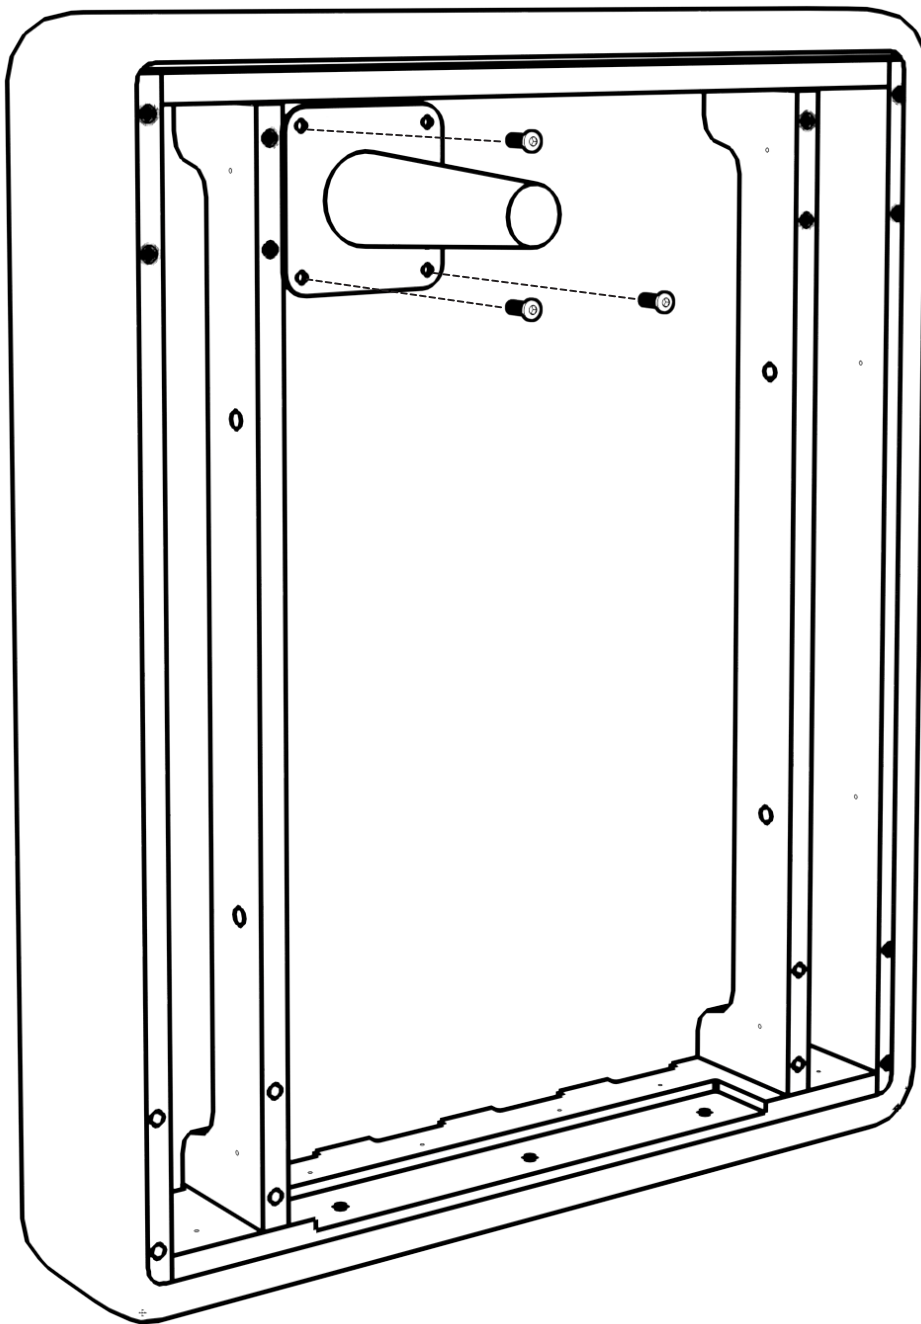

Install the 2 legs needed for the ottoman section. These will be installed at the front of the ottoman base. The rear of the base will be secured by a bracket in the next step.

Follow the same instructions as the previous step for both legs.



Step 7: Attach Sectional Bracket

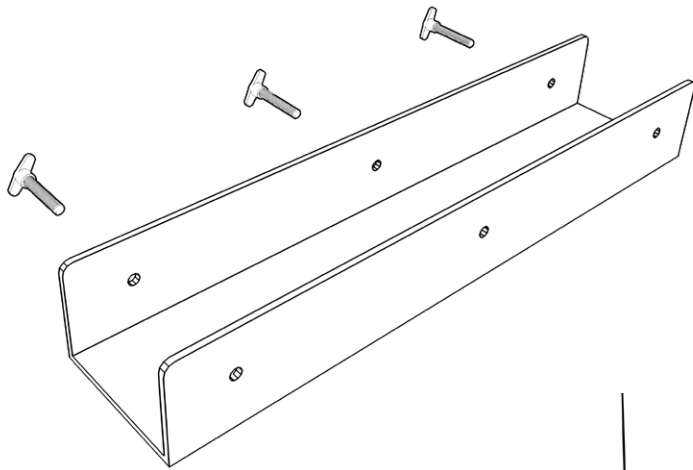

Begin by selecting which side of the Sofette you would like the sectional cushion to be on. Don't worry, you can change sides at anytime.



Taking the sectional connection bracket, locate the 3 holes on the back of the Sofette front plate on the side you selected and slide the bracket up onto the front plate. Align the holes of the bracket with the holes on the front plate and use 3 of the knob bolts to secure the bracket to the Sofette.

Next, slide the rear of the ottoman's wood base over the exposed metal connection bracket and align the holes. Use the remaining knob bolts to secure the ottoman base to the Sofa. You may need to apply some force when pushing the wood into the metal bracket.

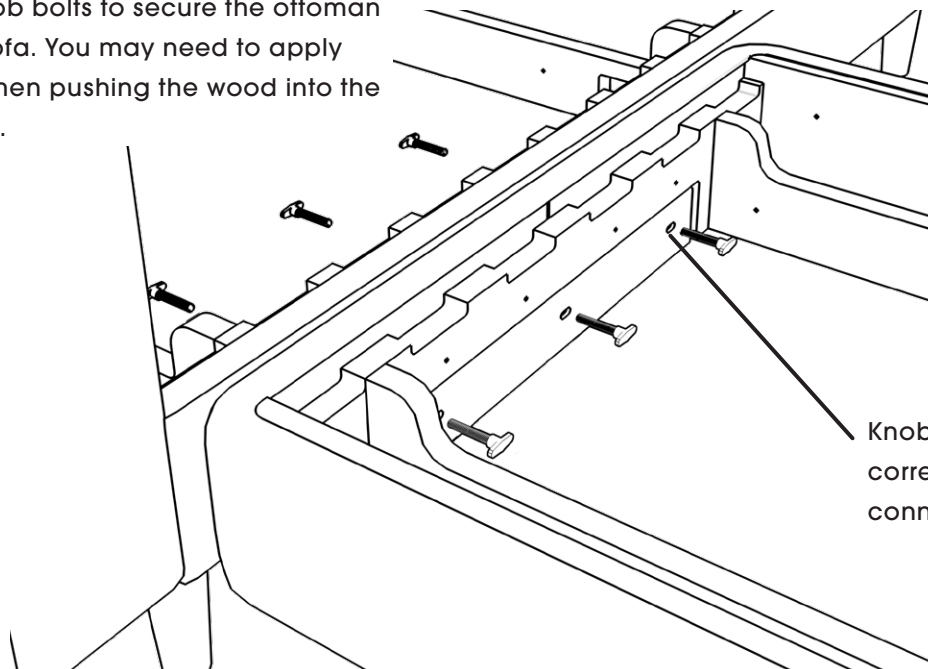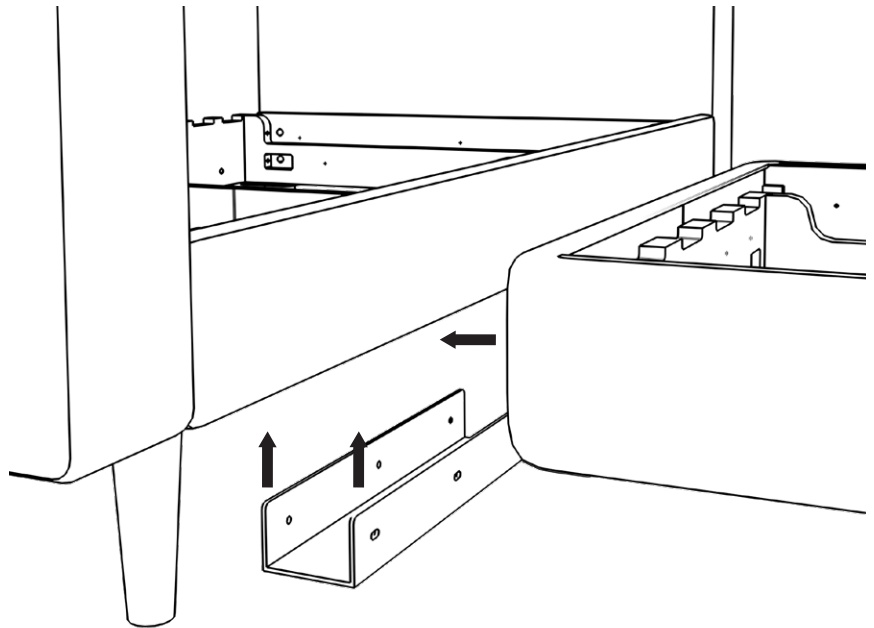

Knob bolts line up with corresponding holes in the connection bracket and frame.


Step 8: Add the Neoprene Pads

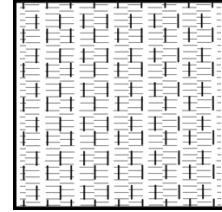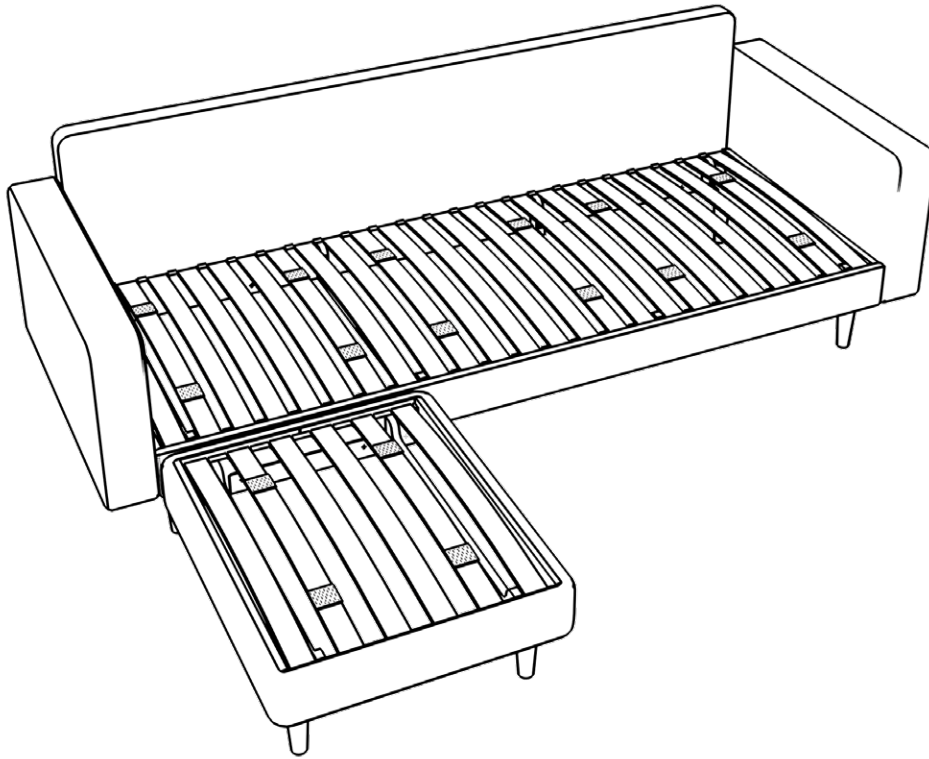

To keep the cushions from sliding add the non-slip neoprene pads.


2 pads will be stuck onto a slat.
Only 6 of the slats of the sofette,
and only 2 of the slats of the
ottoman will need pads.

Please see diagram for correct
placement.

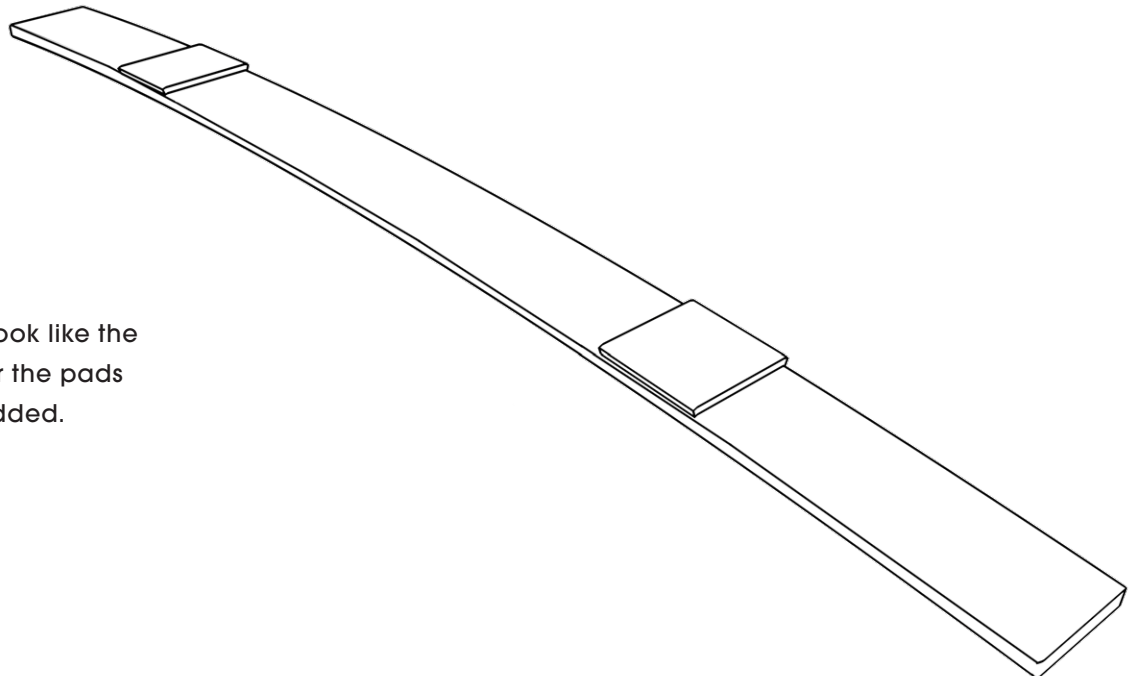


Slats should look like the
diagram after the pads
have been added.

Step 9: Place the Slats

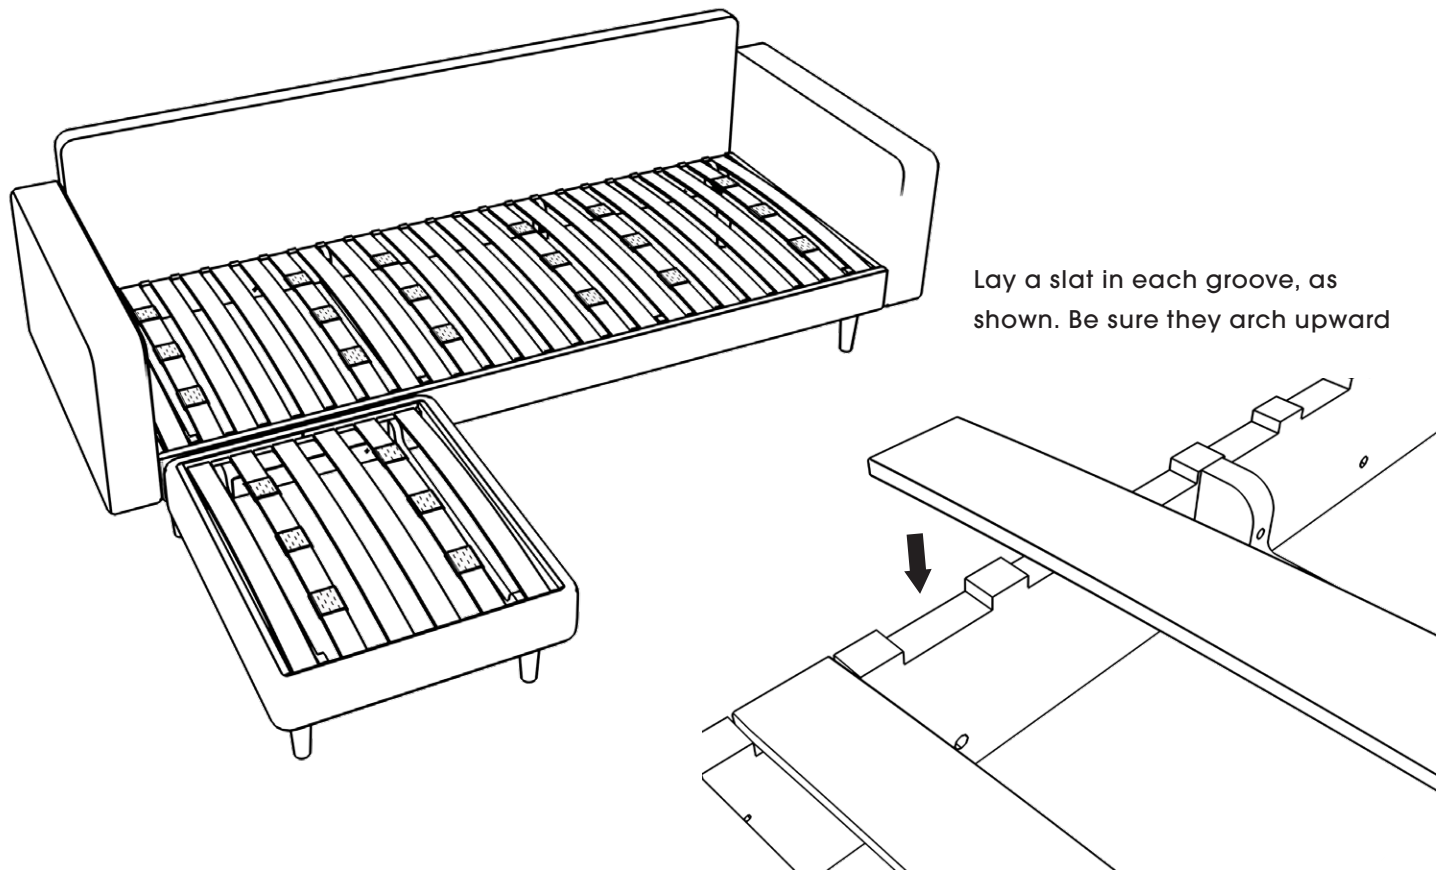

Step 10: Add the Cushions

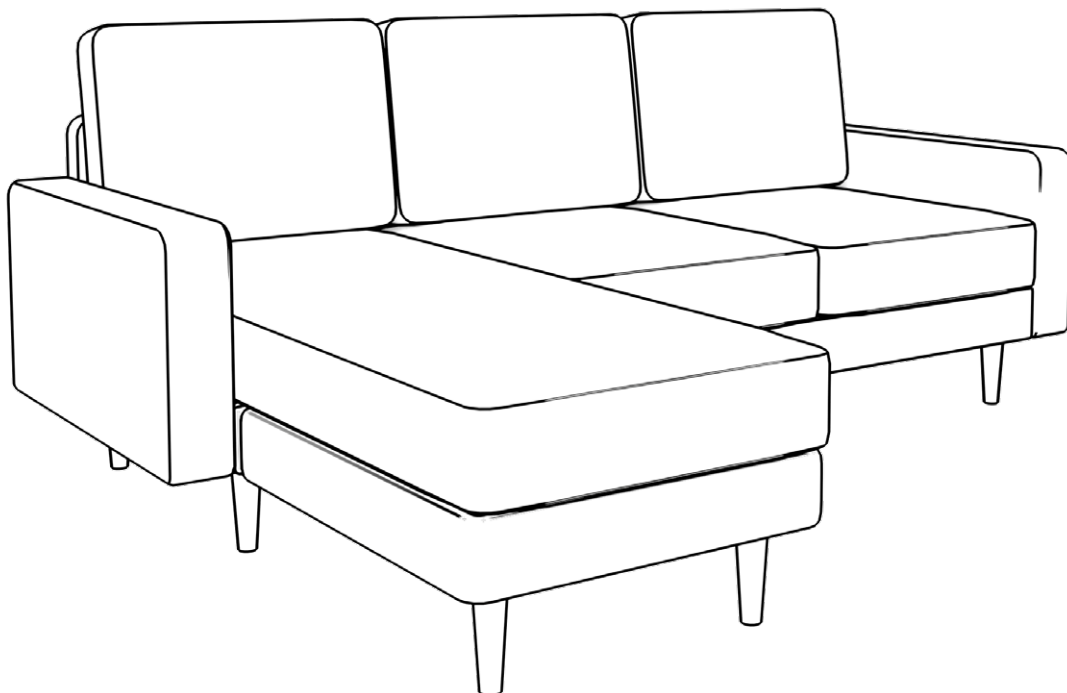

DONE!