


HydroRail® Bath/Shower Columns

Customizing your space with a sidebar and handshower has never been easier.

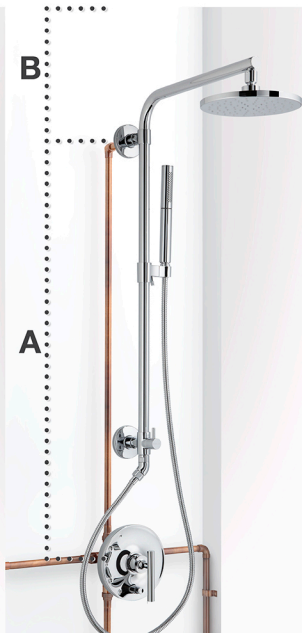

Simple

Converts any basic showerhead into a two-outlet shower with handshower.

Quick

No need to alter or access your in-wall plumbing; install from right outside your shower wall.

Convenient

Get a custom shower without a full remodel.

Ensure you're getting the right HydroRail for your space.

STEP 1: Measure the distance from existing showerarm to valve. (Fig. A)

STEP 2: Measure the distance from existing showerarm to ceiling. (Fig. B)

Shower Install

	-H Shower Column K-45904	-S Shower Column K-45906	-R Arch Shower Column K-45211	-R Beam Shower Column K-45212
If A is 24"-33" and				
B is less than 4"	•			
B is 4"-8"	•			•
B is 8"-10"	•	•		•
B is 10" or greater	•	•	•	•

Bath/Shower Install

	-H Bath/Shower Column K-45903	-S Bath/Shower Column K-45905	-R Arch Bath/Shower Column K-45209	-R Beam Bath/Shower Column K-45210
If A is more than 33" and				
B is less than 4"	•			
B is 4"-8"	•			•
B is 8"-10"	•	•		•
B is 10" or greater	•	•	•	•

* For reference only, please utilize install guides for full instructions.

THE BOLD LOOK
OF **KOHLER®**