



ASSEMBLY INSTRUCTIONS


LOFT

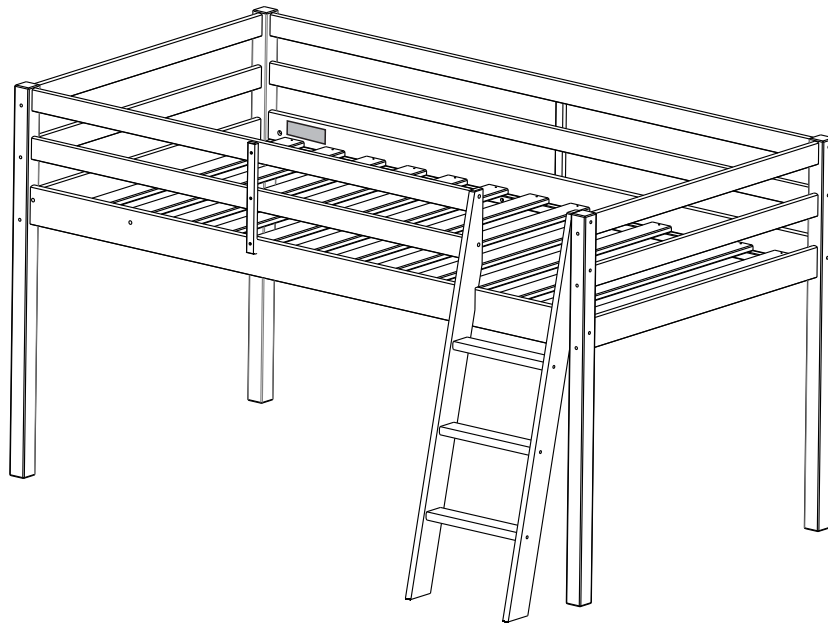

OPTION 1

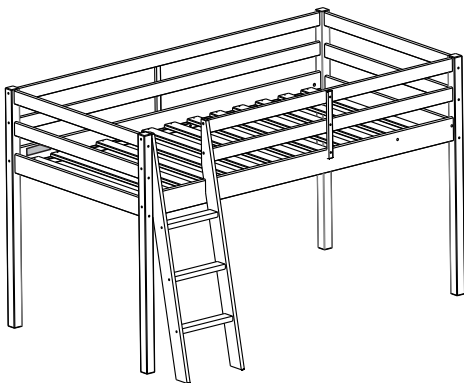


OPTION 2

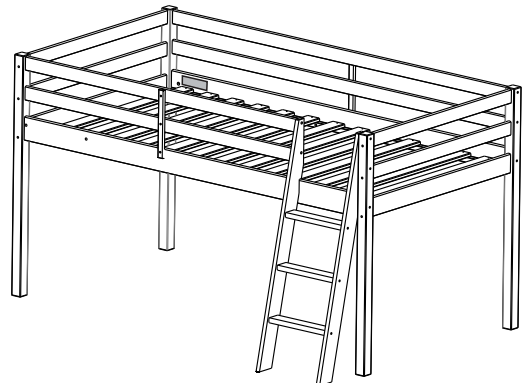


REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.

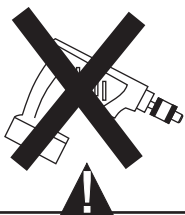


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

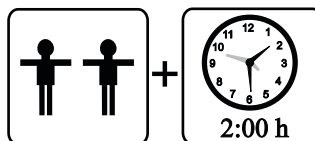


2:00 h

Tools Required






(Not included)












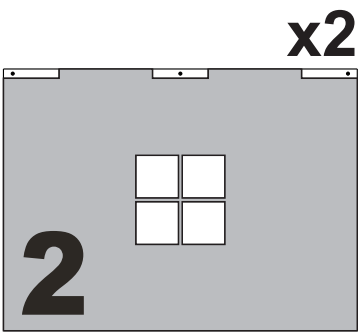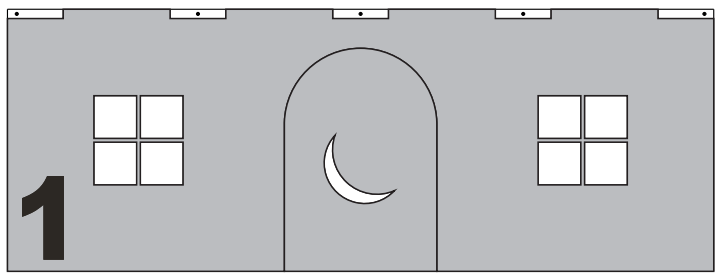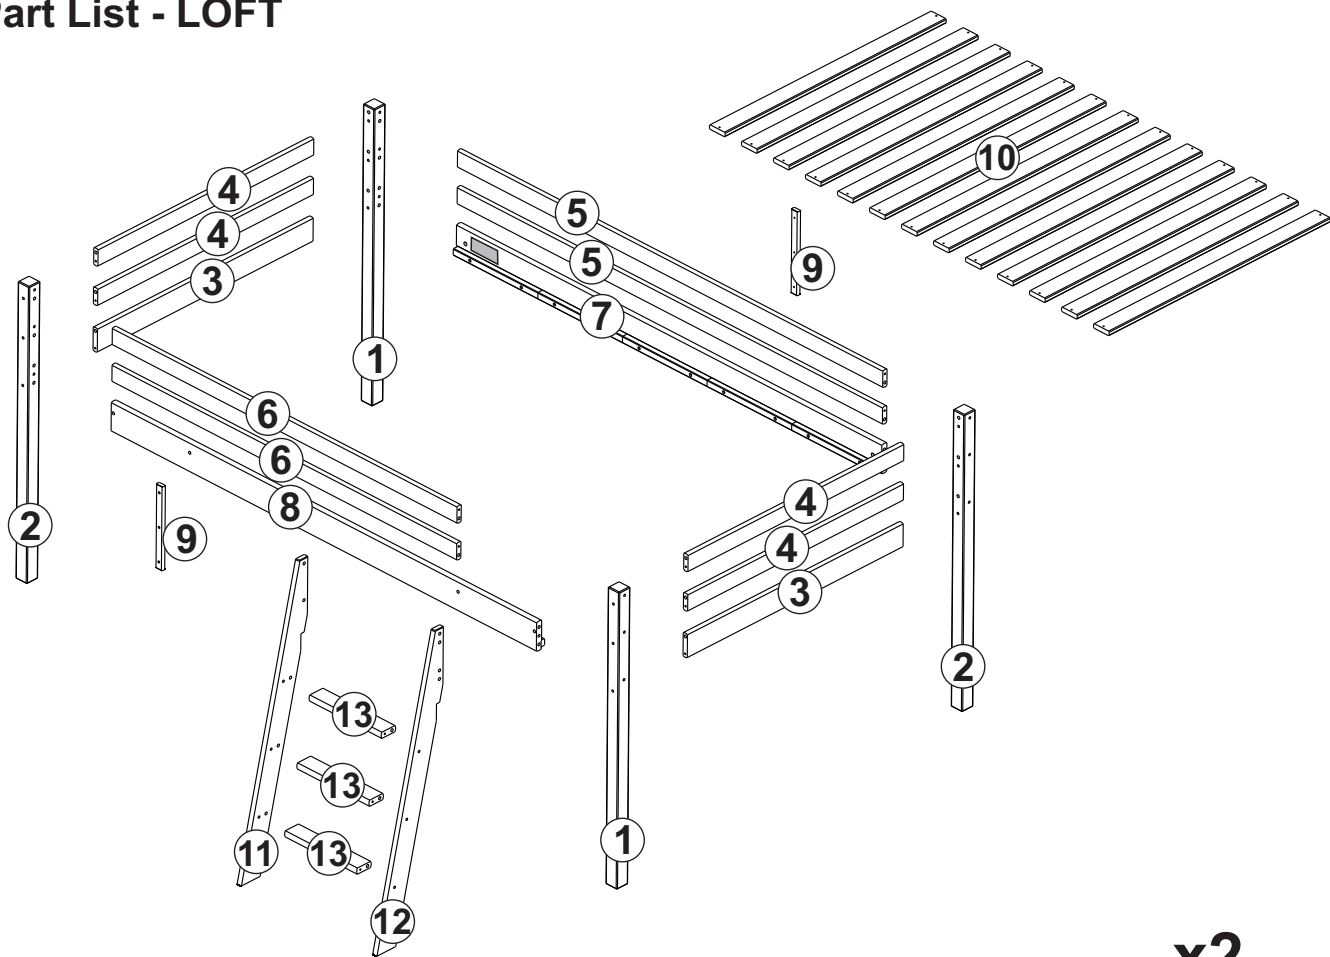

(Not included)

Part List - LOFT



Identifying the Hardware-Identify the hardware using the illustrations below.

A  04 1/4 x 100 x 17mm	B  18 7 x 90 x 17mm	C  06 4.0 X 30
D  10 7 x 60 x 17mm	E  04 1/4	F  34 10X40
G  02	H  26 4,0 x 35	I  02
K  11 3,5 x 16	L  01	

01

F




10X40

34


L



01




(Not included)

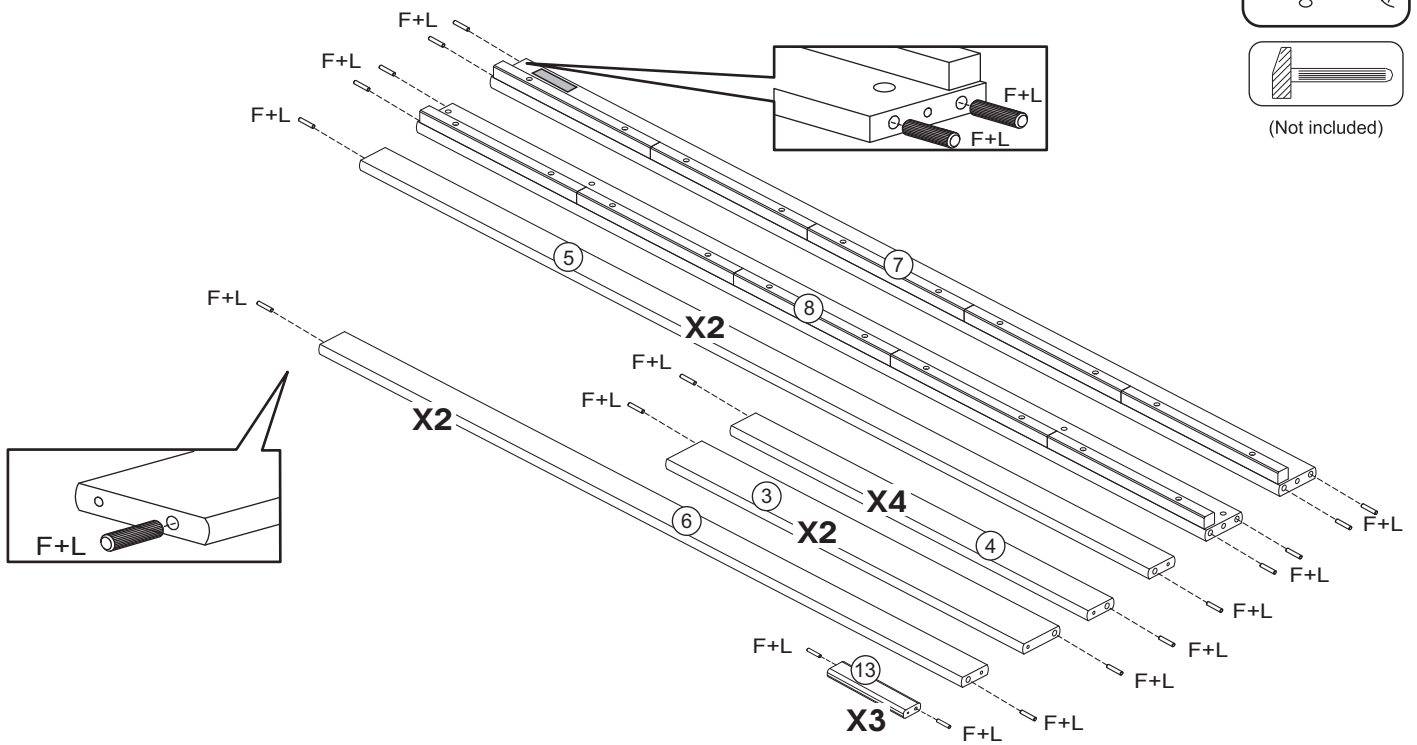

02


B




7 x 90 x 17mm

12

I



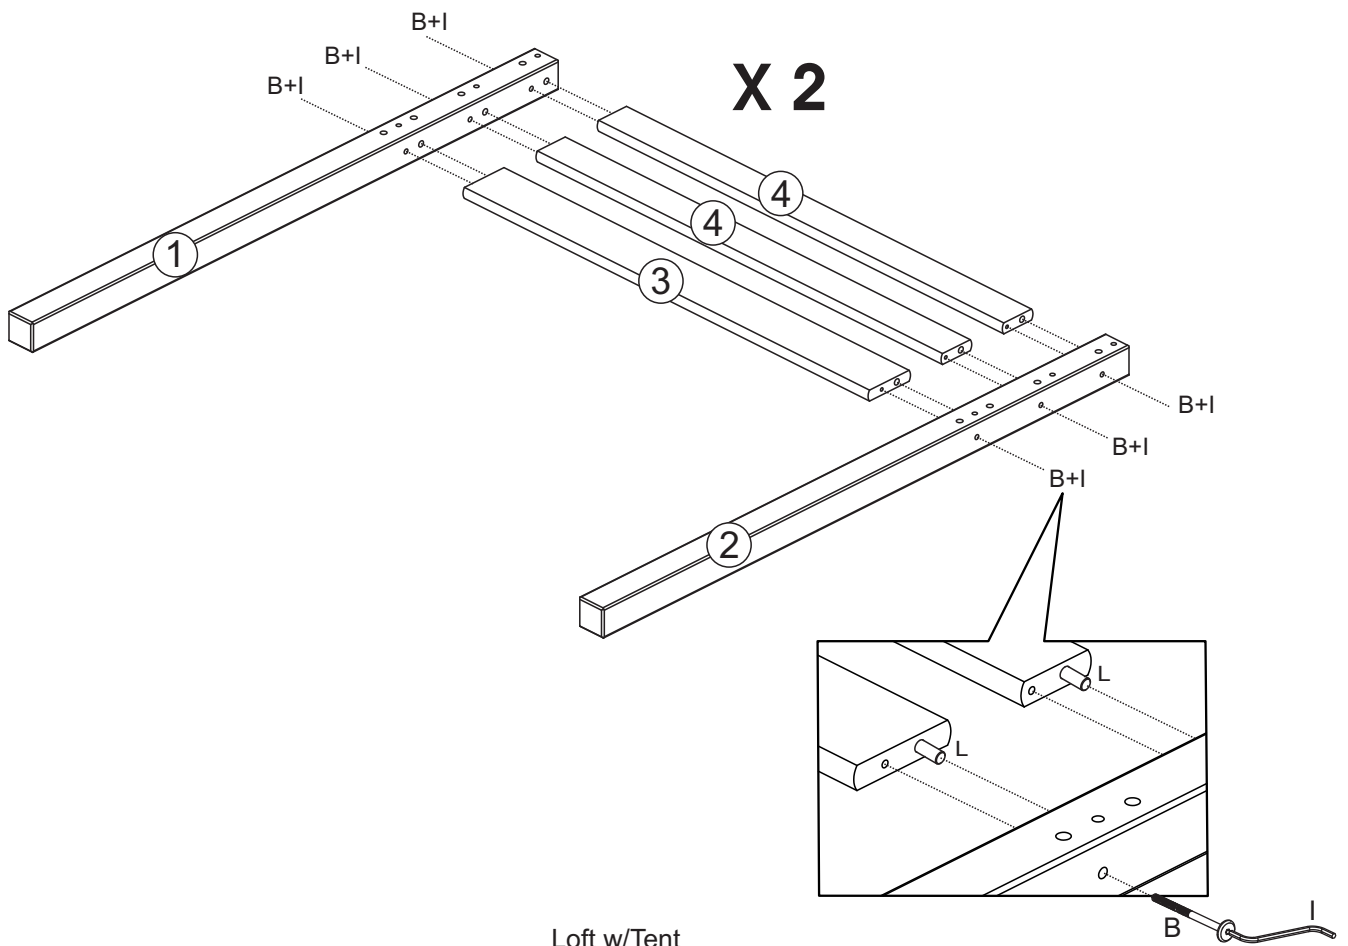

01




Loft w/Tent





03

A  **04**
1/4 x 100 x 17mm


B  **04**
7 x 90 x 17mm


E  **04**
1/4



I  **01**

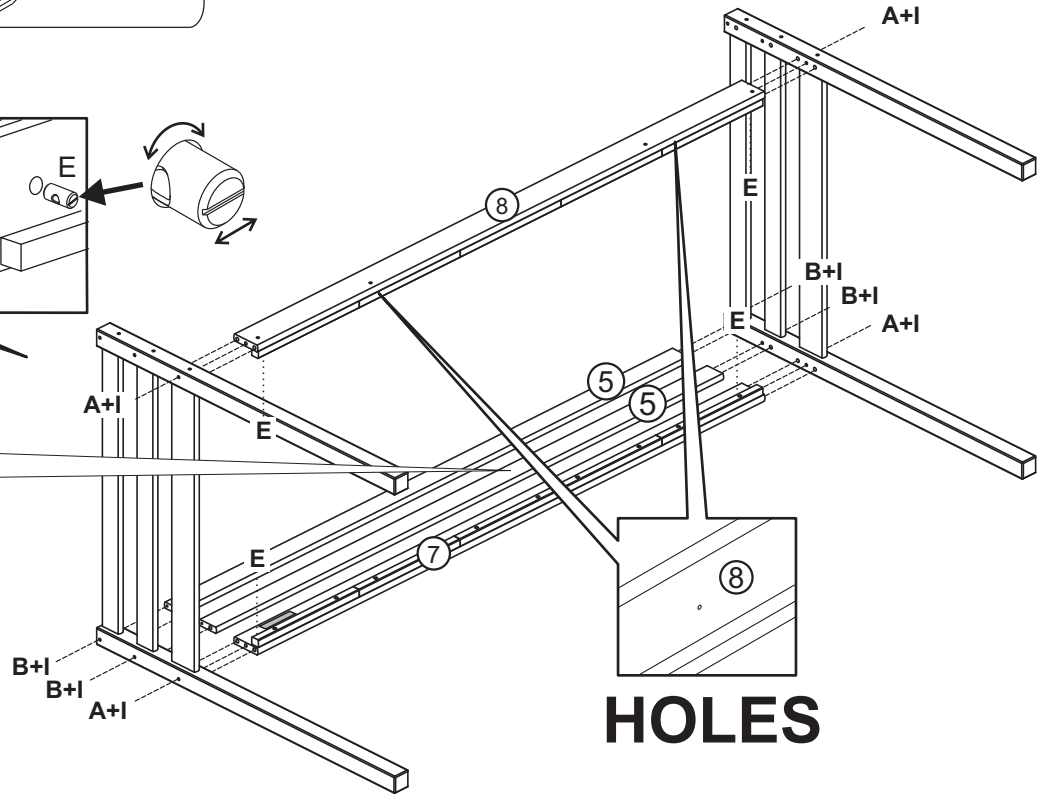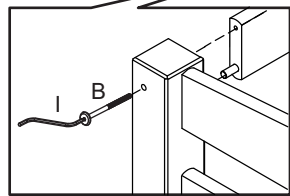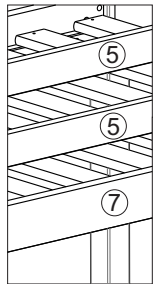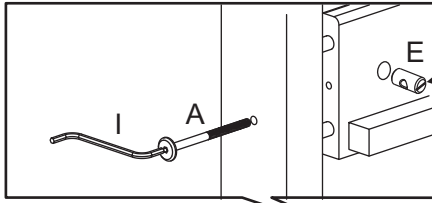

04


D  **06**
7 x 60 x 17mm

I  **01**

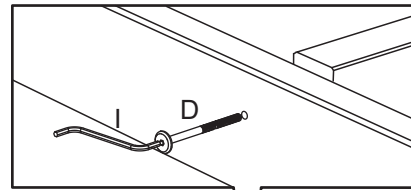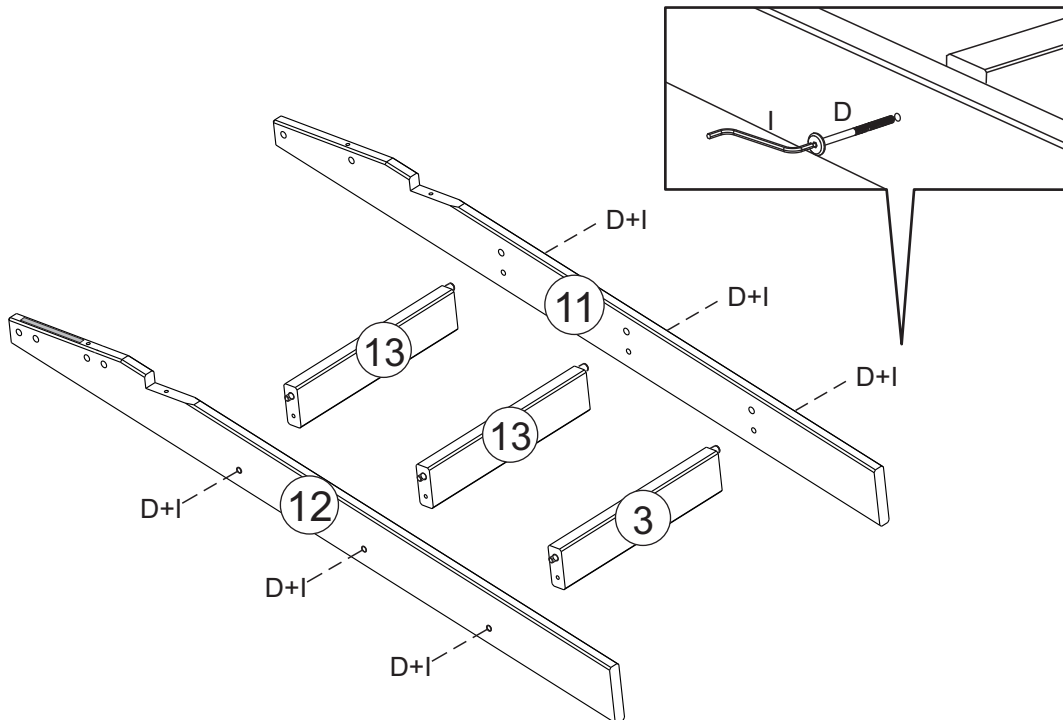



05

K




3,5 x 16

06

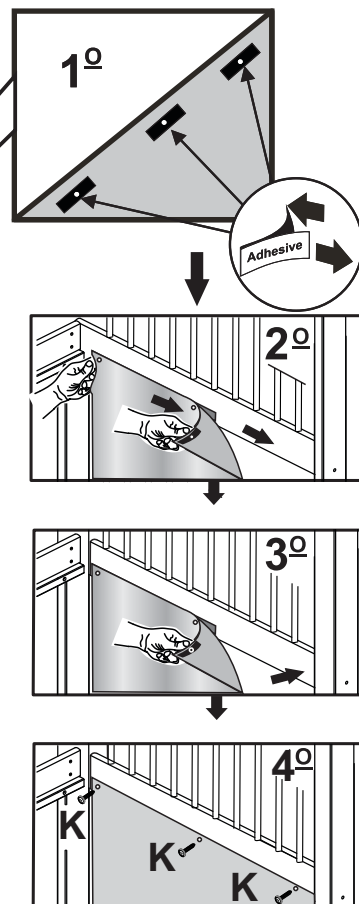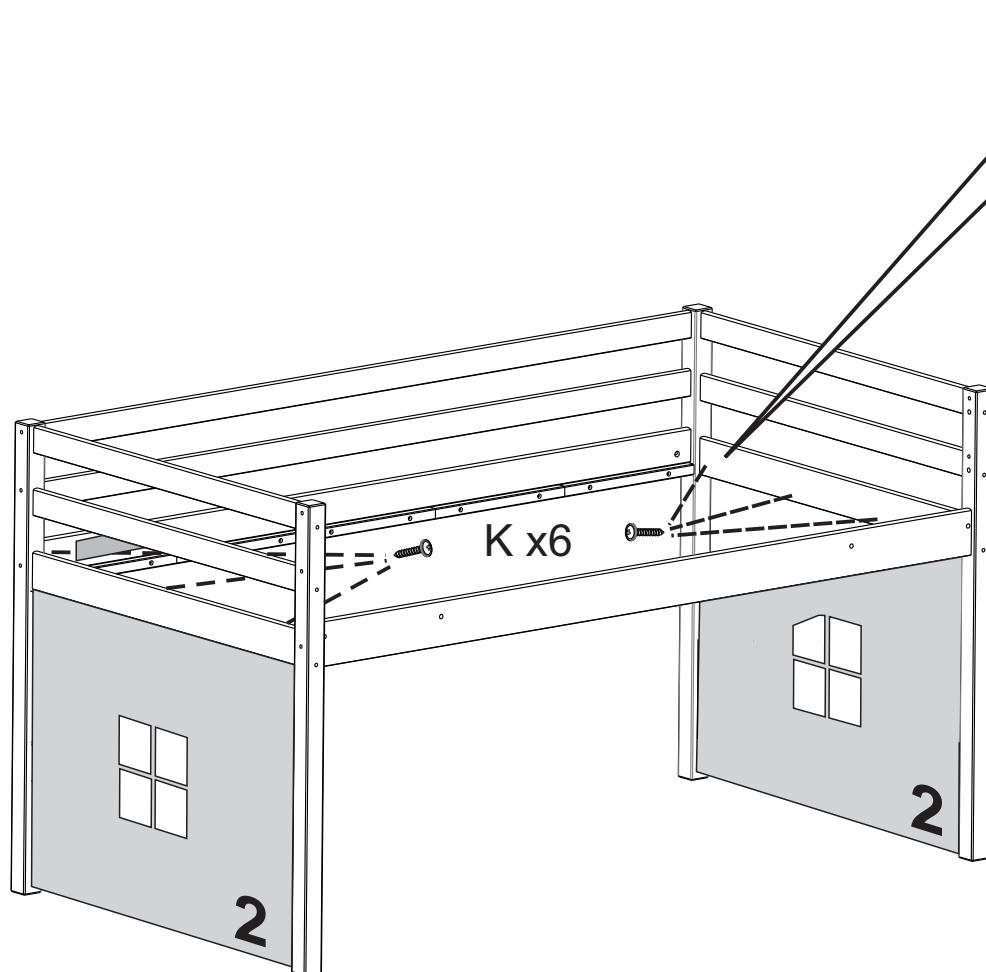


ATTENTION

Please remove the fine paper glued (Adhesived) on the velcro applied on the **Tent**. After this step, hold tight the **Tent** on both ends to fix on the crossbars on instructions.






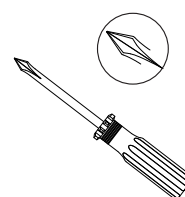


06

K



05

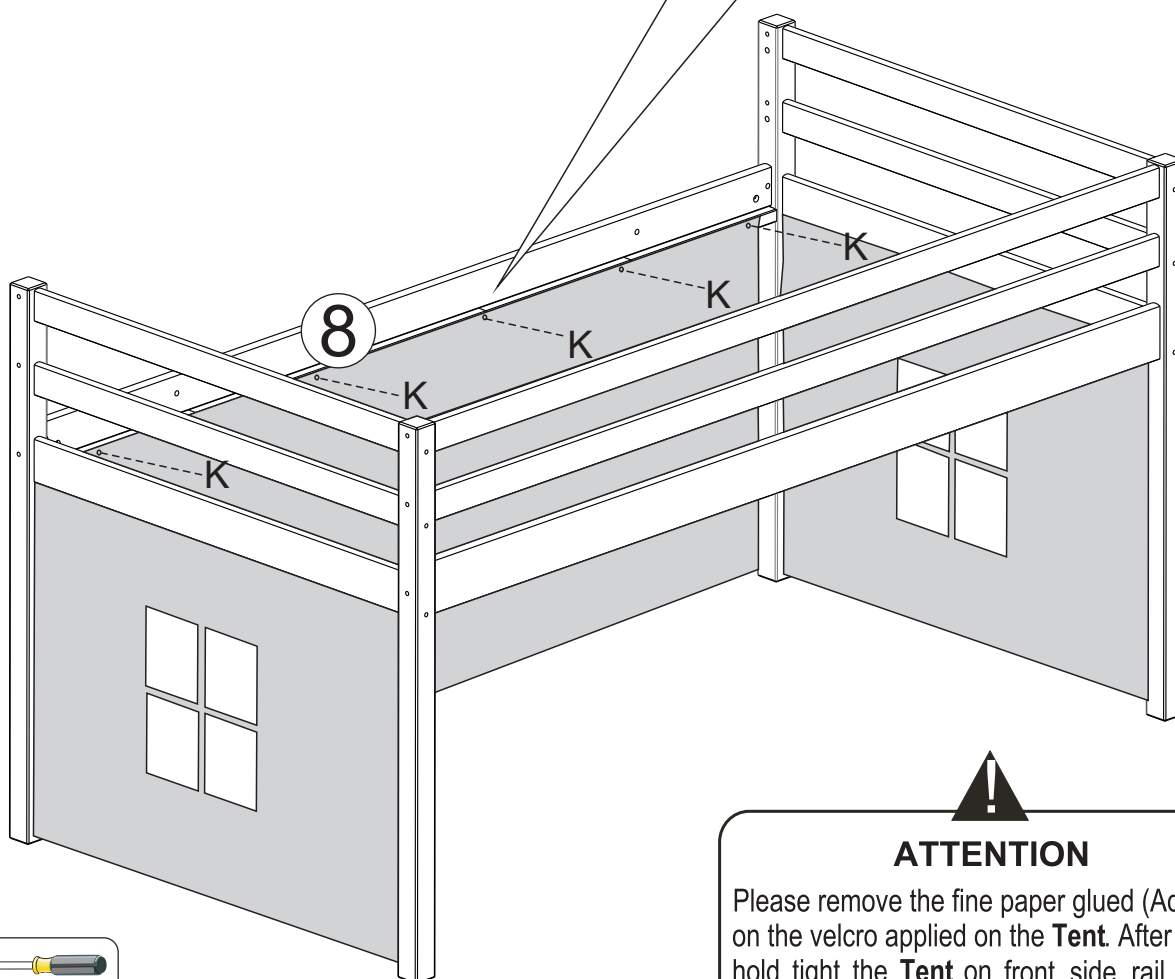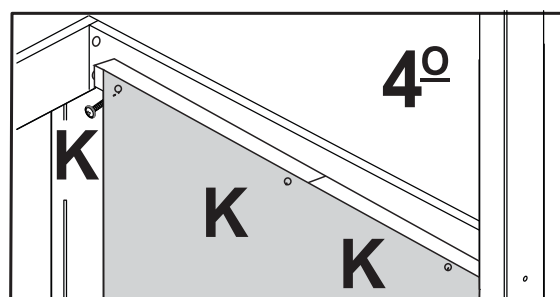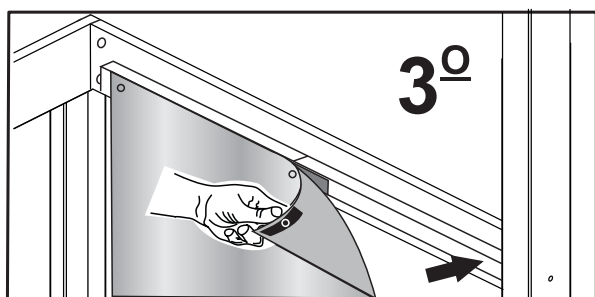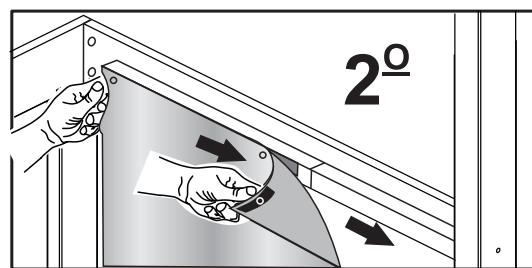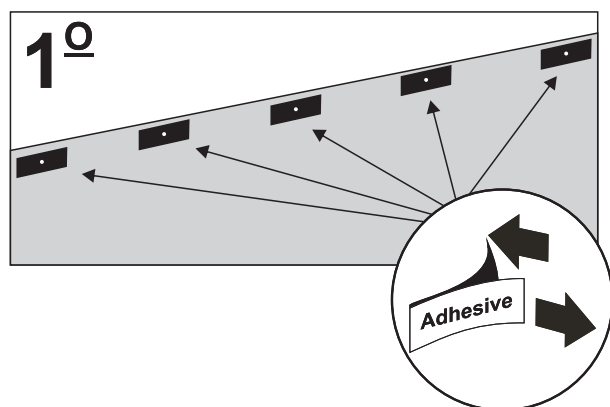

ATTENTION

Please remove the fine paper glued (Adhesived) on the velcro applied on the **Tent**. After this step, hold tight the **Tent** on front side rail like showing on instructions.

07


B






02

7 x 90 x 17mm

I




01

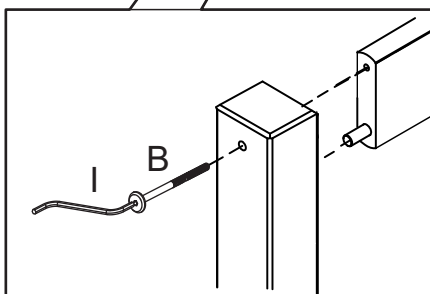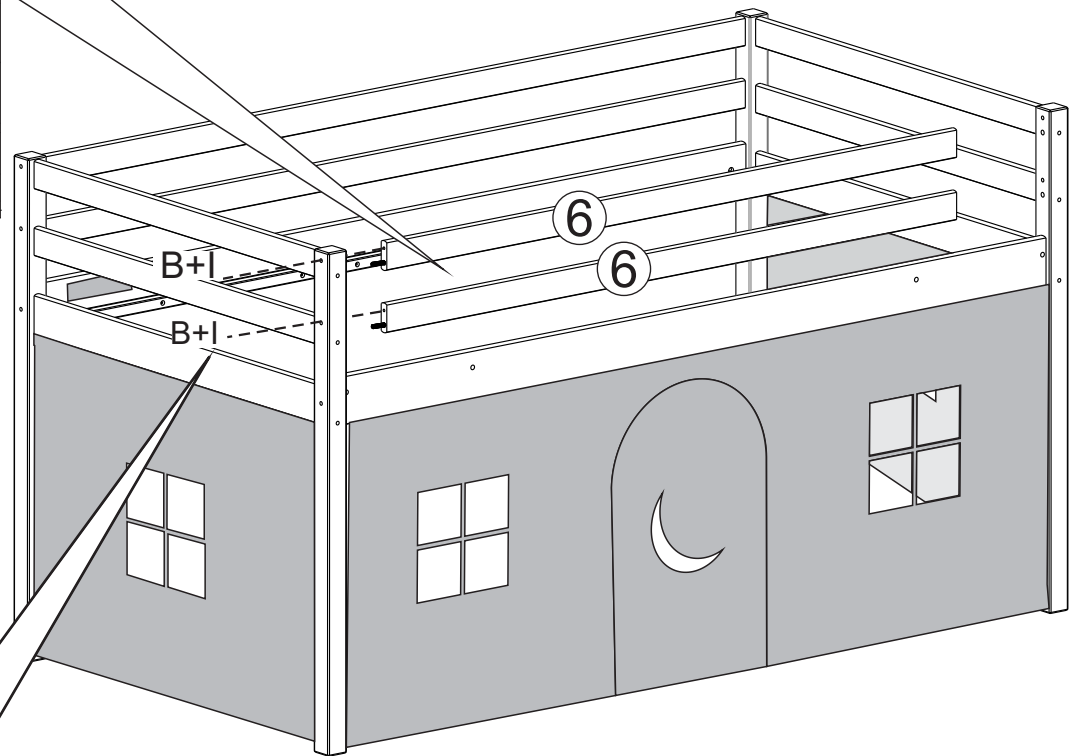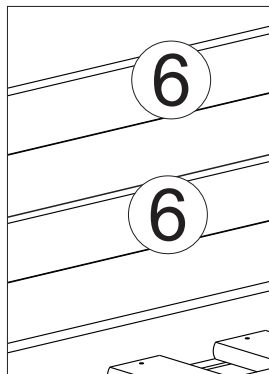


OPTION 1




OPTION 2

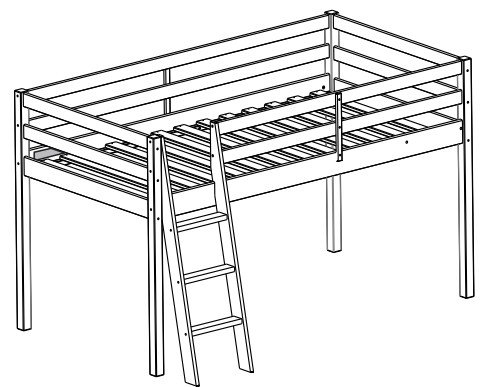



08

D  **04**
7 x 60 x 17mm




G  **02**

I  **02**

1°

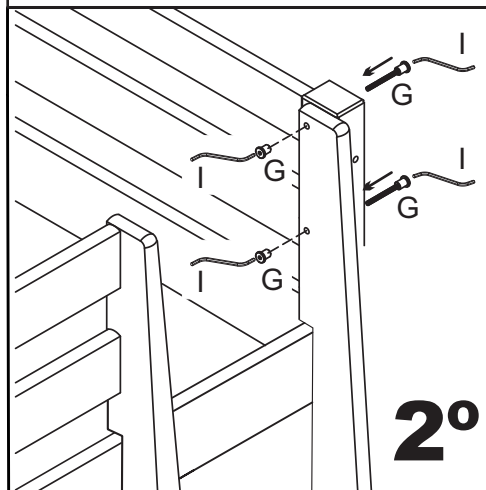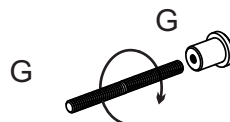

2°

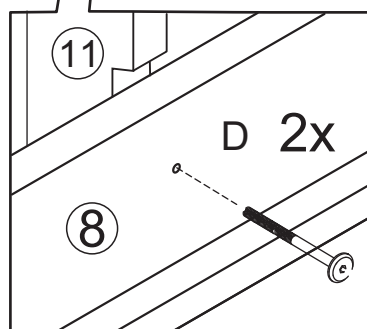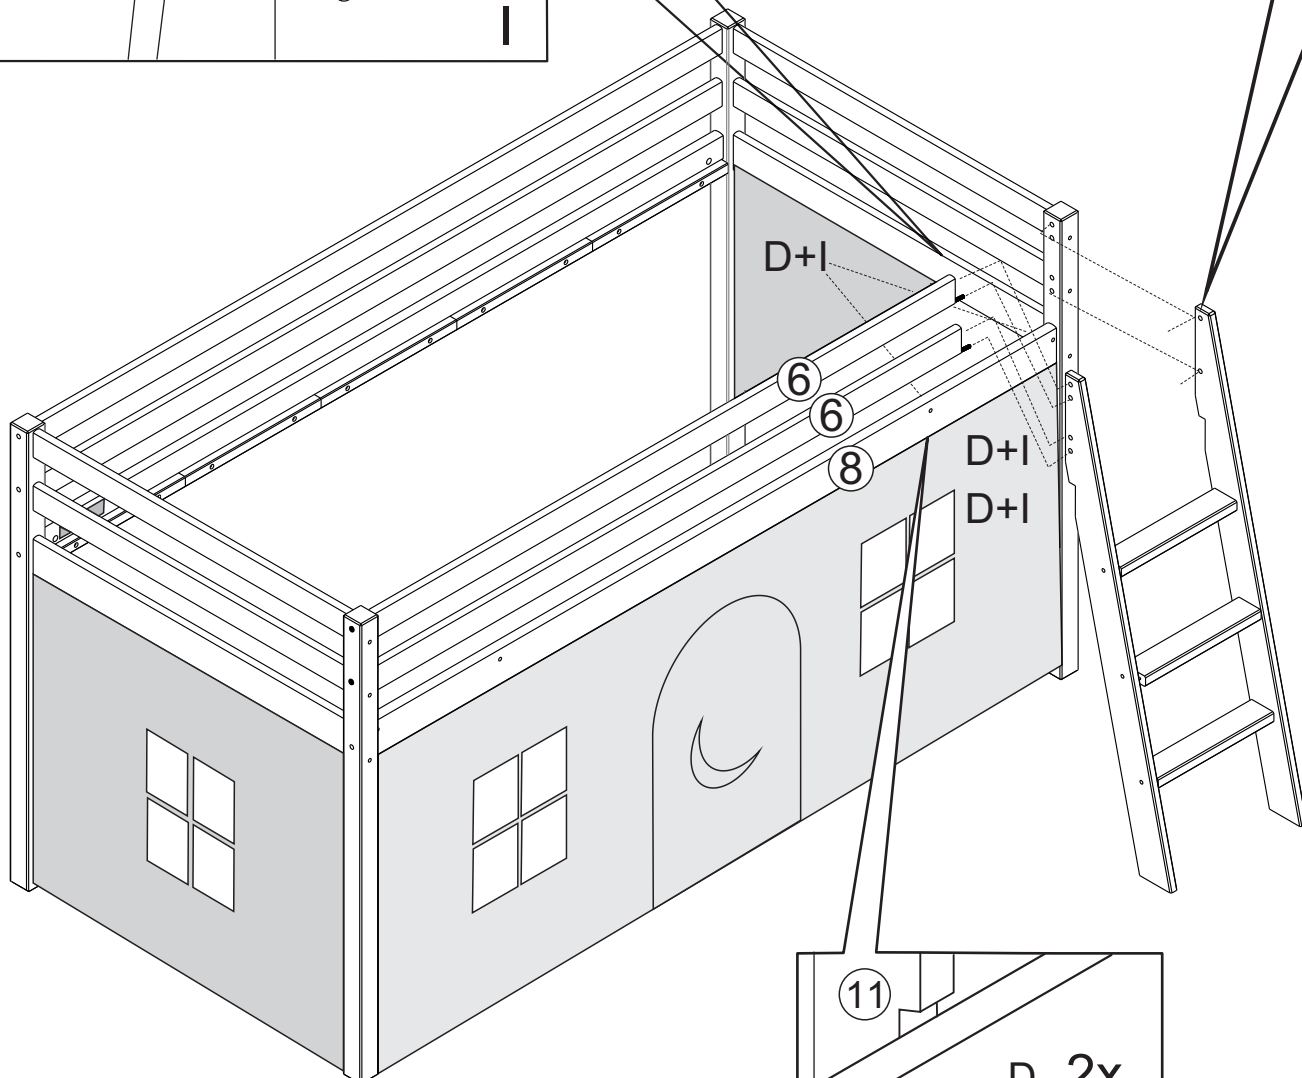
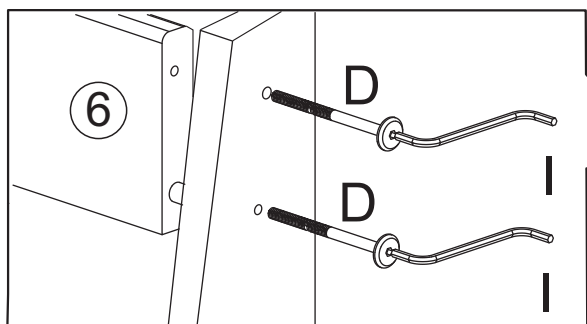


09

C



06

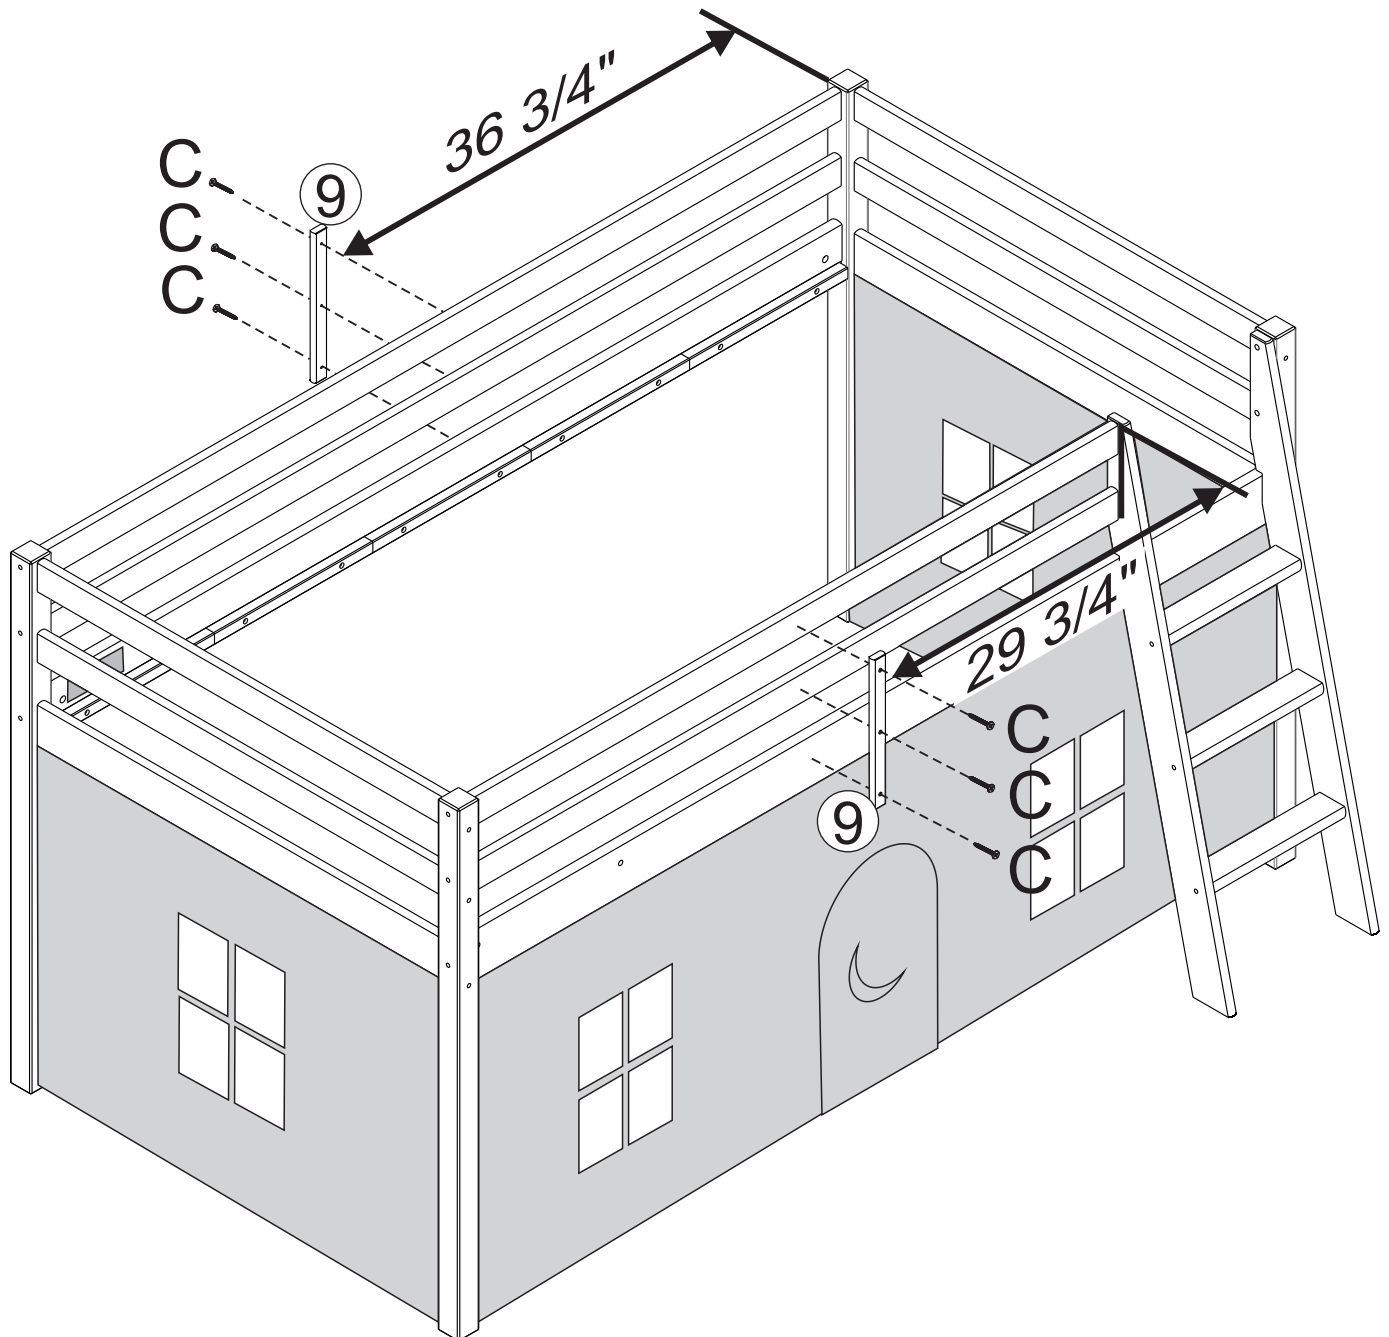

10

H





4,0 x 35

26



**The first slat must be fixed here
at 2 1/4" from each headboard end.**

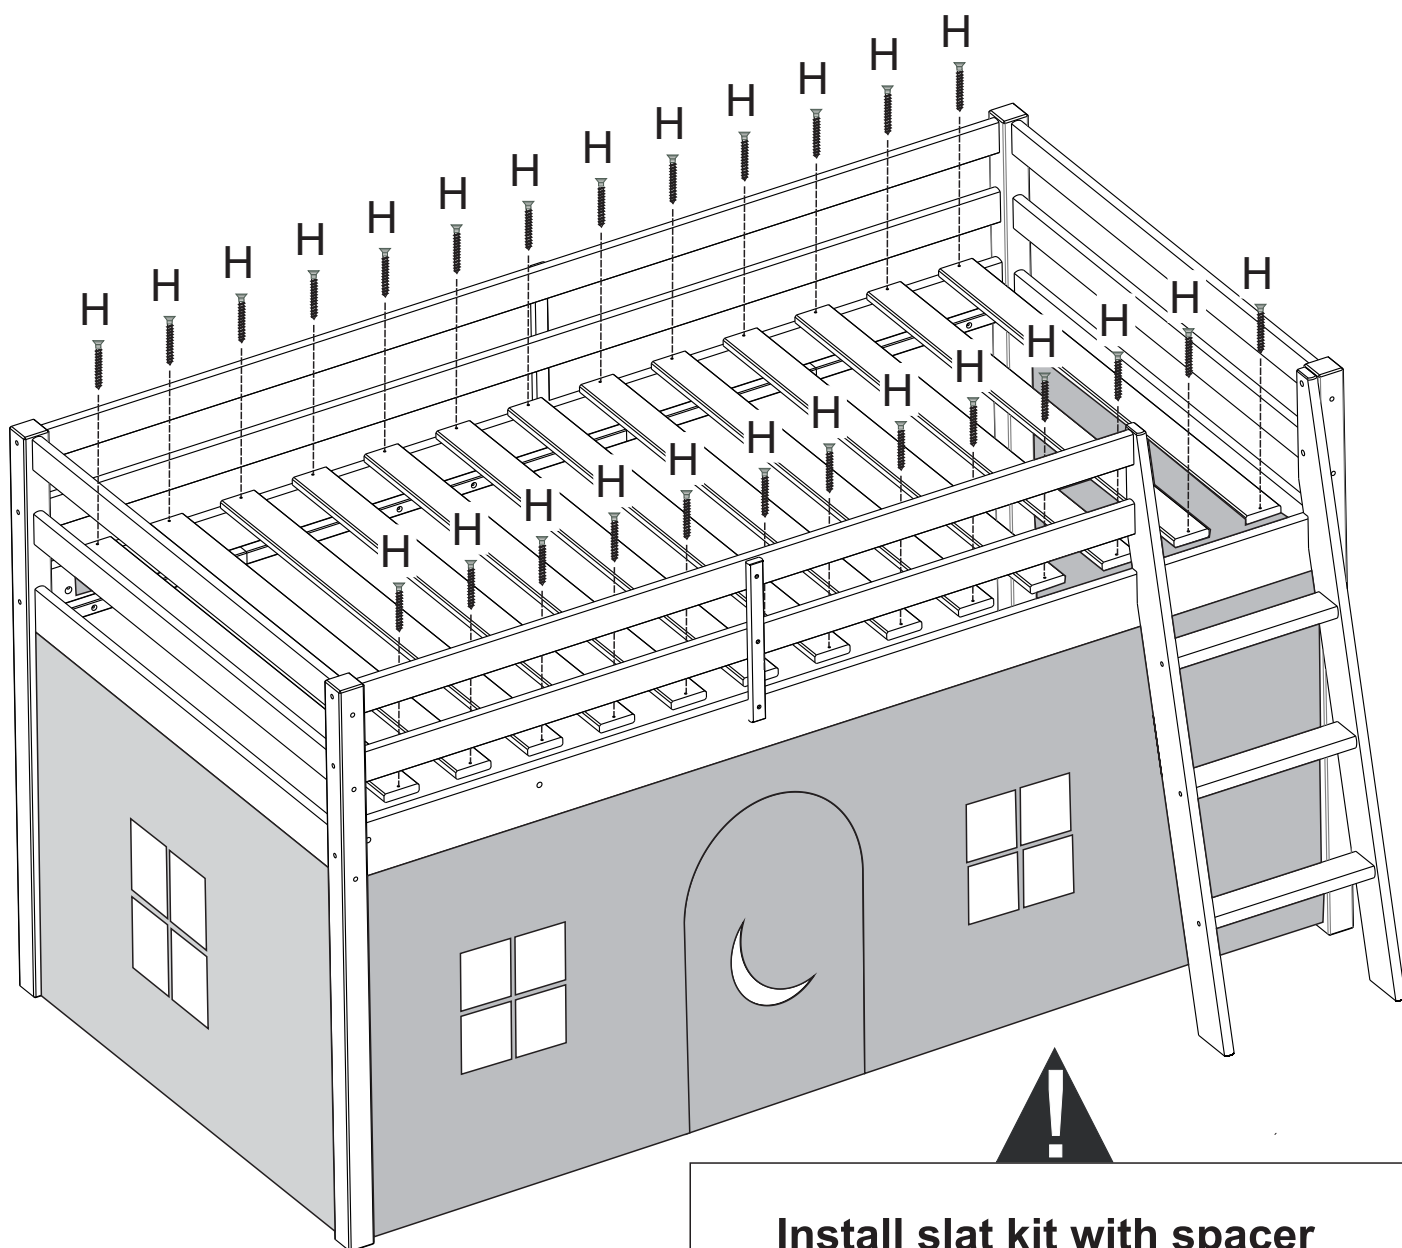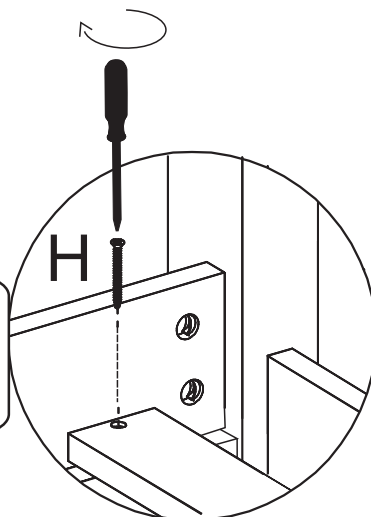

**Install slat kit with spacer
tape on top (Facing up).**