

# HEADRAIL

## ASSEMBLY INSTRUCTIONS

Before assembling your platform head rail, please read through these instructions carefully and familiarize yourself with the different parts.  
**ATTENTION!** If you receive a damaged or defective item, please contact us.



### PARTS LIST

- 1 MID RAIL 1 PC**
- 2 TALL LEG 2 PCS**
- 3 SHORT LEG 2 PCS**

Instructions apply for all bed sizes  
 > Twin > Full > Queen > King


### HARDWARE

- a** Wooden dowels- 4 pcs  
Spare - 1 pc
- b** JCB M6 X 100mm(4 3/4") - 2 pcs  
Spare - 1 pc
- c** Barrel nut - 2 pcs  
Spare - 1 pc
- d** Wood button - 2 pcs  
Spare - 1 pc
- e** Allen wrench - 1pc  
Spare - 1pc

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.


### Step 1

Insert wooden dowels (a) to the locator holes on (1). Both end.

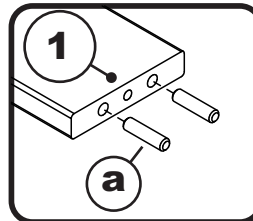

### Step 2



Attach the legs (2) or (3) to mid rail (1), using JCB M6 X 100mm (b) and barrel nut (c). Tighten with the Allen wrench (e). Cover holes with wood button (d).

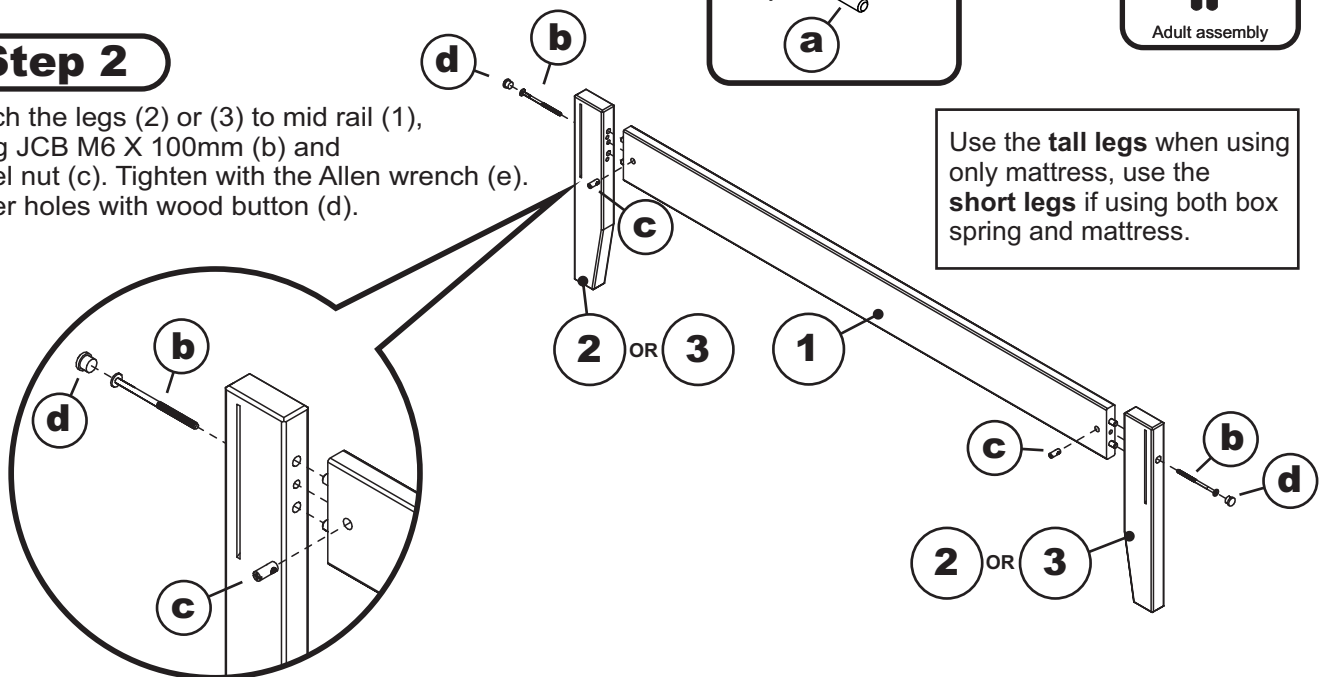


Use the **tall legs** when using only mattress, use the **short legs** if using both box spring and mattress.

### Step 3

Attach bed frame assemblies to the head rail assemblies, using bed hook as shown below. For Slat kit assembly, follow assembly instructions included with slat kit.

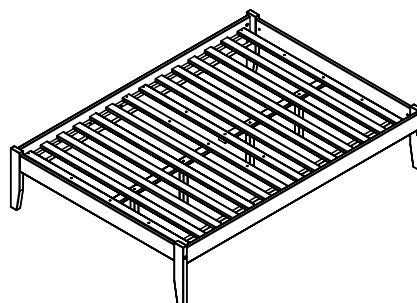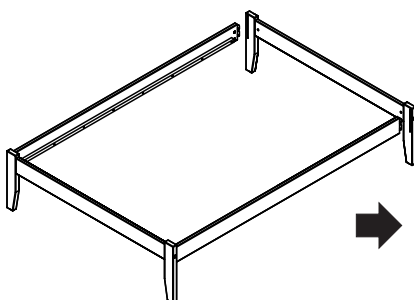

PLATFORM BED - TALL HEIGHT

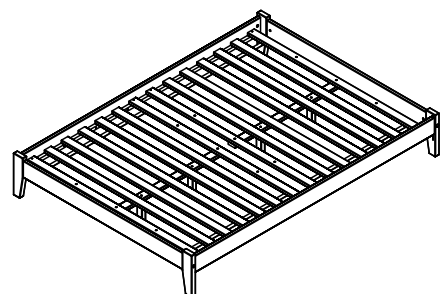

TRADITIONAL BED - LOW HEIGHT

# SLAT KIT TWIN

## ASSEMBLY INSTRUCTION TWIN

Before assembling your bed slat kit, please read through these instructions carefully and familiarize yourself with the different parts.


Please note that you will require a Phillips screwdriver.

**ATTENTION!** If you receive a damaged or defective item, please contact us.




### PARTS LIST

**01** SLAT KIT 1 SET

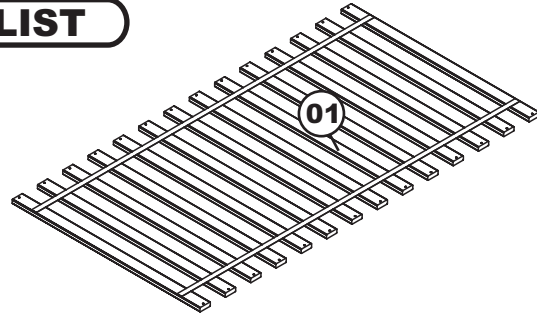

NOTE: WE INCLUDE SPARE HARDWARE IN CASE THE WOOD SCREWS ARE DAMAGED DURING ASSEMBLY.

**A**



1 1/4" Wood screw - 28 pcs Spare - 2 pcs

### HARDWARE


### Step 1

Assemble bed frame or bunk bed according to assembly instructions.

### Step 2

Lay the slat kit onto the bed.

#### PLATFORM BED

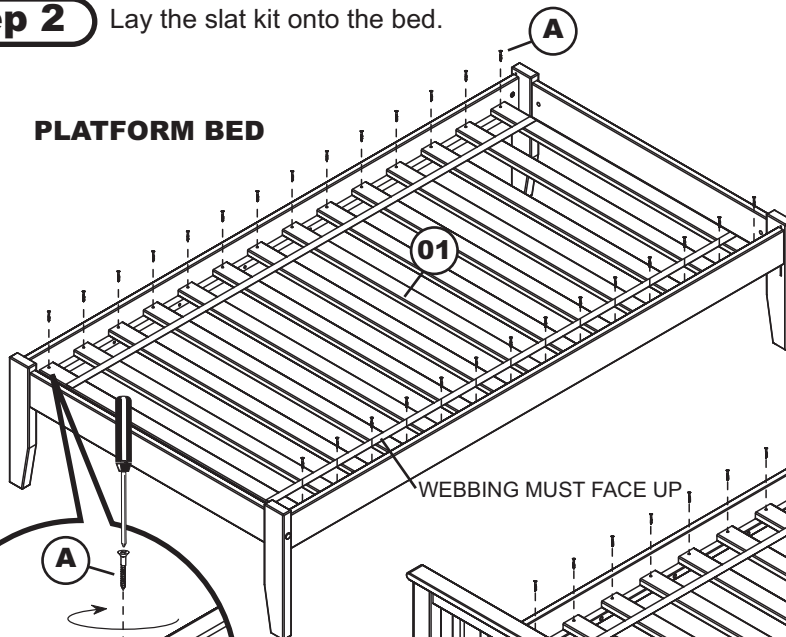

WEBBING MUST FACE UP




Adult assembly

**A**



Wood screw

#### BUNK BED

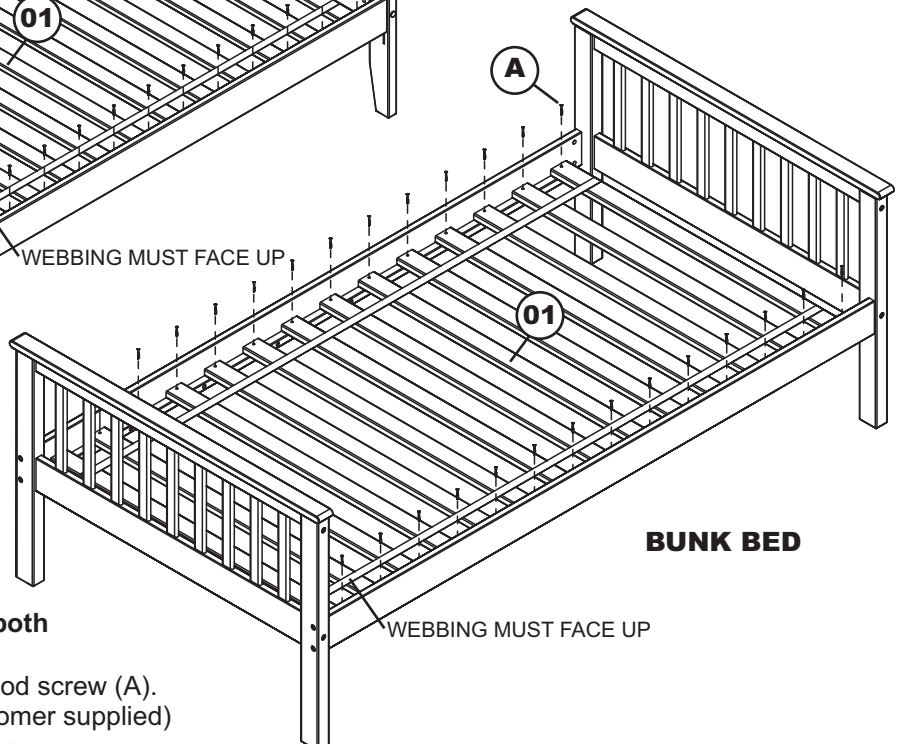

WEBBING MUST FACE UP

Be sure to align slat kit evenly with both ends of side rail.

Screw slat kit (01) to side rail, using wood screw (A). Tighten with Phillips screwdriver. (Customer supplied)

Be sure the space between slats is even.

**NOTE: WEBBING MUST FACE UP**

# HEADBOARD

## ASSEMBLY INSTRUCTIONS

Before assembling your Headboard, please read through these instructions carefully and familiarize yourself with the different parts.  
**ATTENTION!** If you receive a damaged or defective item, please contact us.



### PARTS LIST

- ① HEADBOARD PANEL 1 PC
- ② LEFT LEG 1 PC
- ③ RIGHT LEG 1 PC

Instructions apply for all bed sizes  
 TWIN > FULL > QUEEN > KING


### HARDWARE

- ④ JCB M6 X 25mm (1") - 4 pcs  
Spare - 1 pc
- ⑤ Split Washer - 4 pcs  
Spare - 1 pc
- ⑥ Flat Washer - 4 pcs  
Spare - 1 pc
- ⑦ Allen Wrench - 1 pc  
Spare - 1 pc
- ⑧ Wooden Dowel - 4 pcs  
Spare - 1 pc
- ⑨ JCB M6 X 35mm (1 3/8") - 4 pcs  
Spare - 1 pc

NOTE: WE INCLUDE SPARE HARDWARE IN CASE THE ALLEN WRENCH, JCB, SPLIT, OR FLAT WASHER ARE DAMAGED DURING ASSEMBLY.

### Step 1

Attach the legs (2) and (3) to headboard panel (1), using wooden dowels (A) and JCB (B).  
 Tighten with the Allen wrench (F).

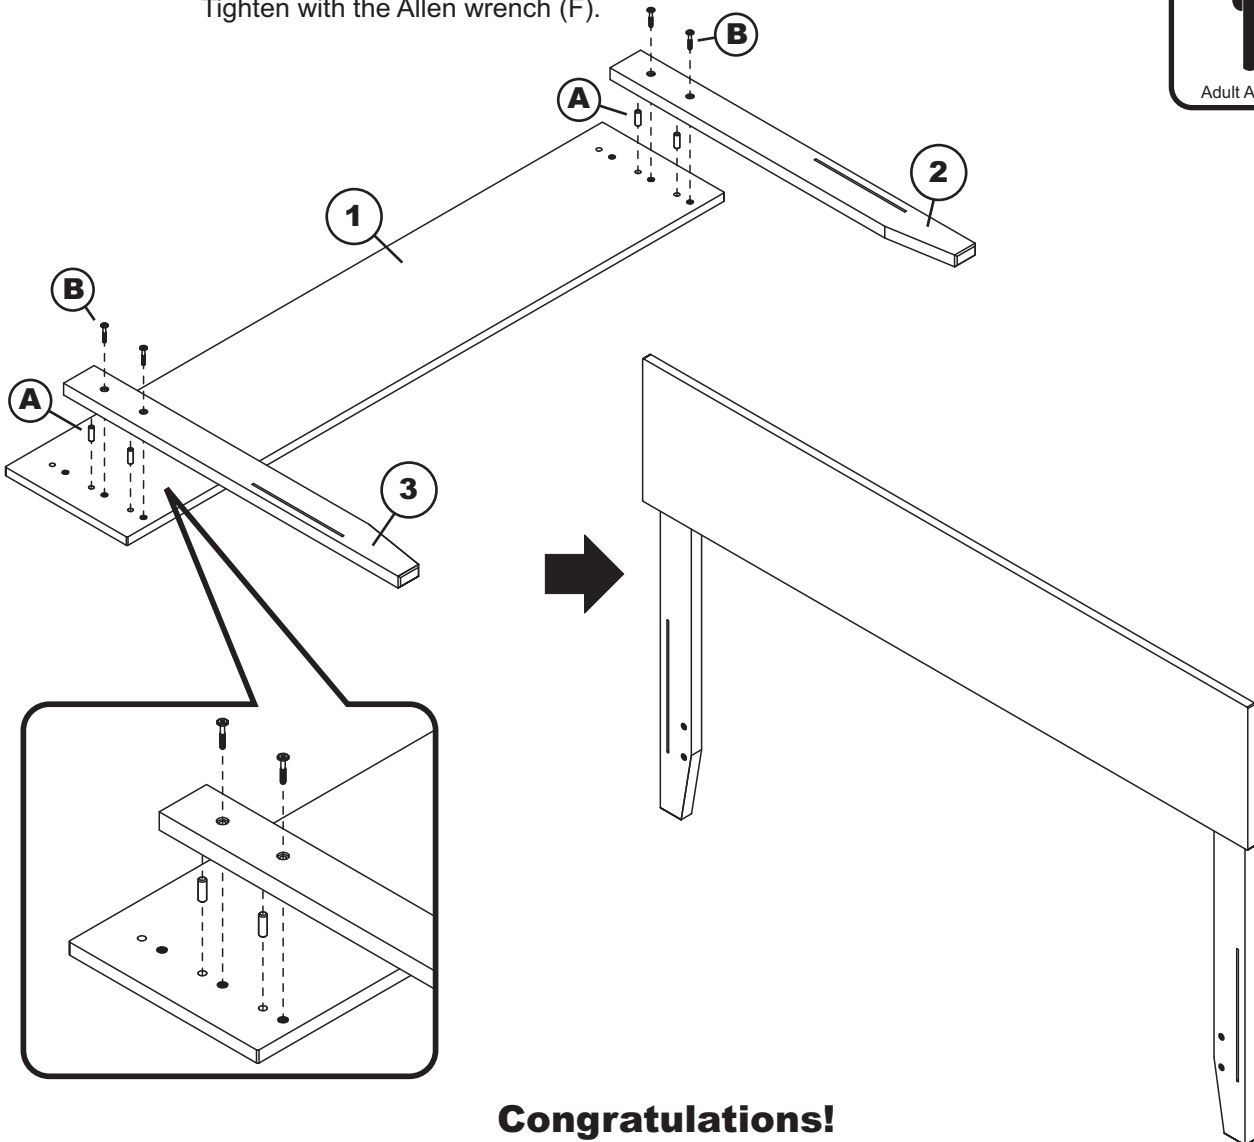

**Congratulations!**

Your Headboard is now ready to assemble.

To ensure lasting safety, we recommend that you periodically check that all screws are tight and all parts are secure.

# BED



## ASSEMBLY INSTRUCTIONS

Before assembling your Headboard, please read through these instructions carefully and familiarize yourself with the different parts.




Instructions apply for all bed sizes  
**TWIN > FULL > QUEEN > KING**

### BED SHOWN WITH OPEN FOOTRAIL

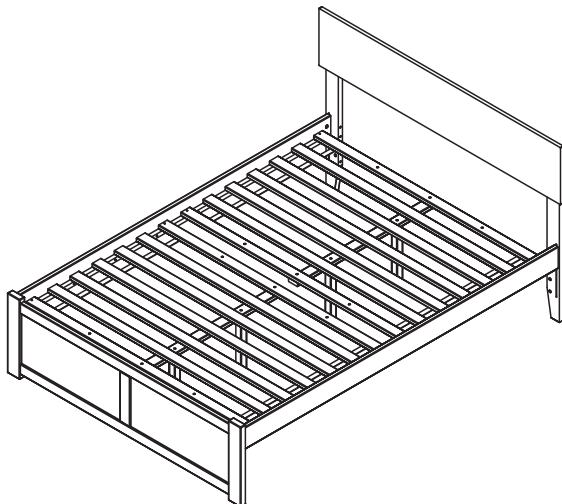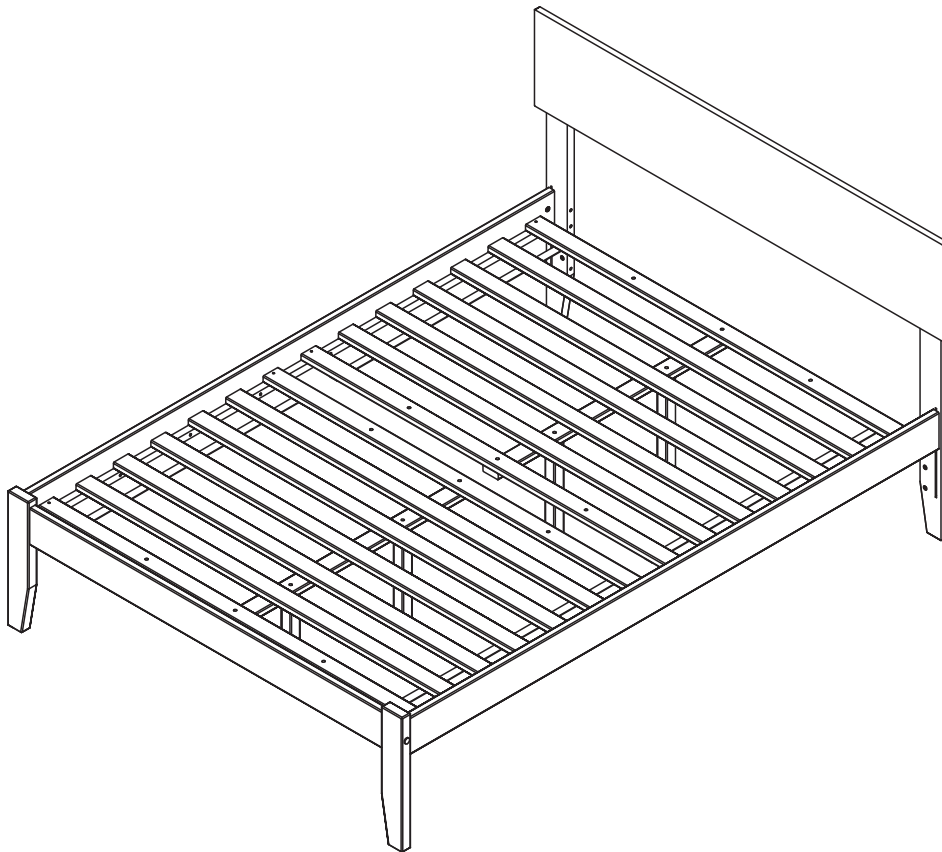


BED SHOWN WITH FLAT PANEL FOOTBOARD

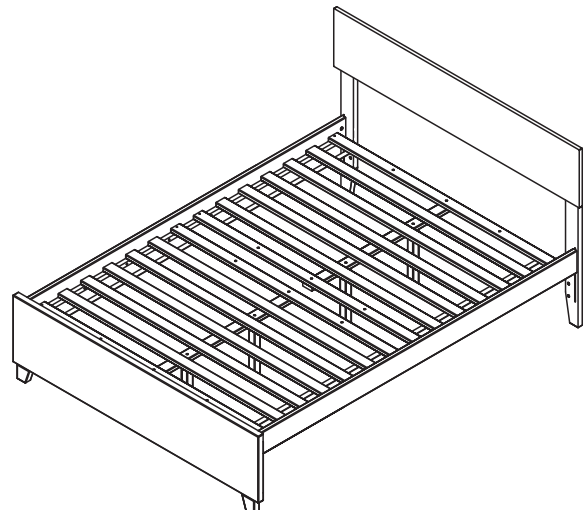

BED SHOWN WITH MATCHING FOOTBOARD

# PARTS LIST


- (01) **HARDWARE** • BOX 1
- (02) **HEADBOARD** •
- (01) **HARDWARE** • BOX 2
- (03) **FOOTBOARD** •
- (04) **LONG RAILS** • BOX 3
- (01) **HARDWARE** • BOX 4
- (05) **SLAT KIT** •

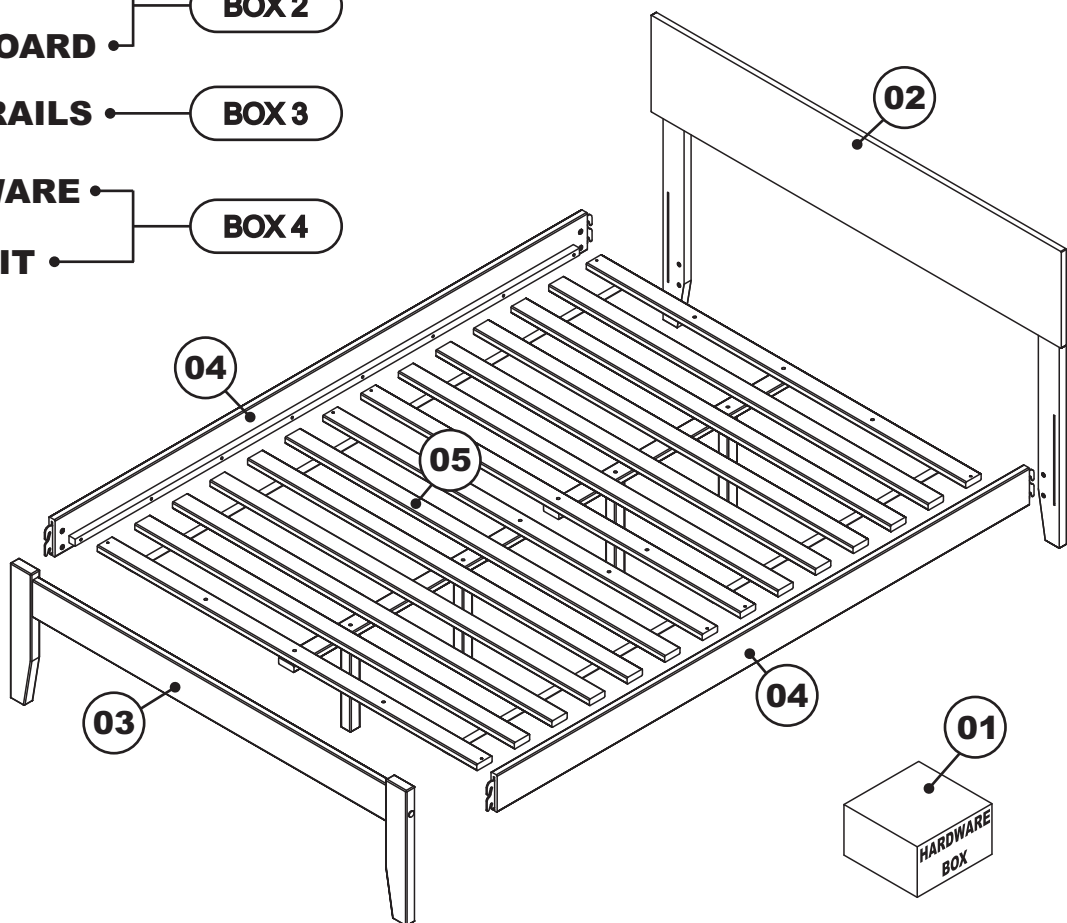

BED SHOWN WITH OPEN FOOTRAIL

## Step 1


Attach the long rails (04) to the headboard (02) using the bed hook as shown below.

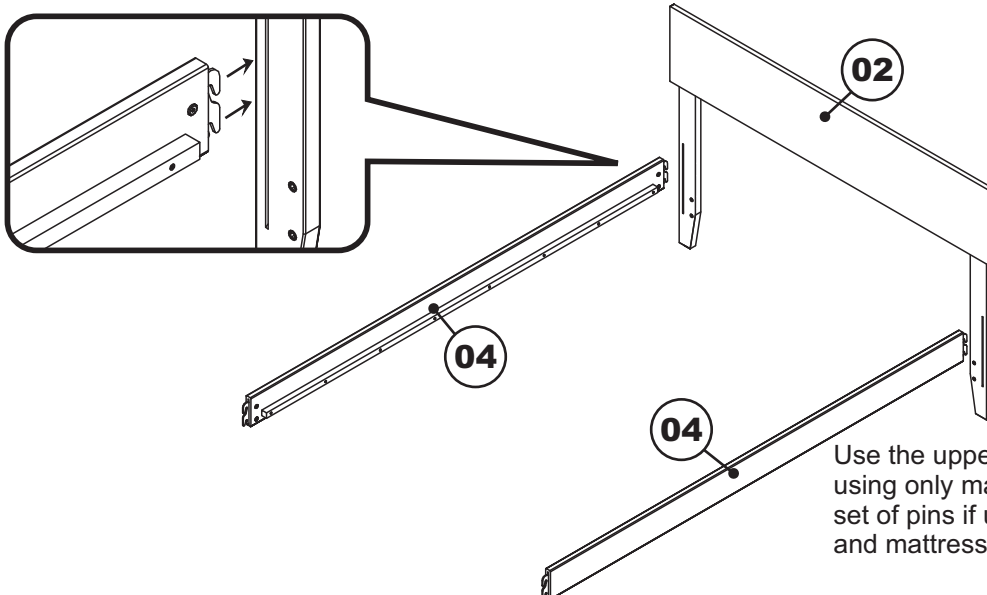

Use the upper set of pins when using only mattress, use the lower set of pins if using both box spring and mattress.

## Step 2

Attach the long rail assemblies (04) to the footboard (03) using bed hook as shown below.

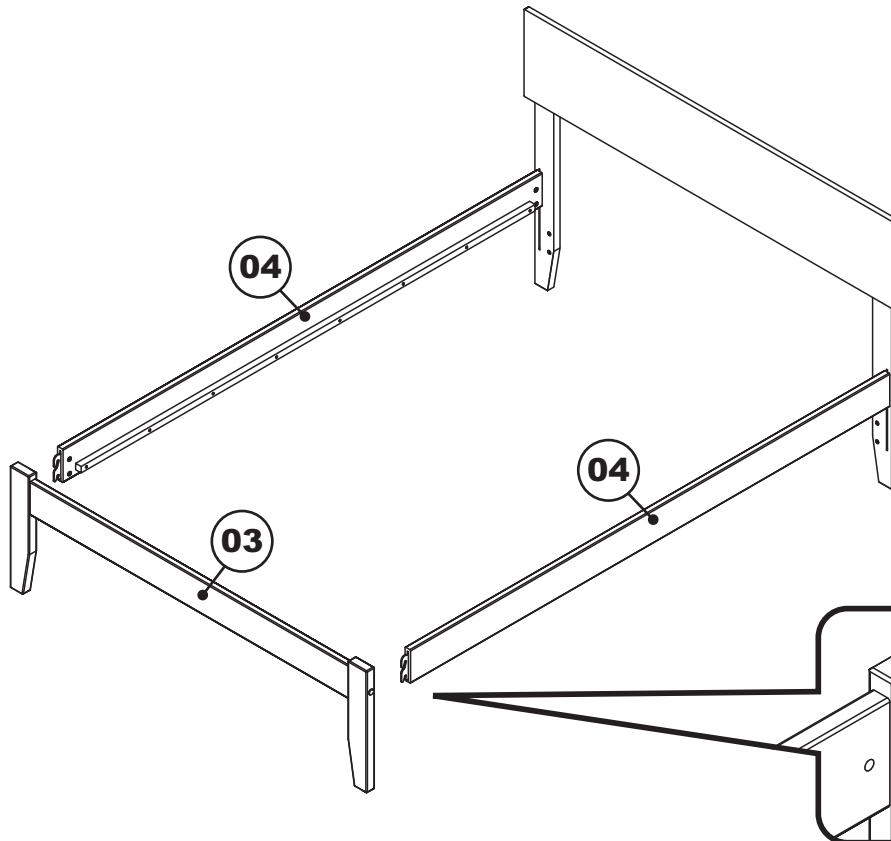

BED SHOWN WITH OPEN FOOTRAIL


## Step 3

Lastly, lay slat kit (05) onto the bed. For slat kit assembly, follow the assembly instructions included with slat kit.


BED SHOWN WITH OPEN FOOTRAIL



PLATFORM BED - TALL HEIGHT

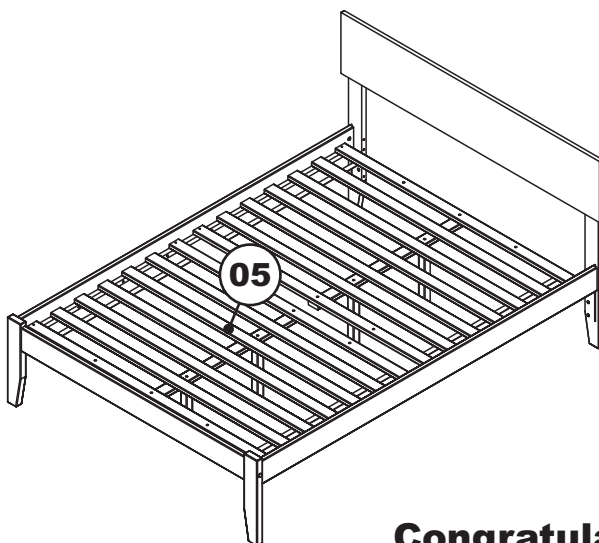

TRADITIONAL BED - LOW HEIGHT

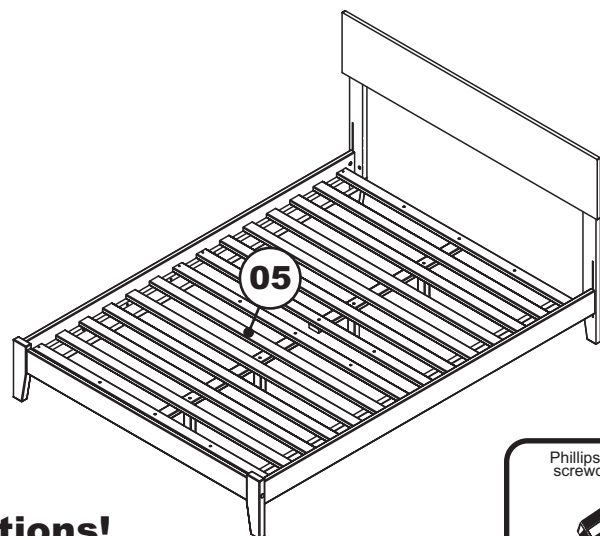

**Congratulations!**

Your bed is now ready for use.

To ensure lasting safety, we recommend that you periodically check that all screws are tight and all parts are secure.





## HEADBOARD

attach to metal frame sold separately

### ASSEMBLY INSTRUCTIONS

Before assembling your Bed, please read through these instructions carefully and familiarize yourself with the different parts.

Instructions apply for all bed sizes  
Twin > Full > Queen > King








## PARTS LIST

- 01 HARDWARE
- 02 HEADBOARD

### Step 1

Attach the headboard assembly (02) to the metal frame using JCB (C), flat washer (D), and split washer (E) then tighten with Allen wrench, as shown below.

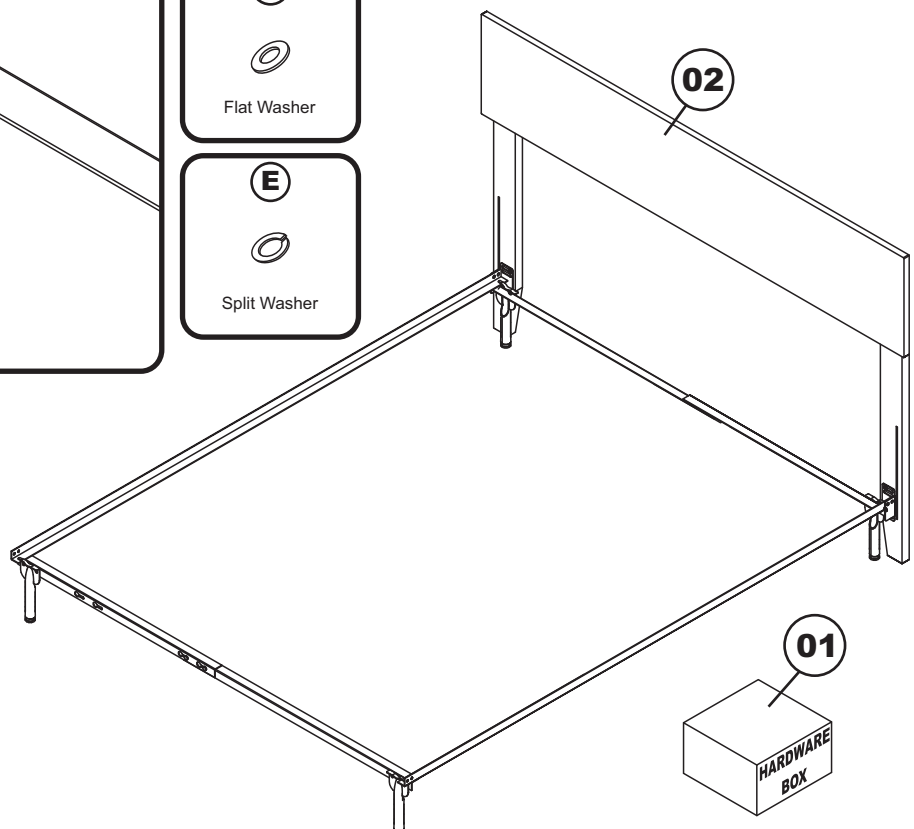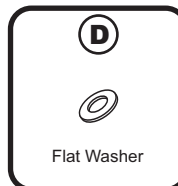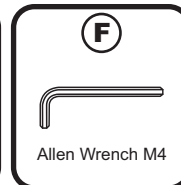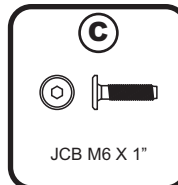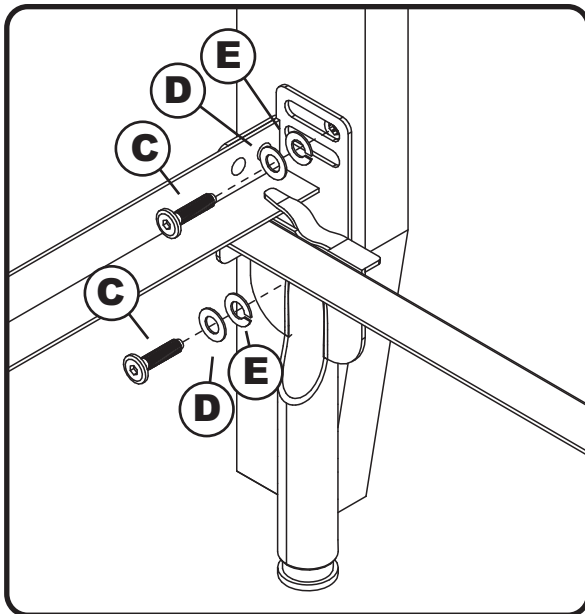

## Congratulations!

Your Bed is now ready for use.

To ensure lasting safety, we recommend that you periodically check that all screws are tight and all parts are secure.