


ASSEMBLY INSTRUCTIONS

LOFT



OPTION 1

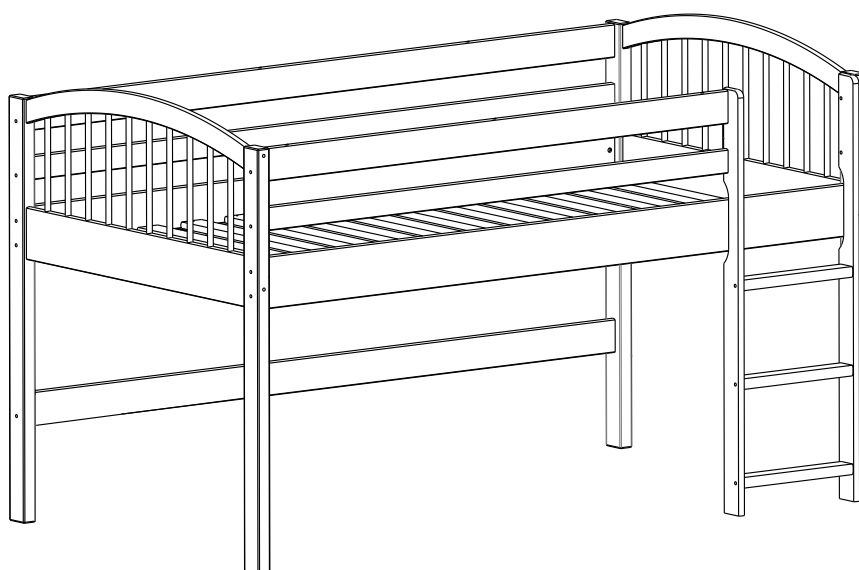


OPTION 2




REPLACEMENT PARTS


Please do not contact the company purchased from as we can help you faster.

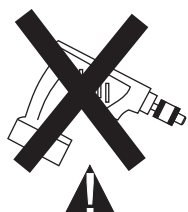


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

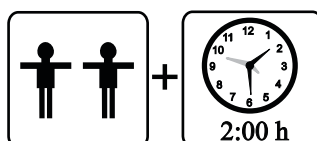

Tools Required




(Not included)






(Not included)




Part List - Loft

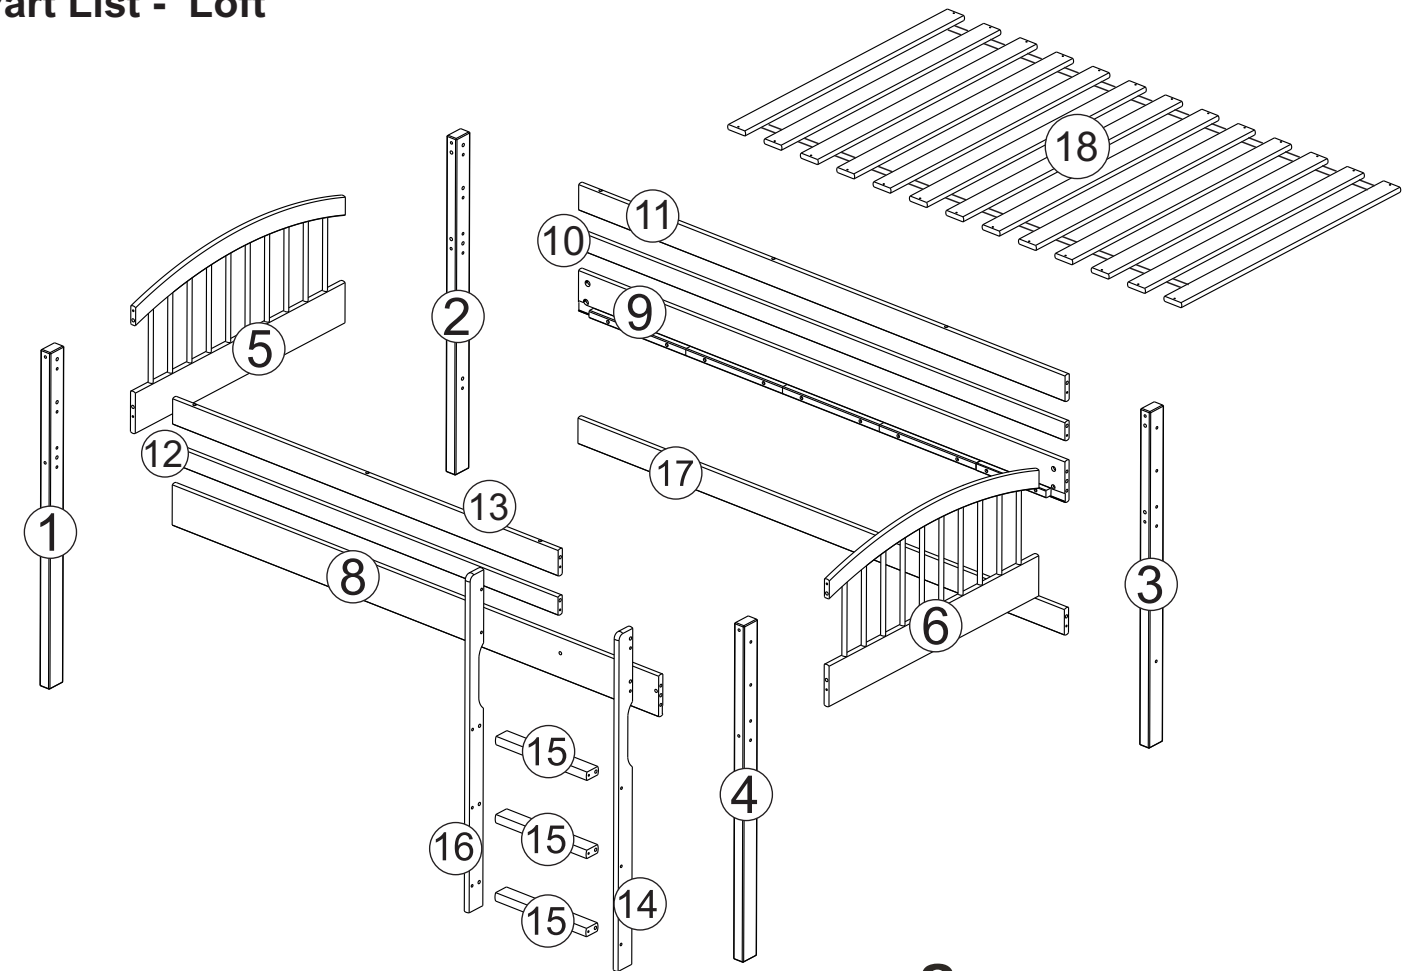

2x

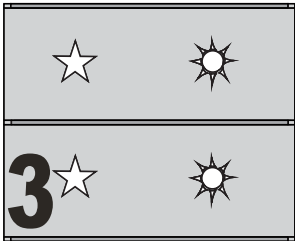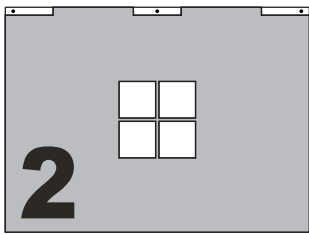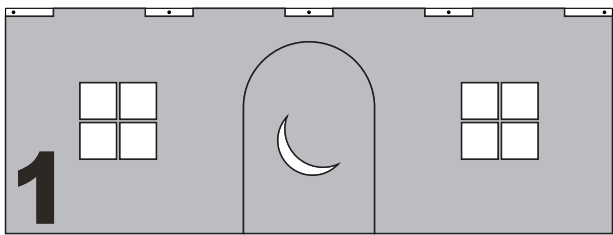

Identifying the Hardware-Identify the hardware using the illustrations below.

A  7 x 100 x 17mm	B  7 x 80 x 17mm	C  7 x 50 x 17mm
D  1/4 x 90 x 17mm	E  10X40	F  1/4
G  4,0 x 35	H  02	I  3/16
J  03	K  3,5 x 16 Flangeado	


01

E





10X40

28



(Not included)

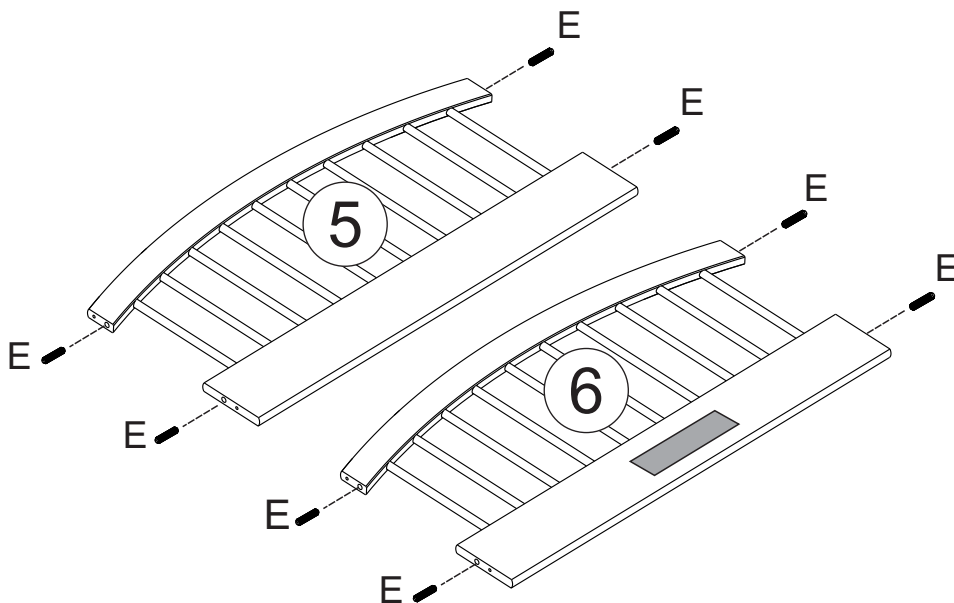
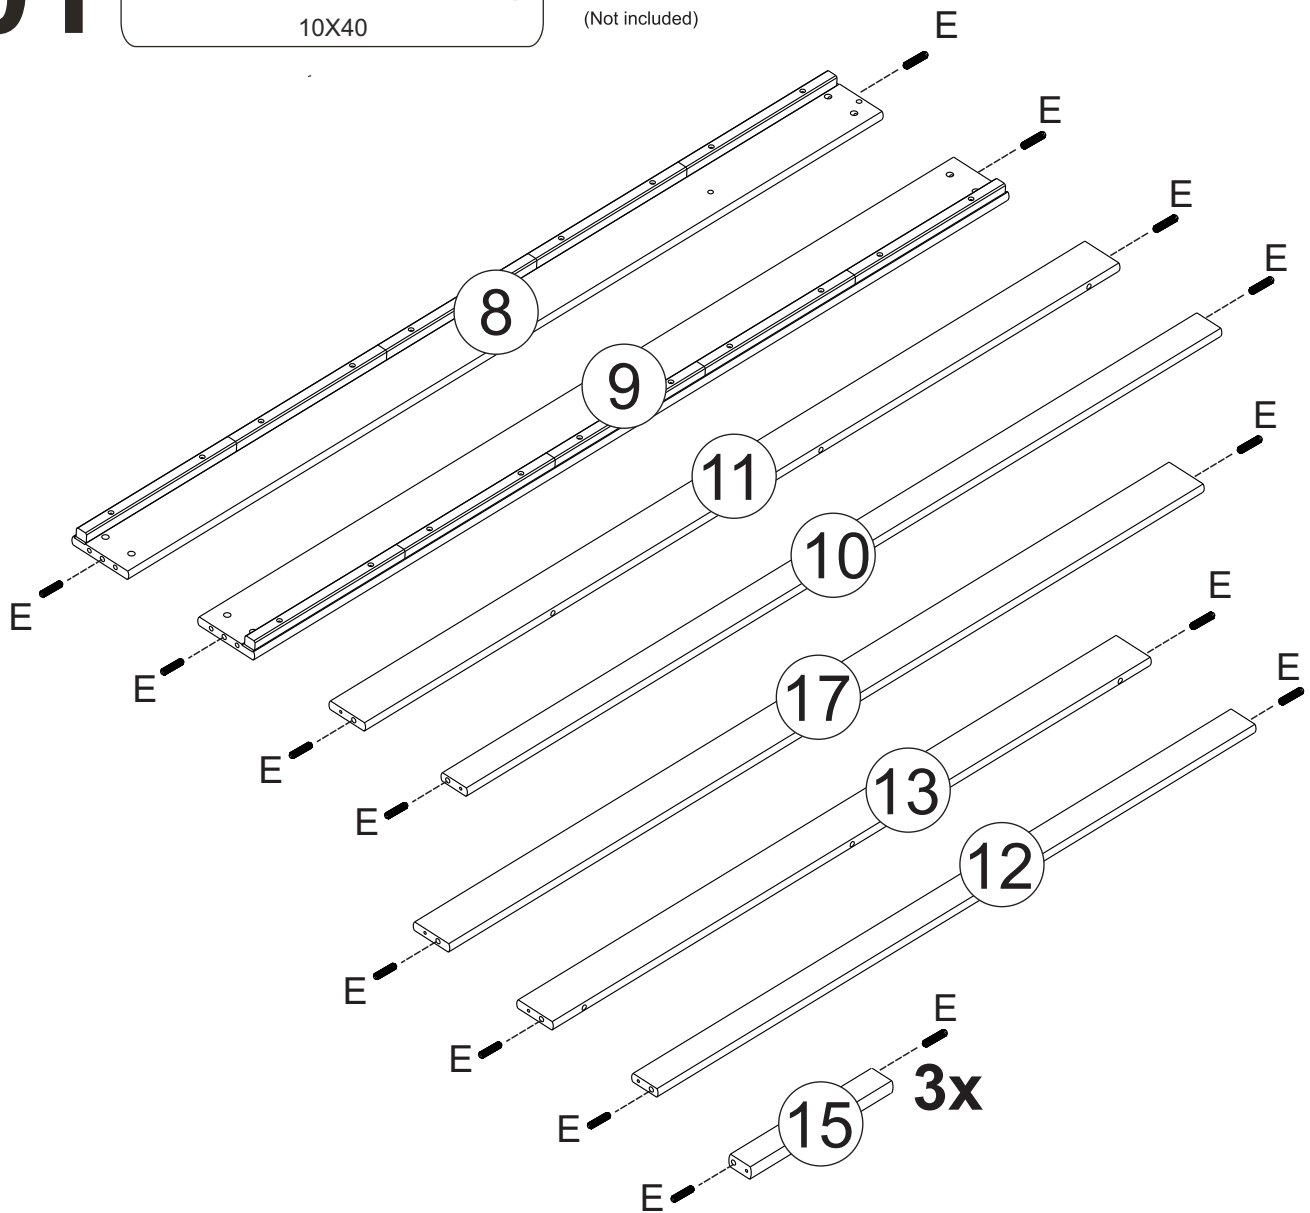


Loft w/Tent

02

A  04
7 x 100 x 17mm



H  02

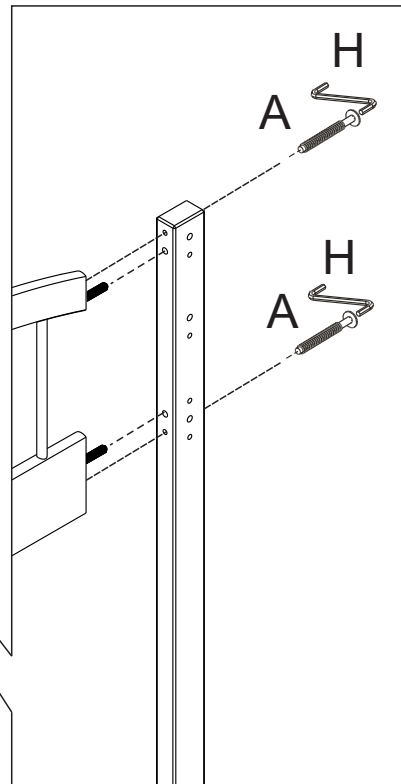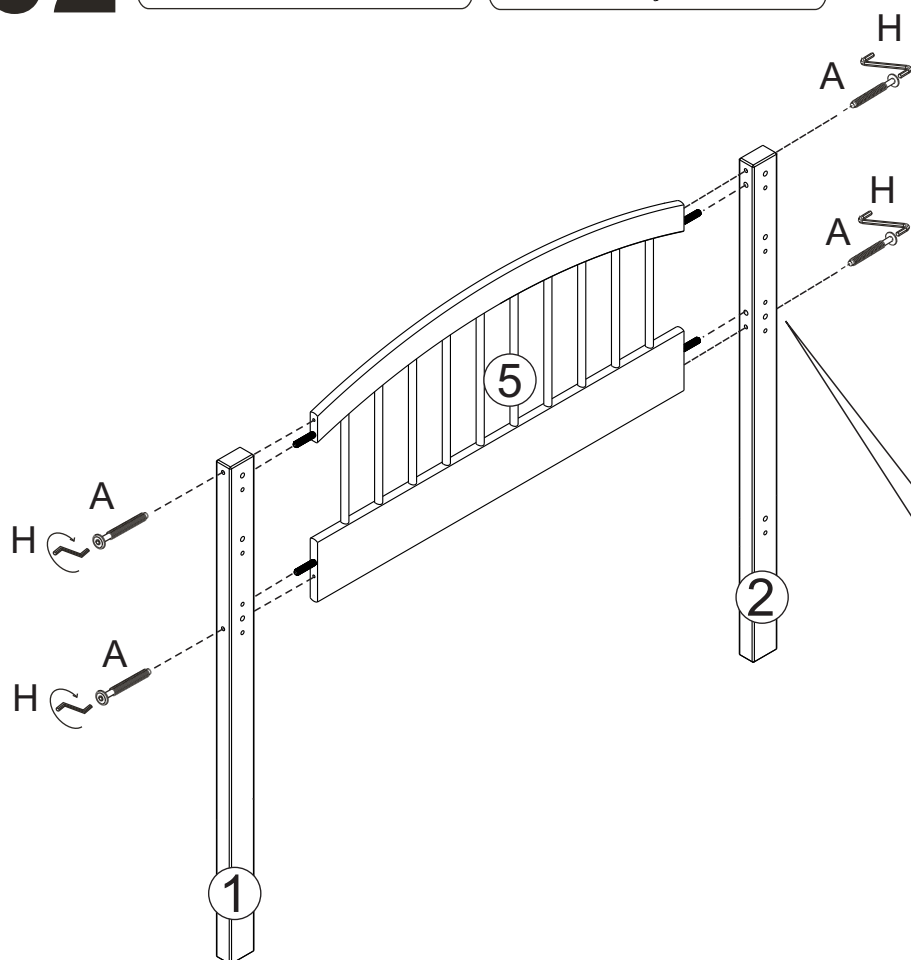

03

A  04
7 x 100 x 17mm

H  02

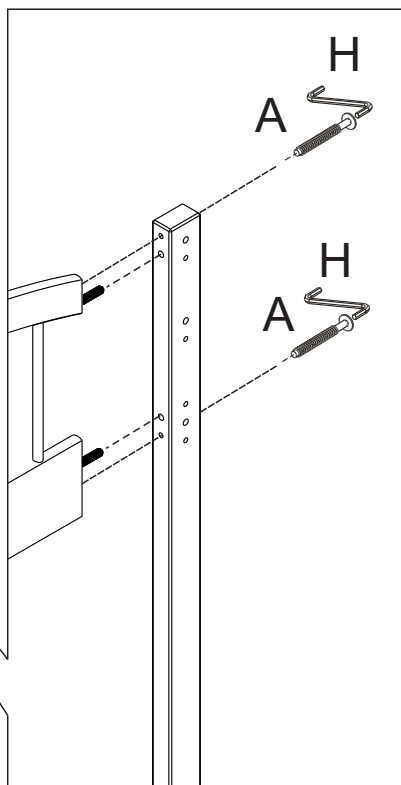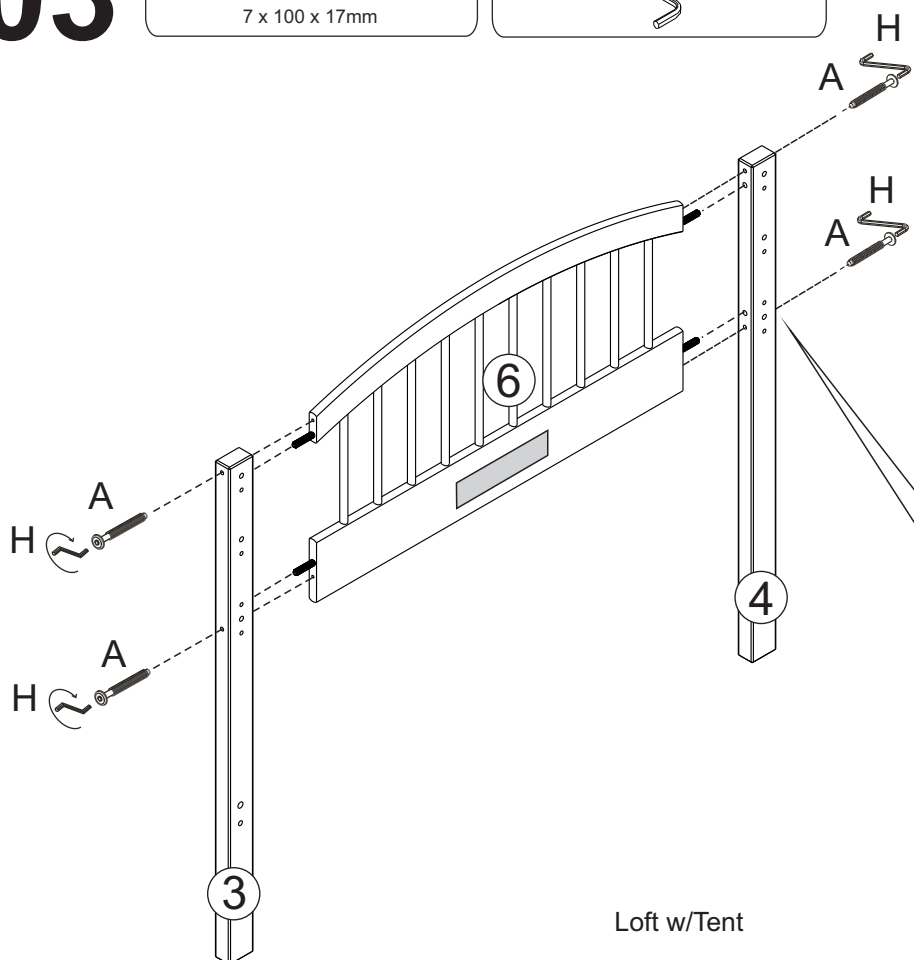

Loft w/Tent

04


B  **06**
7 x 80 x 17mm

D  **04**
1/4 x 90 x 17mm


F  **04**
1/4

H  **01**


Attention

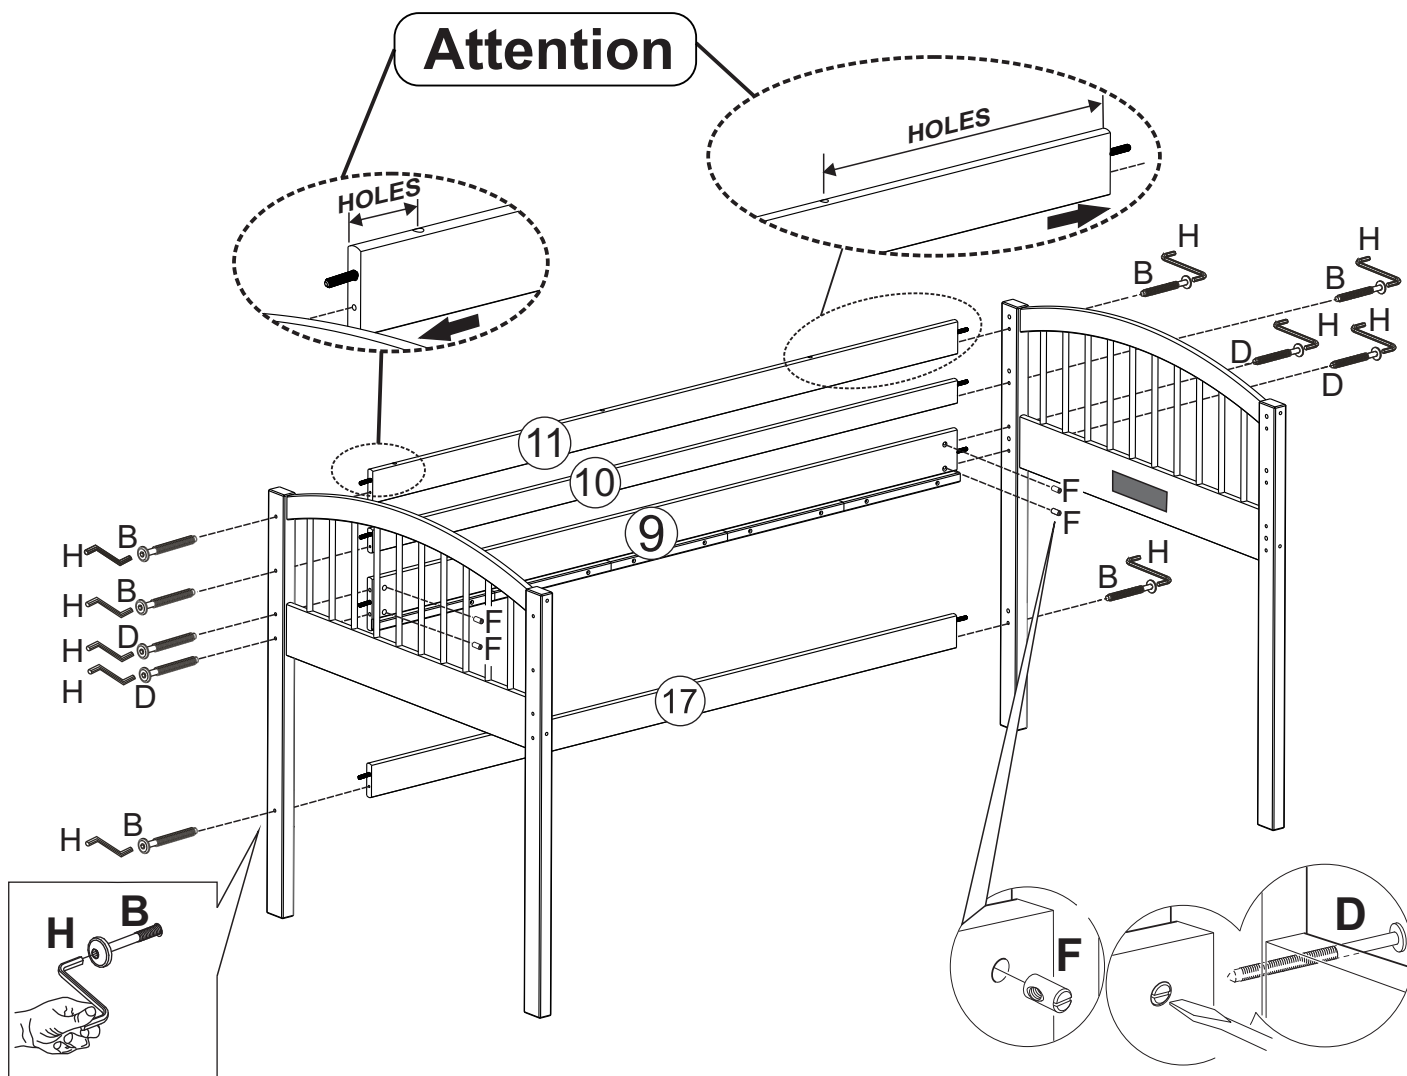

OPTION 1



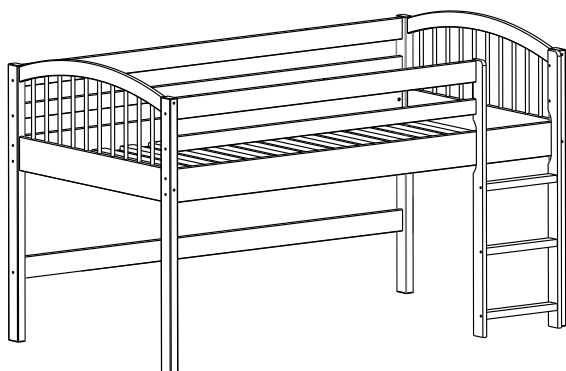


OPTION 2


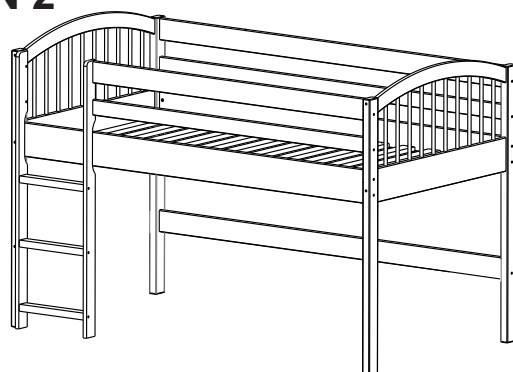


Loft w/Tent

Technical drawing showing the assembly components: a bolt (D), a washer (F), and a nut (H). The bolt is labeled with dimensions 1/4 x 90 x 17mm. The washer is labeled with dimensions 1/4. The nut is labeled with dimensions 01.

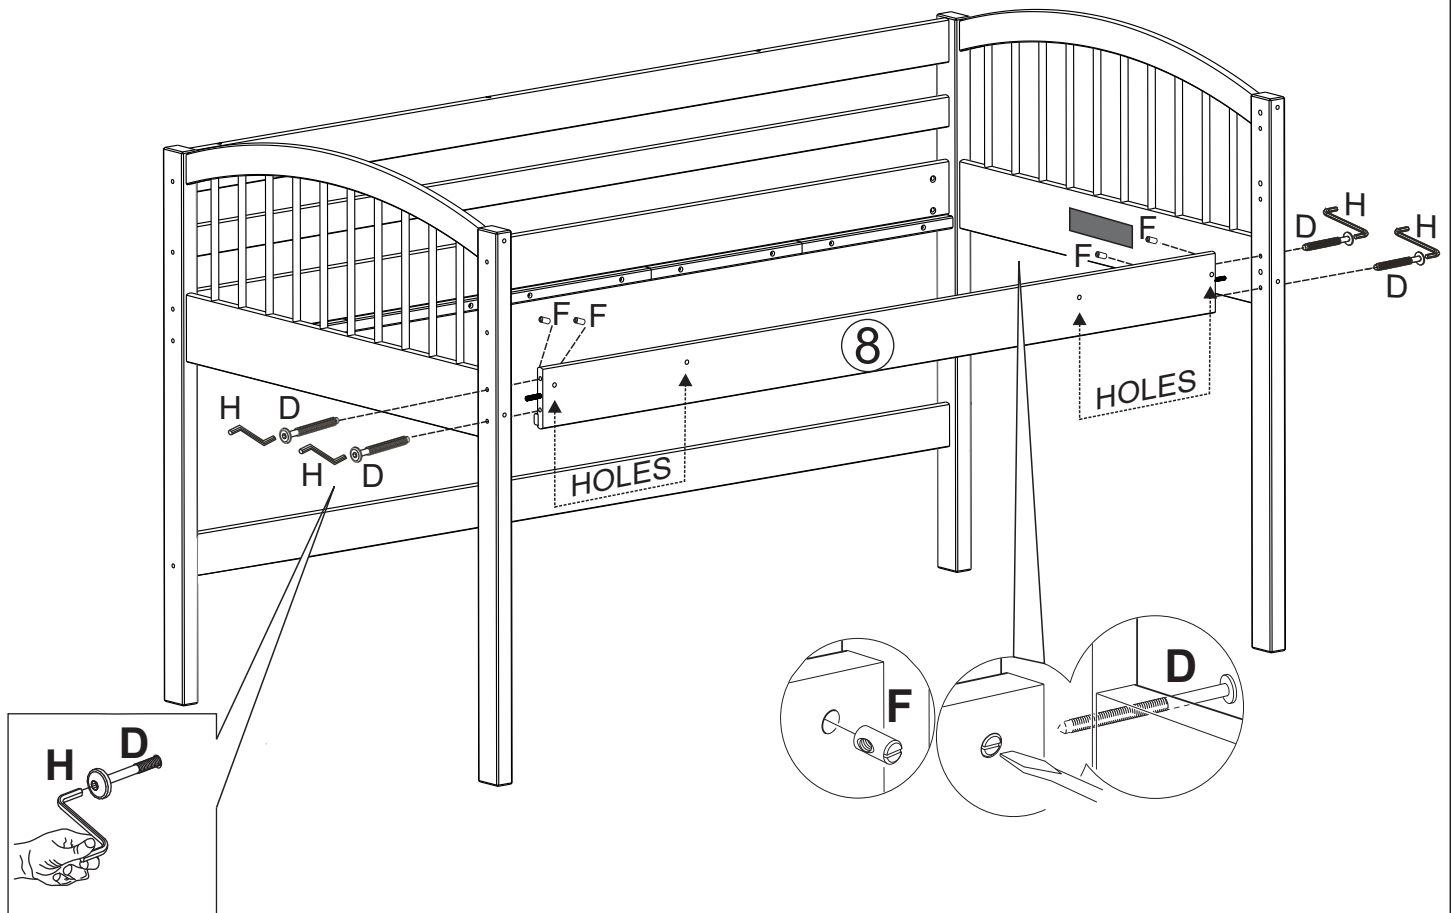

K  **06**
3,5 x 16 Flangeado

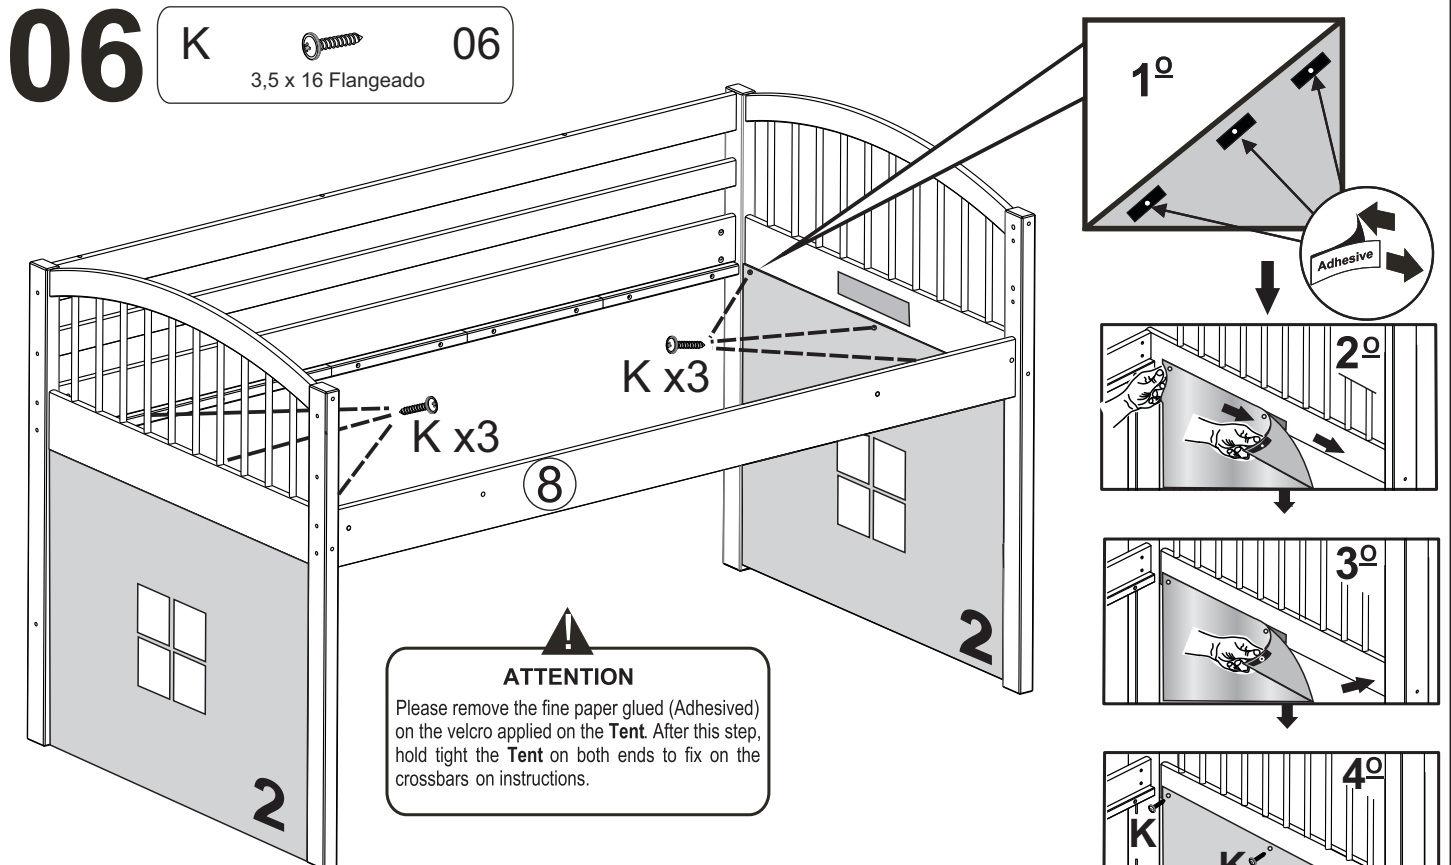







07

K



3,5 x 16 Flangeado

05

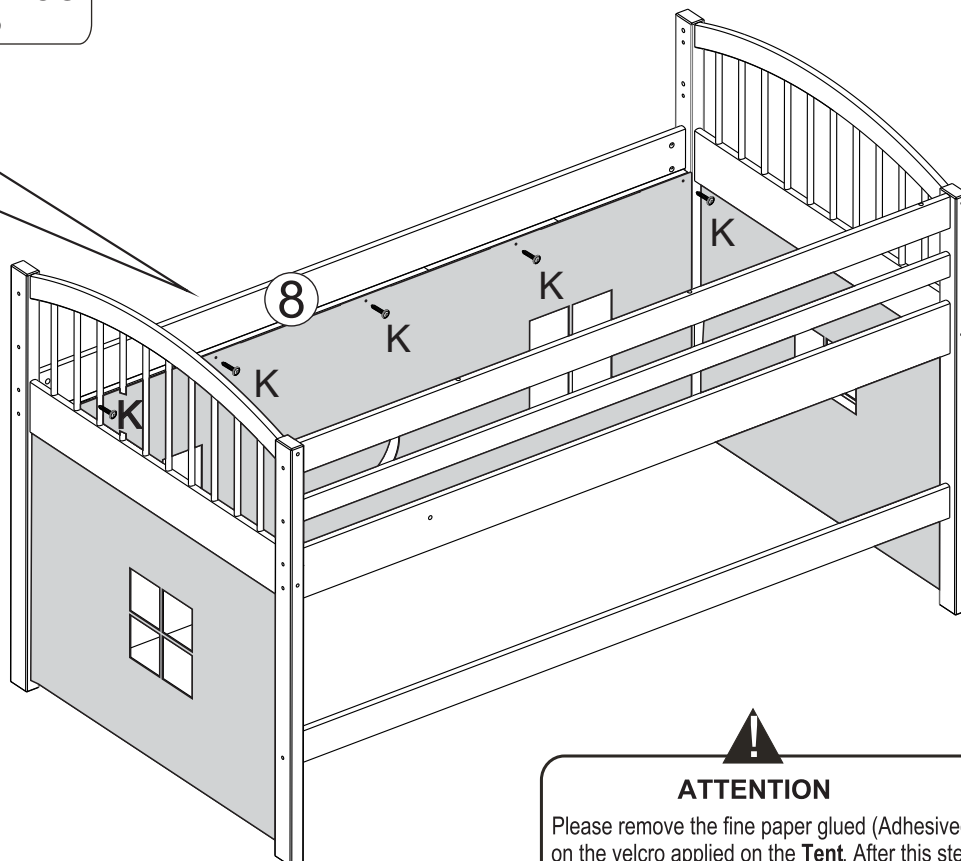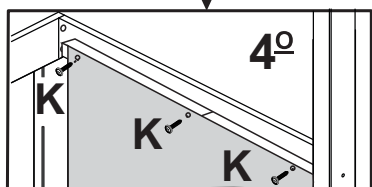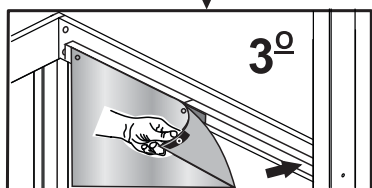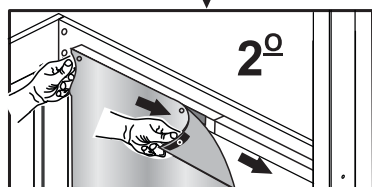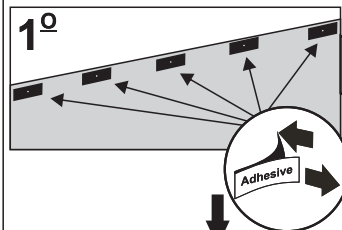

ATTENTION

Please remove the fine paper glued (Adhesived) on the velcro applied on the **Tent**. After this step, hold tight the **Tent** on front side rail like showing on instructions.

08

C




7 x 50 x 17mm

06

H



02

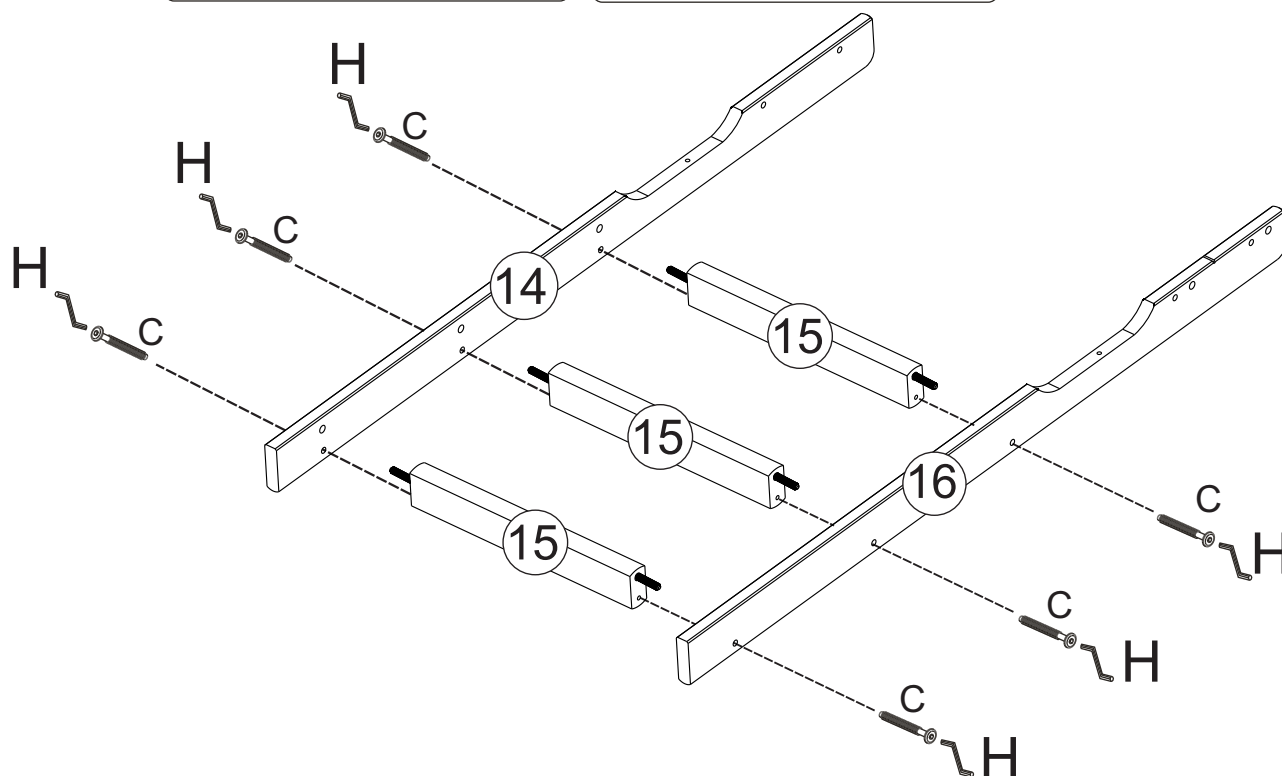

Loft w/Tent



09

B  02
7 x 80 x 17mm

H



01

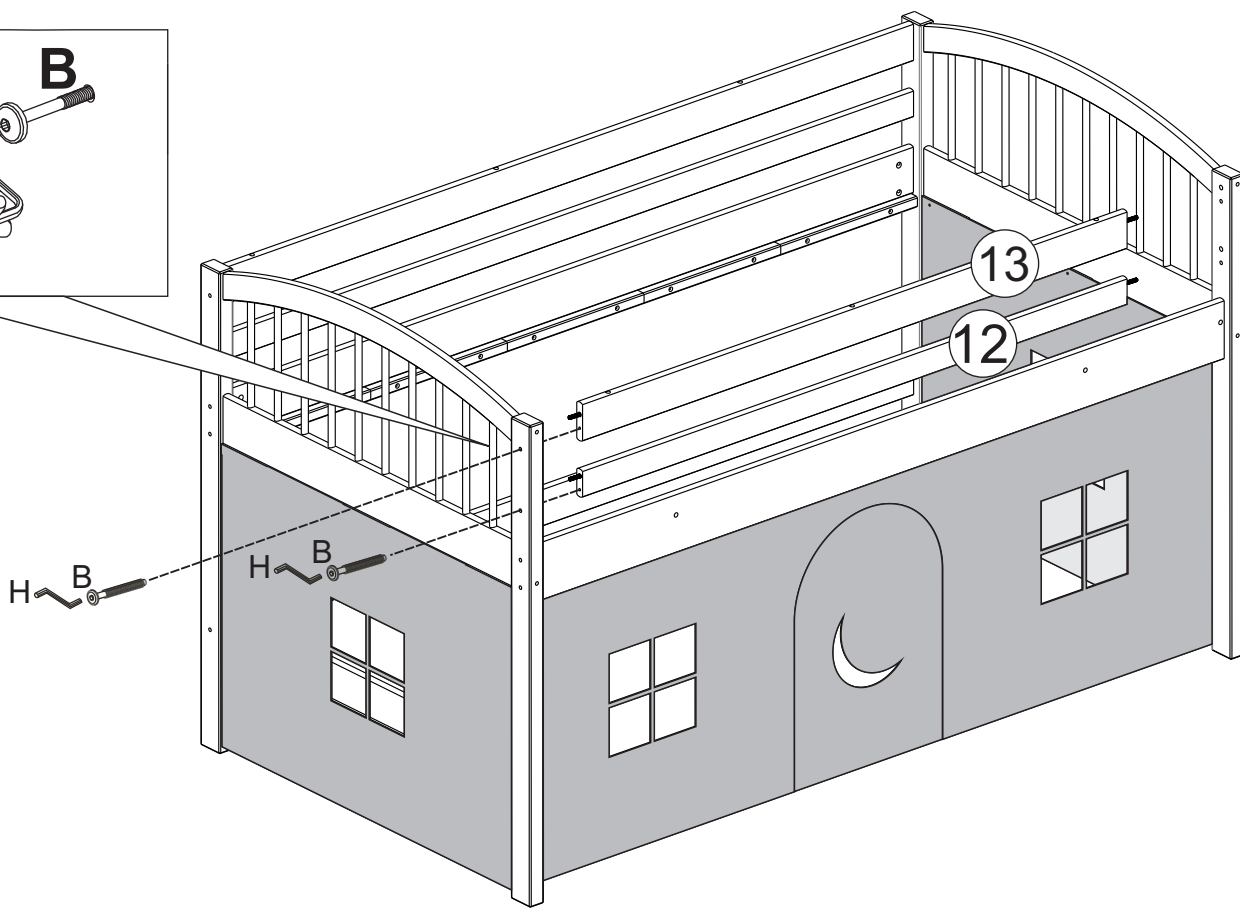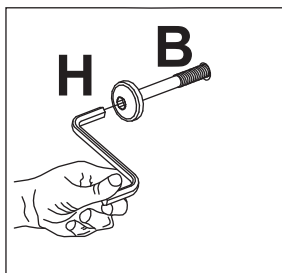


10

C  02
7 x 50 x 17mm

H



01

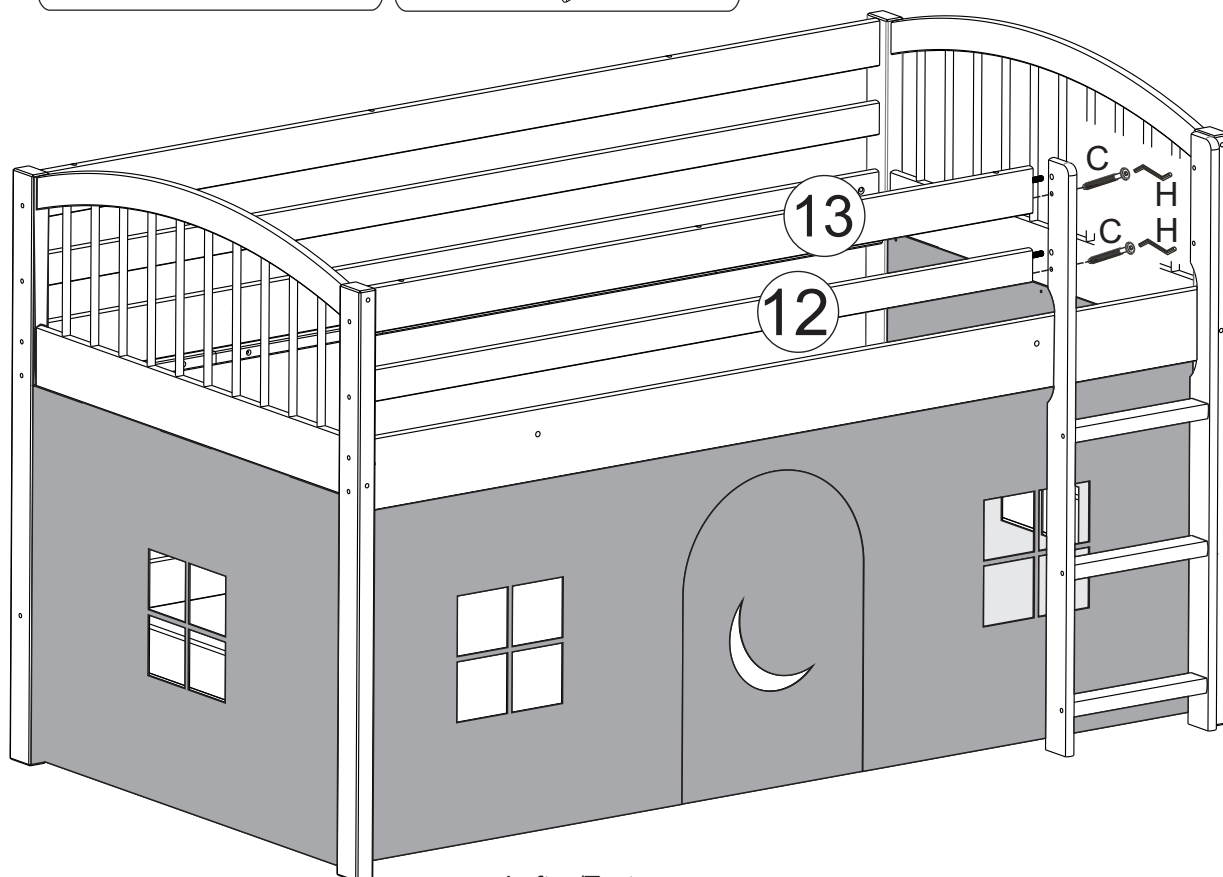





Loft w/Tent

11

C  02
7 x 50 x 17mm

I  02
3/16

H  02

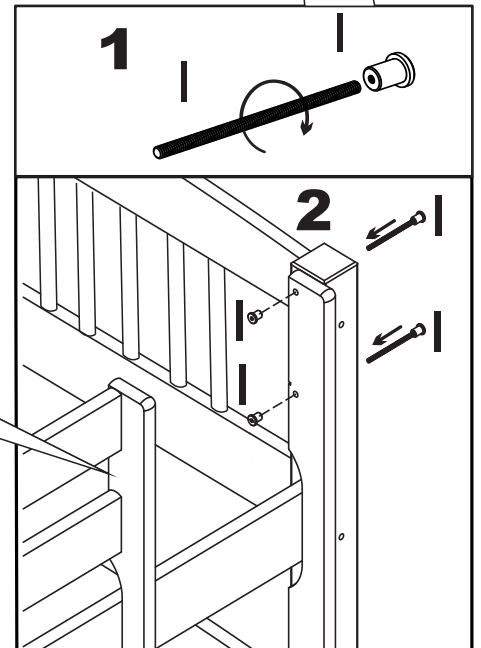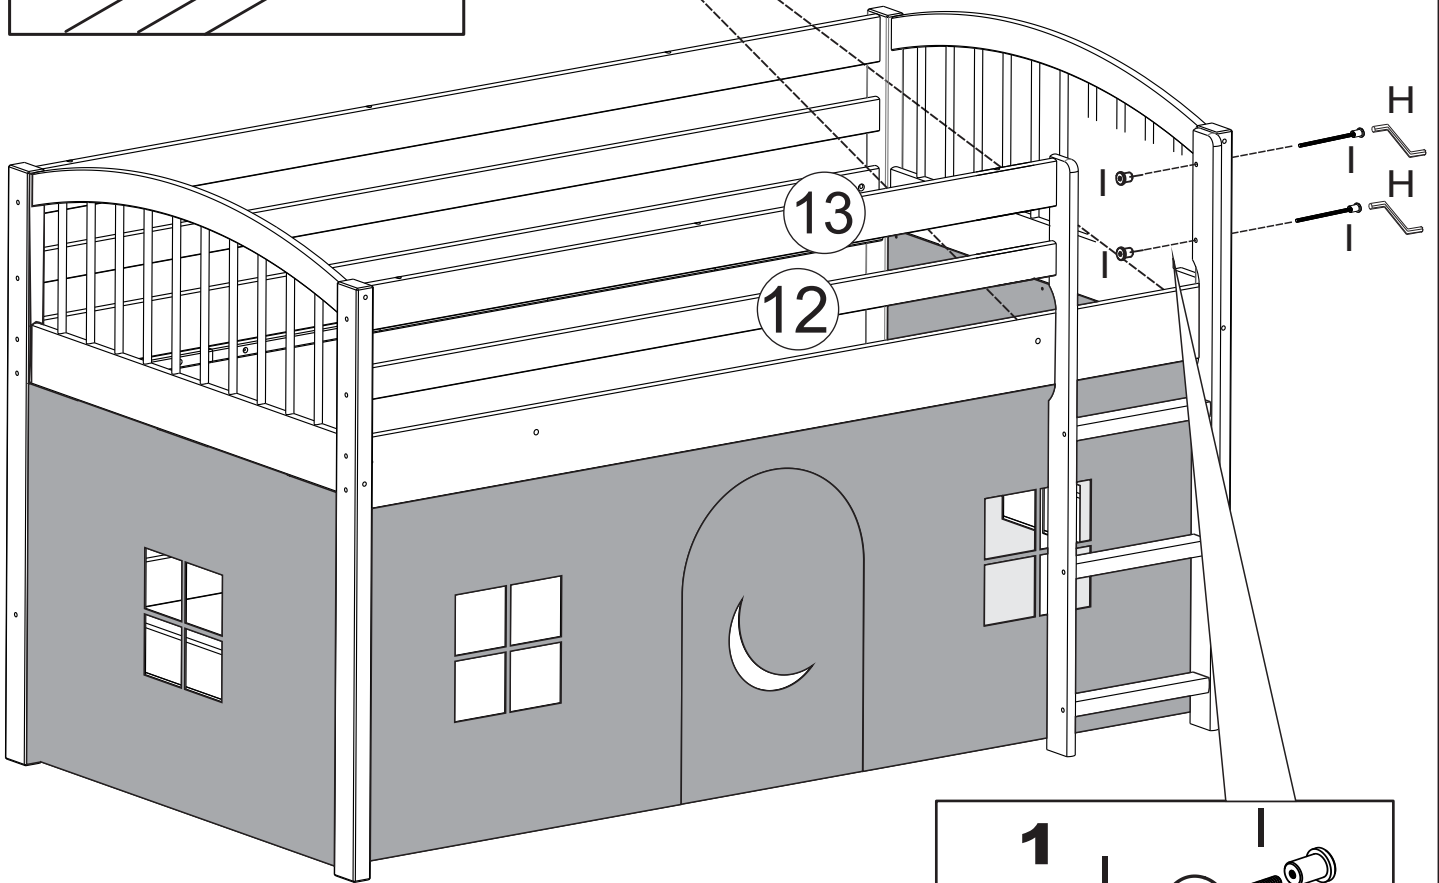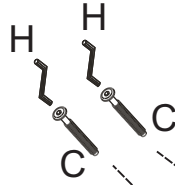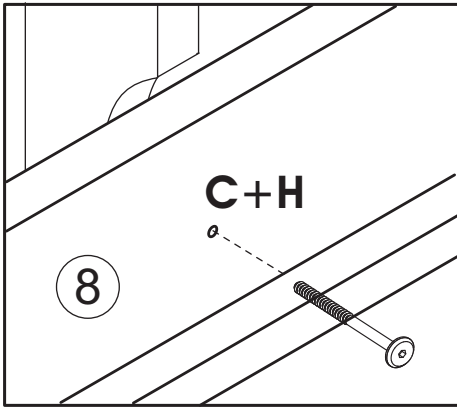

Loft w/Tent

12

G





4,0 x 35

26



The first slat must be fixed here at 3" from each headboard end.


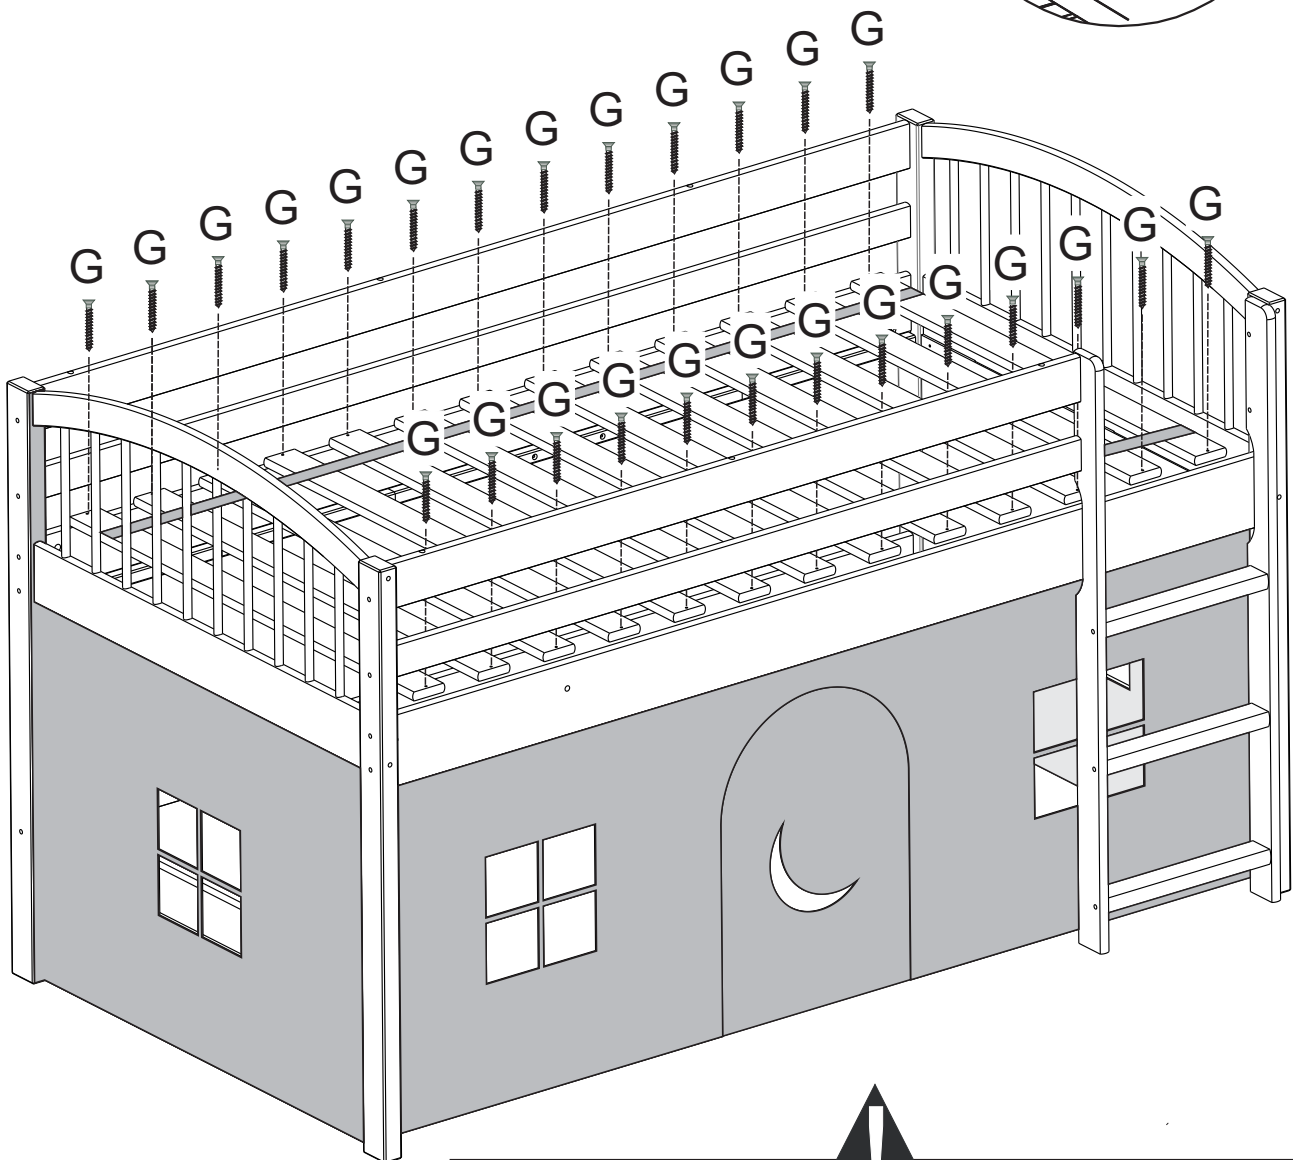
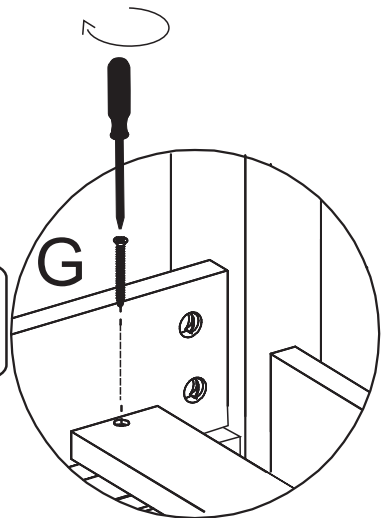


Install slat kit with spacer tape on top (Facing up).

13


J

03

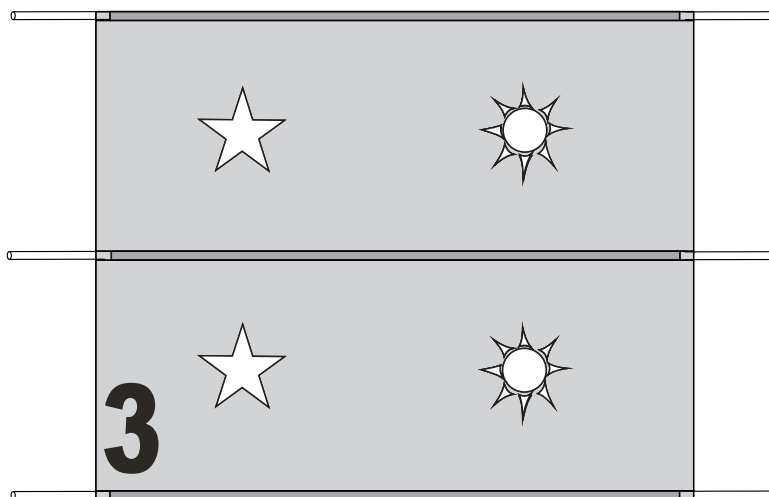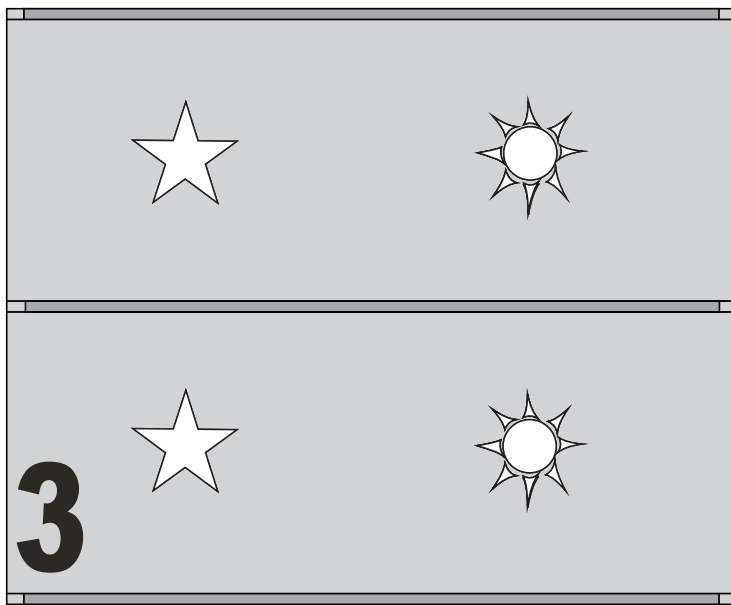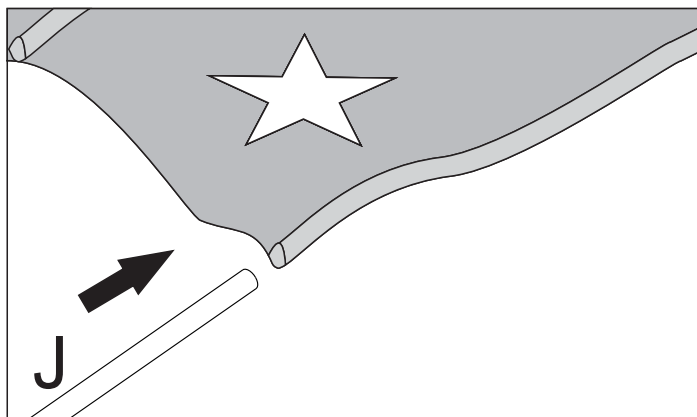




Loft w/Tent

14

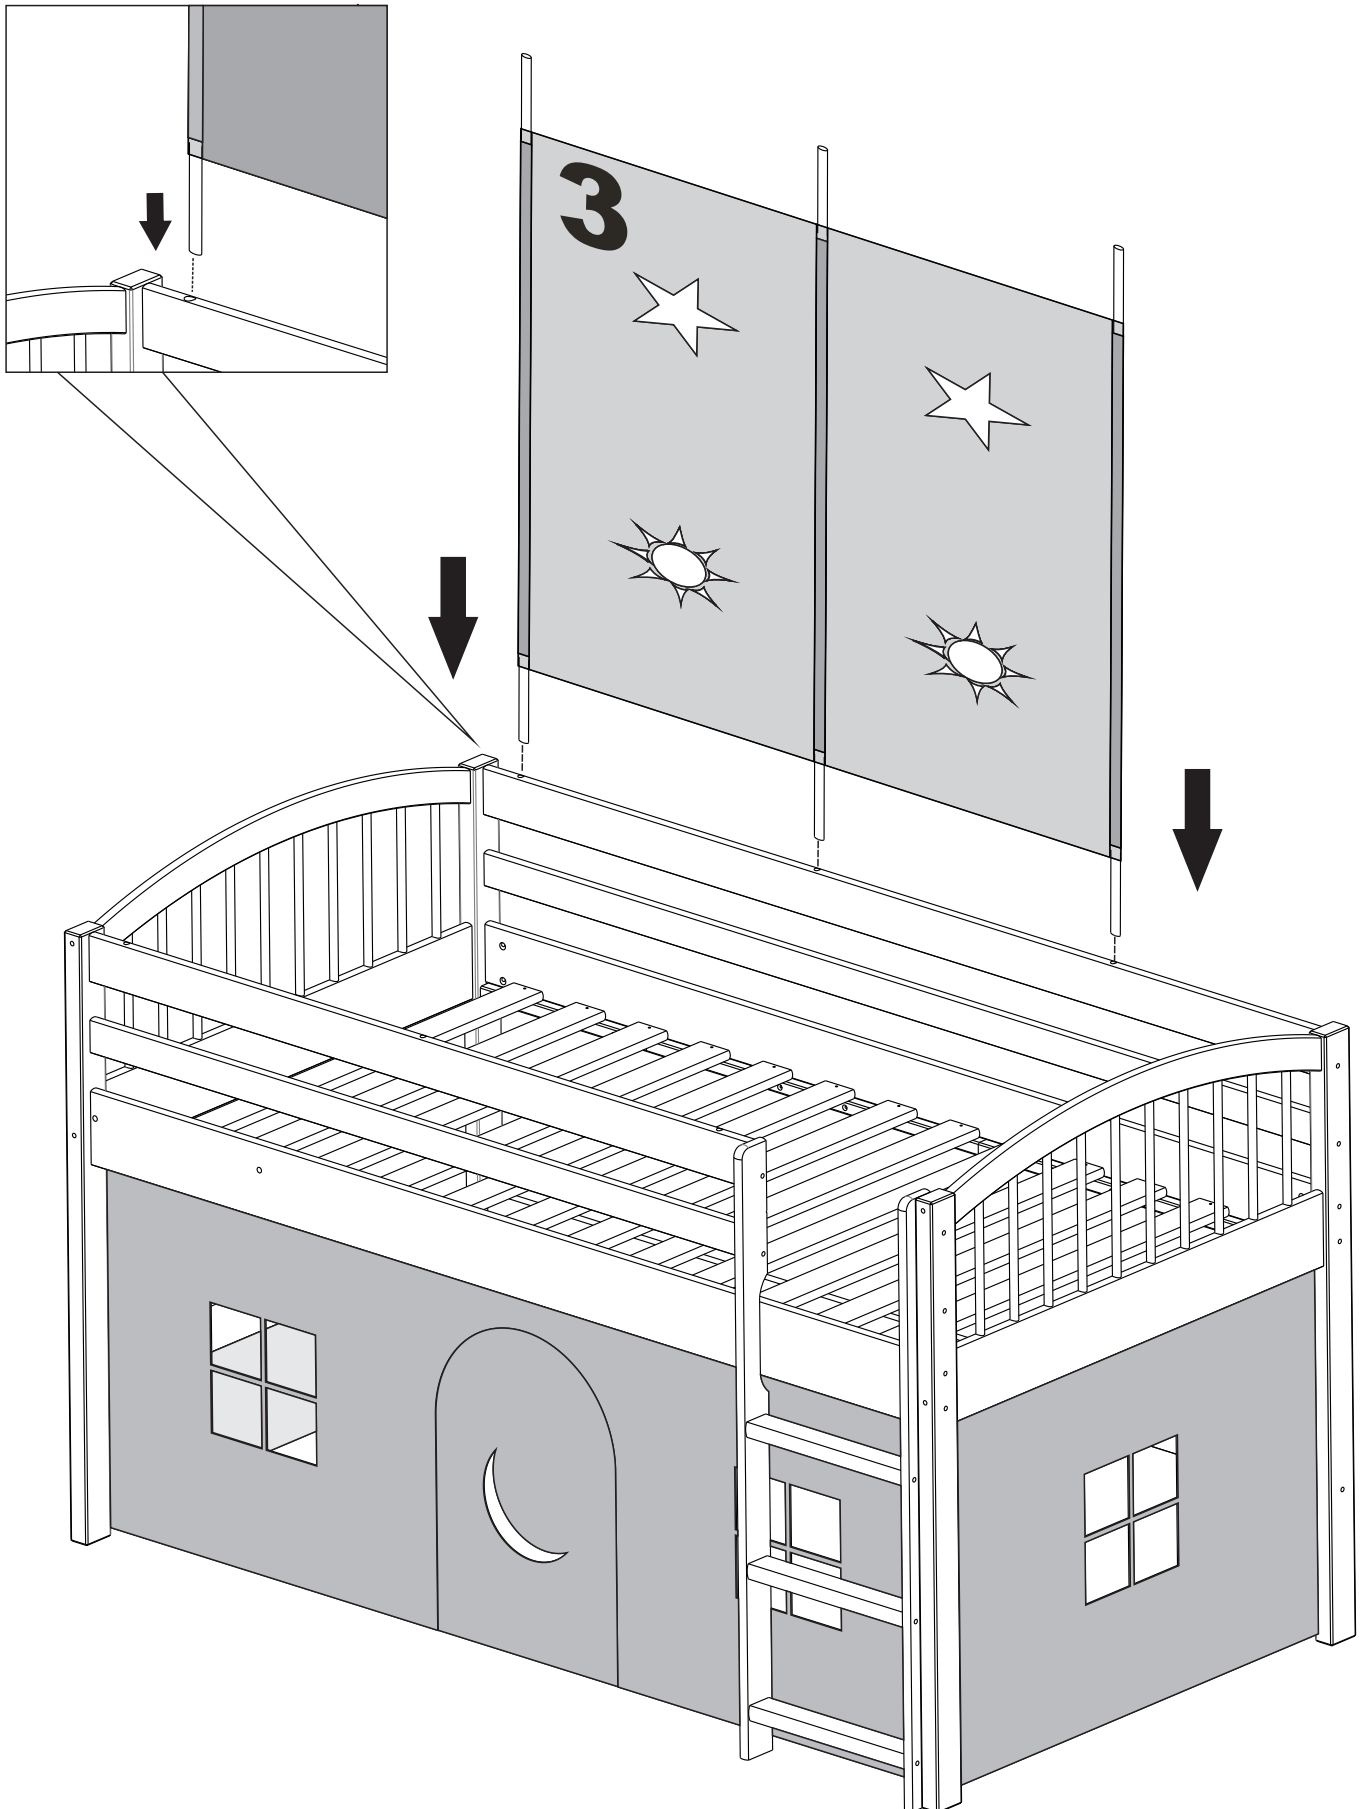

Loft w/Tent

15

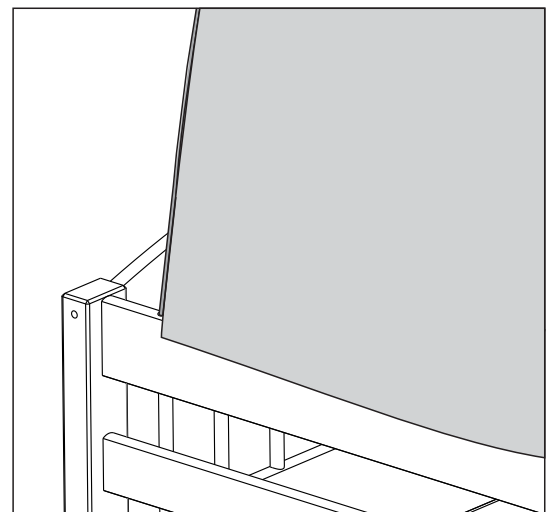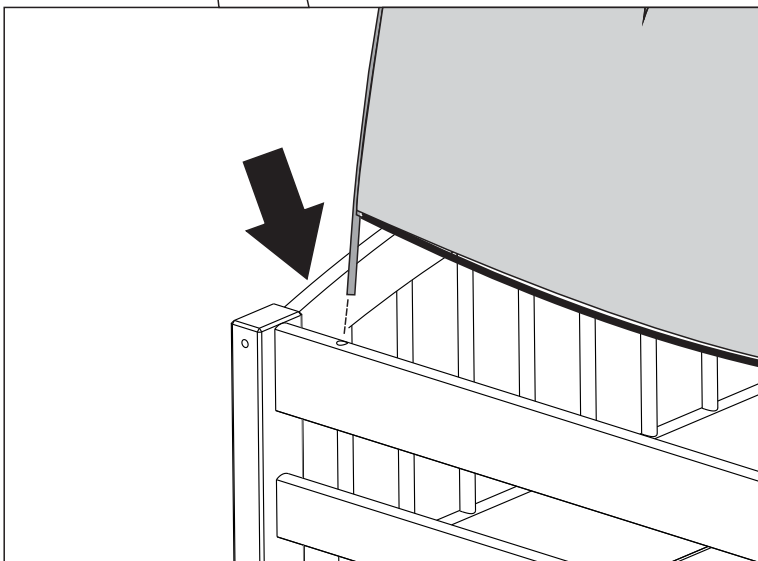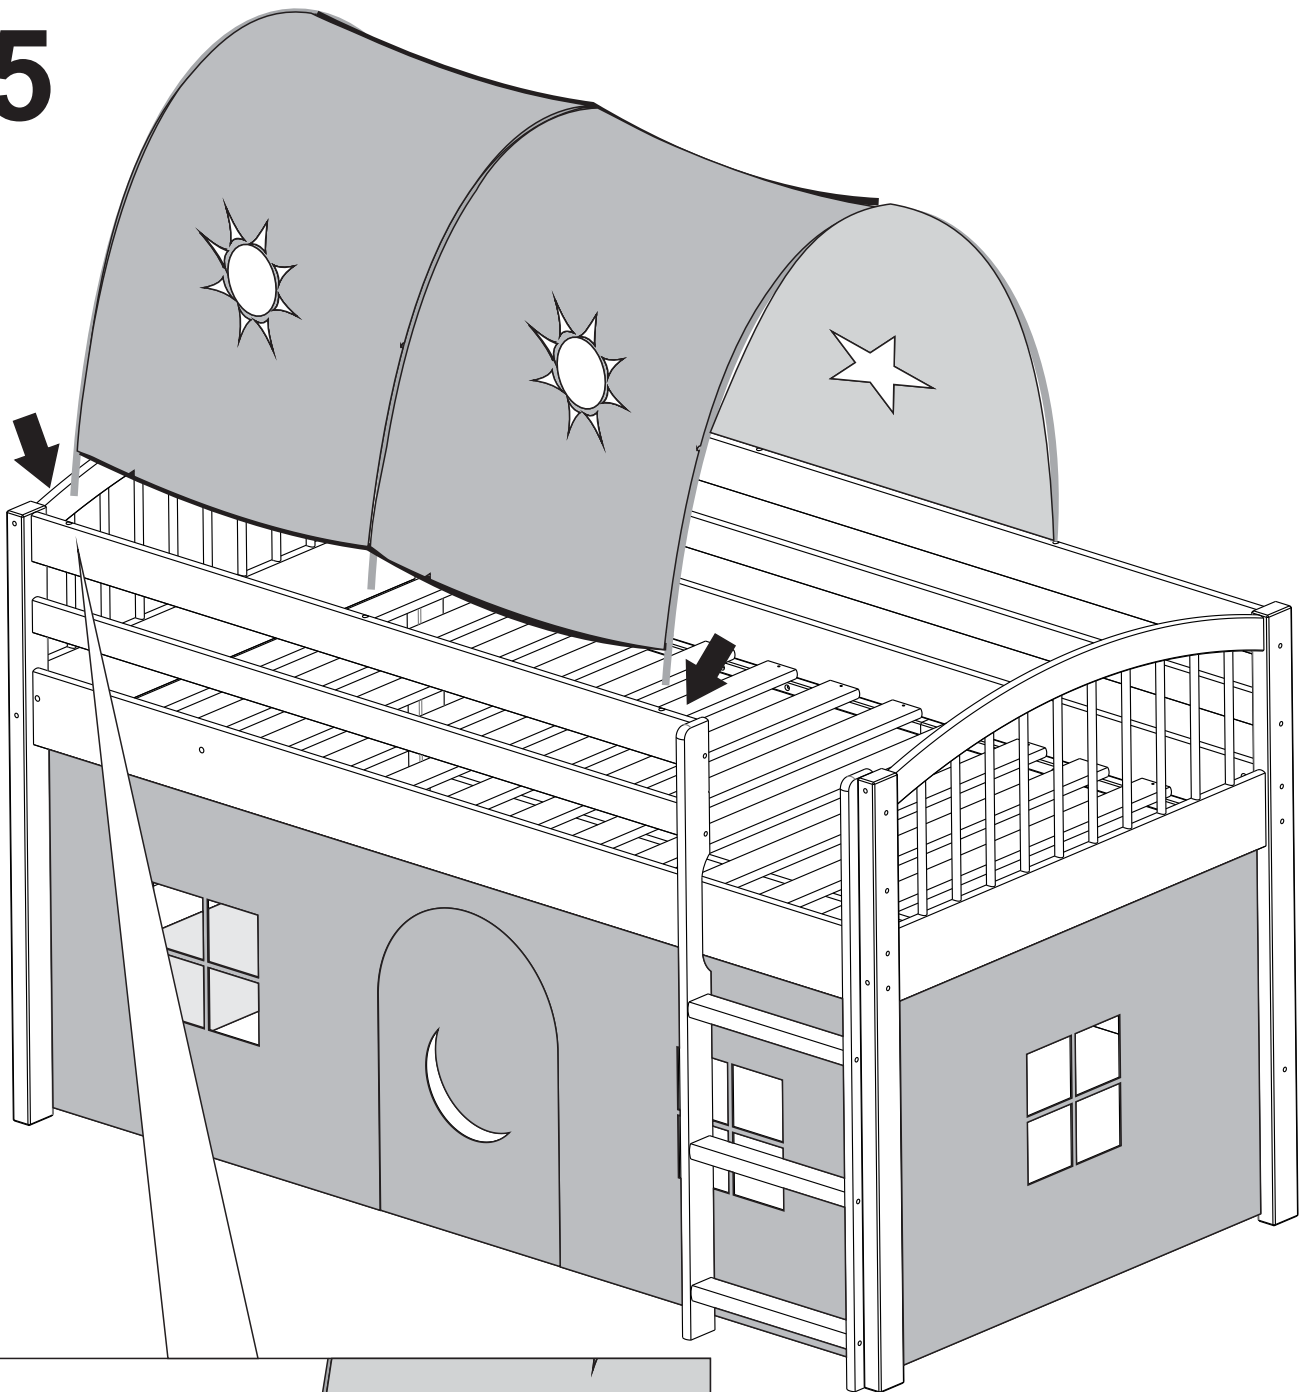

Loft w/Tent