
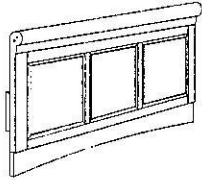







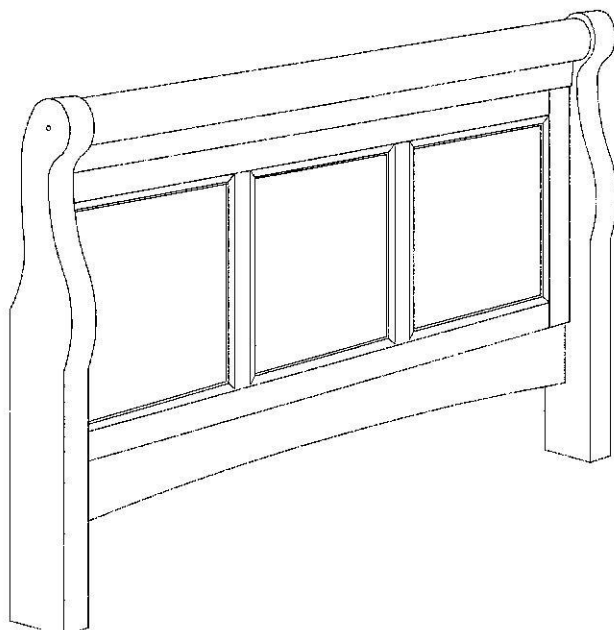


# ASSEMBLY INSTRUCTION

## QUEEN SLEIGH BED FOOTBOARD KING SLEIGH BED FOOTBOARD

<b>A</b> Footboard Panel  1 pc	<b>B</b> Footboard Leg with marking Left & Right  2 pcs	<b>C</b> JCBC Bolt M6 X 50mm  2 pcs
<b>D</b> JCBC Bolt M6 X 60mm  4 pcs	<b>E</b> Flat Washer M8 x 16mm  4 pcs	<b>F</b> Spring Washer 5/16"  6 pcs
<b>G</b> Wooden Button  2 pcs	<b>H</b> Allen Key M4  1 pc	<b>I</b> Wooden Dowel Ø10 X 30mm  4 pcs




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


### IMPORTANT NOTE :

1. Do not tighten all screws / bolts until all completely assemble.
2. Keep all hardware parts out of reach of children.


- 1** Insert Wooden Dowel (I) to the left & right holes at the Footboard Panel (A).

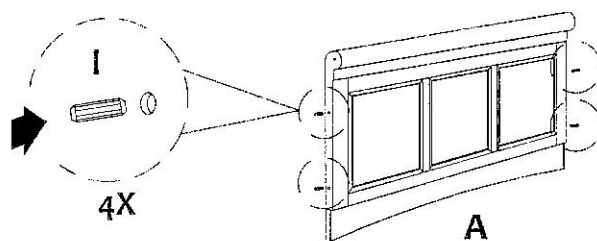

- 2** Attached Footboard Leg (B) to the Footboard Panel (A). Insert JCBC Bolt (D) and Spring Washer (F) to the holes and tighten using Allen Key (H). Cover the holes with Wooden Button (G). Repeat the same process to the other Footboard Leg (B).

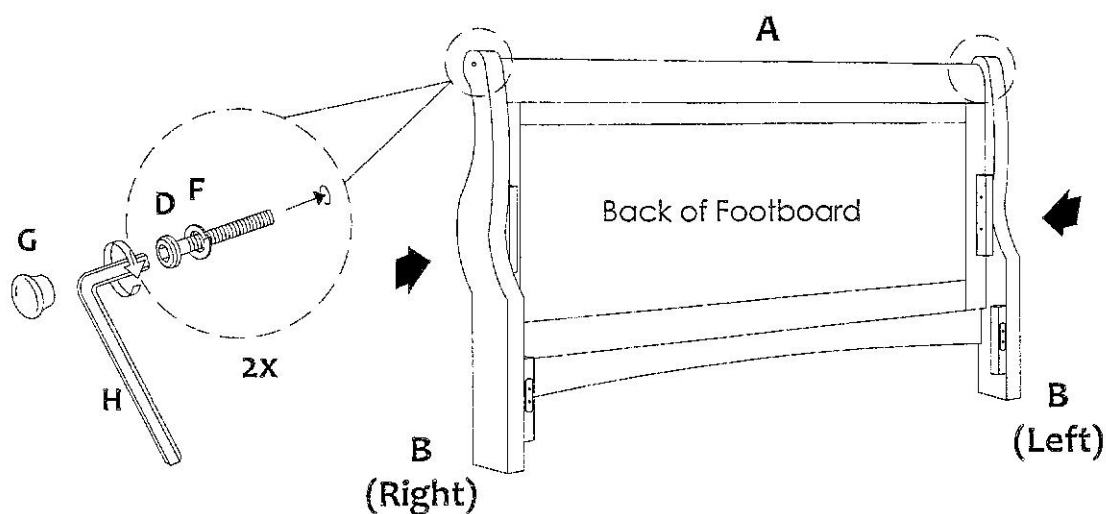

- 3** Insert JCBC Bolt (C), Spring Washer (F) and Flat Washer (E) to the holes at the back of Footboard and tighten using Allen Key (H).

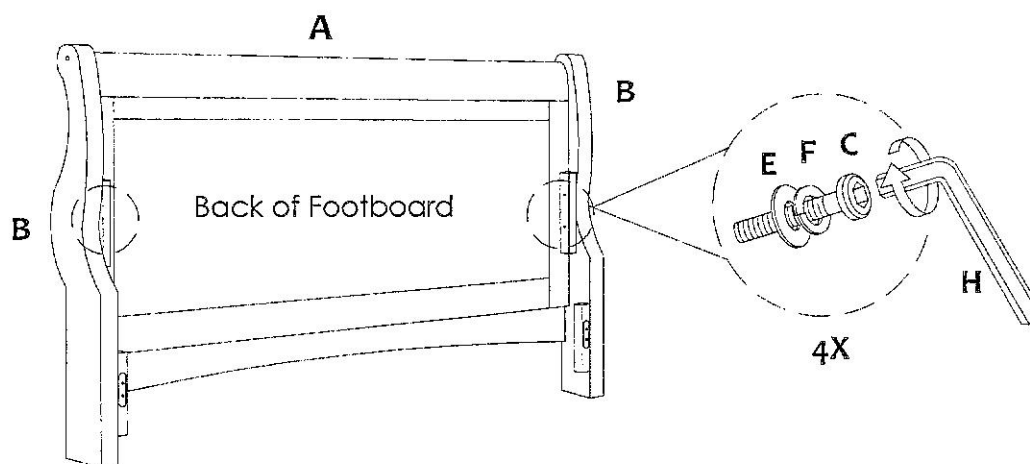

#### **CLEANING & CARE**

Treat surface with care. Surface is resistant to scratches but is not scratches resistant. Clean surface with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.