


ASSEMBLY INSTRUCTION FULL BED

Before you begin, please read Assembly Instruction carefully and recognized the part and hardware. Then follow them step by step.


Page : 1 OF 1

STEP 1.

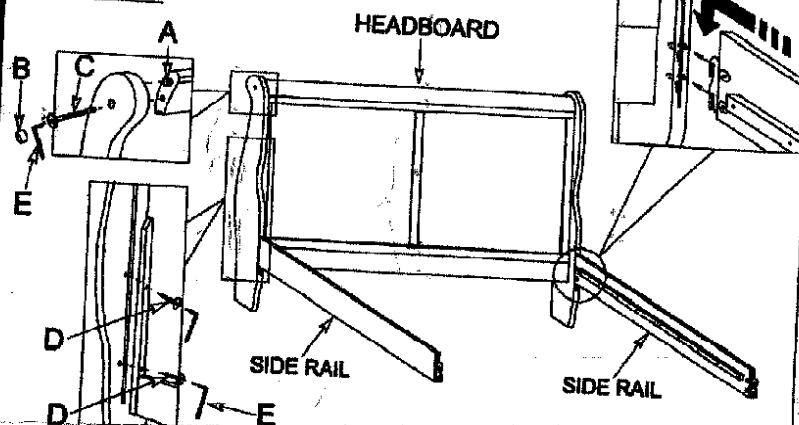

TIPS : Insert the Side Rail into the hole of Headboard.

STEP 2.

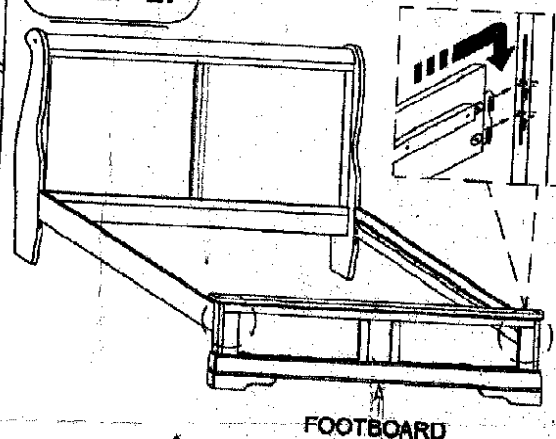

TIPS : Insert the Side Rail into the hole of Footboard.

HARDWARE PART 1


NO	HARDWARE DESCRIPTION	QTY
A.	Wood Dowel M12 x 50mm	2PCS
B.	Wood Bottom M15 x 9mm	2PCS
C.	Bolt M6 x 50mm	2PCS
D.	Bolt M6 x 35mm	4PCS
E.	Allen Key	1PC

HARDWARE PART 2

NO	HARDWARE DESCRIPTION	QTY
F.	Screw M4 x 32mm	28PCS
G.	Bolt M6 x 35mm	10PCS
H.	Adjuster M6 x 24mm	2PCS


STEP 3.

TIPS : Rotate the drawer slat support and tighten using with Allen Key. Attach the drawer support and slat support to footboard and fasten with JCBC Bolt M6 x 35mm.

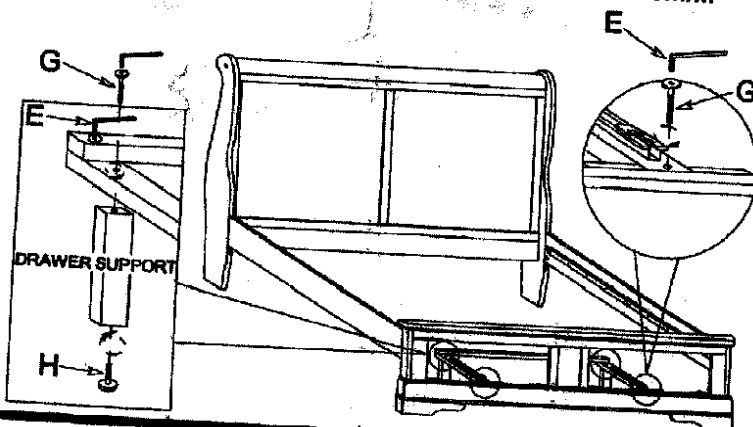

STEP 4.

TIPS : Attach the Bed Slat to the Side Rail. Fasten the Bed Slat by tighten screw through the pre-drilled hole of Bed Slat.

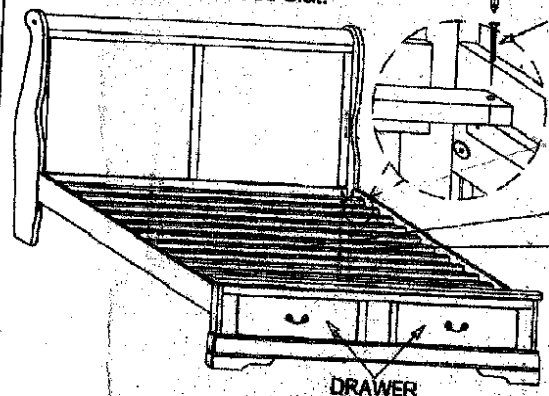

a. TIPS : Rotate the slat support and tighten using with Allen Key.

