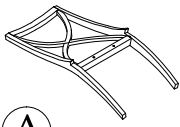
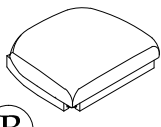







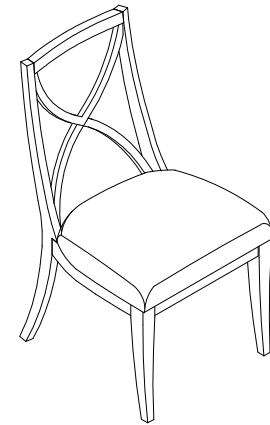


Dining Room Assembly Instructions


Made in Viet Nam

Components and Hardware List (for one chair)

Chair Back  (A) 1 pc.	Chair Seat  (B) 1 pc.	Front Leg  (C) 2 pcs.	M5/16"-18 x 3-1/8" Allen Head Bolt  (D) 4 pcs.
M5/16"-18 x 1-3/4" Allen Head Bolt  (E) 2 pcs.	M5/16"-18 x 2-1/8" Allen Head Bolt  (F) 4 pcs.	5/16" Spring Washer  (G) 10 pcs.	5/16" x 19 x 2mm Flat Washer  (H) 10 pcs.
5mm Allen Wrench  (I) 1 pc.	Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.		



X Back UPH Side Chair

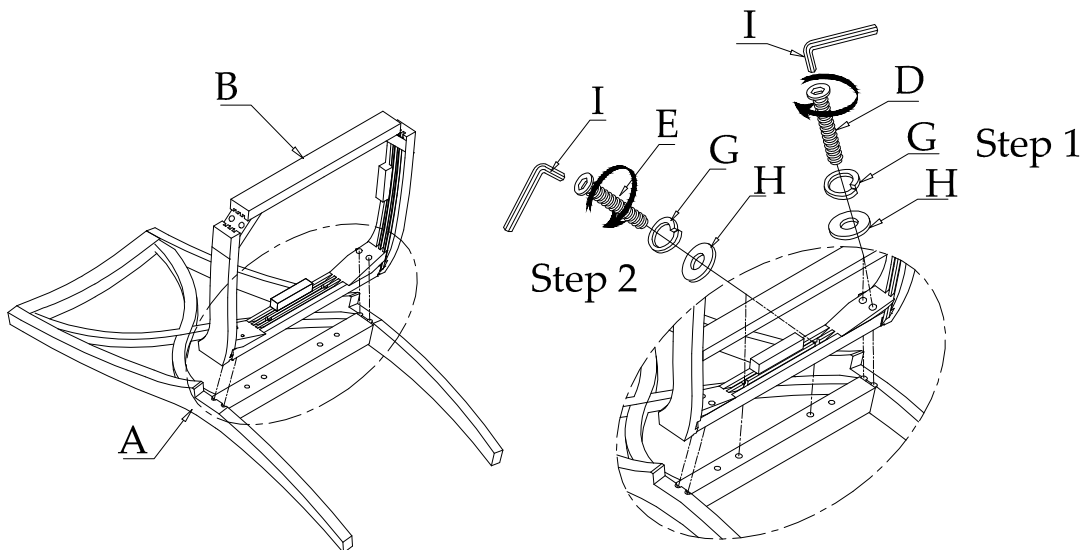


Steps:

1. Place the Chair Back Assembly (A) on a soft surface such as a blanket or carpet.
2. Attach Chair Seat (B) to the Back Assembly by using the 3-1/8" long Bolt (D) Spring Washer (G) and Flat Washer (H) into the back corners of the Seat and 2" long Bolt (E) Spring Washer (G) and Flat Washer (H) into the middle of the Seat, as shown. **Do not fully tighten Bolts until after next step.**

Dining Room
Assembly Instructions

Made in Viet Nam

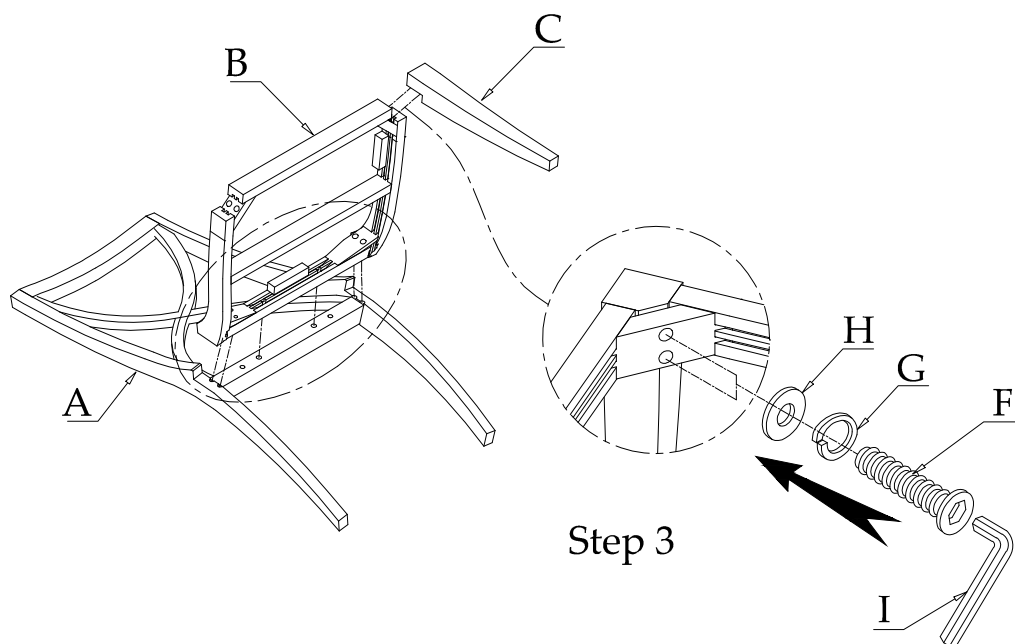

3. Attach the Front Legs (C) to the Chair Seat (B) by using the 2-1/8" long Bolts (F), Spring Washer (G) and Flat Washer (H) as shown in **Step 3**.
4. Turn the Chair upright on a flat surface to level chair and tighten all Bolts using the Allen Wrench (I).

