


HEADBOARD

ASSEMBLY INSTRUCTIONS

HEADBOARD COMPONENTS

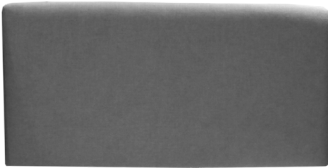

(1) Headboard*

*images may vary from actual product



(2) wings*



(2) headboard legs

HEADBOARD & WINGS HARDWARE

You will need:


- flat head screwdriver
- pliers



(20) 1 1/4" washers



(4) 1/4" nuts



(8) 3" x 5/16" bolts

*Open all hardware packets
in both packages before
starting assembly.



(4) 5/8" x 5/16" bolts



(4) 1" x 1/4" bolts

LIMITED WARRANTY


We guarantee our upholstered furniture against defects in construction for a period of one (1) year.

When a structural defect is brought to our attention, we will repair or replace it at our option at no charge to the customer (includes parts and labor, not transportation costs).

Fabric wearability for upholstered furniture is not covered by the warranty. Vacuum for regular cleaning.

PLEASE DISPOSE OF PLASTIC BAG (S) AND CARTON (S) RESPONSIBLY.


STEP 1

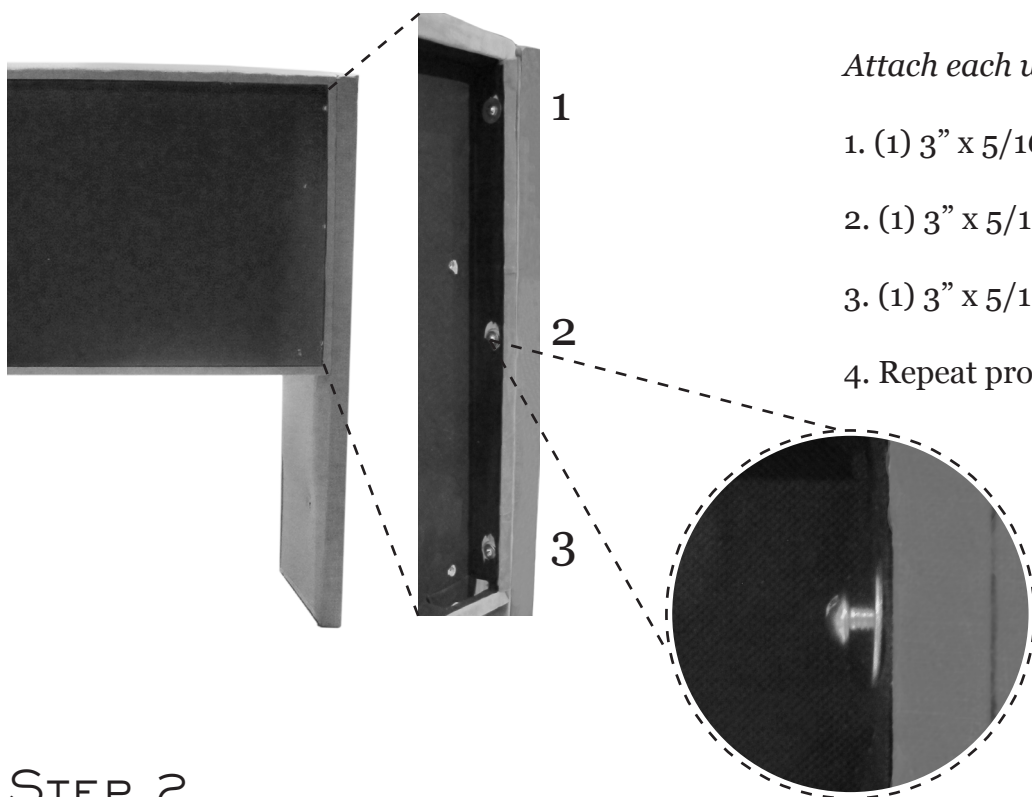

Attach each wing to headboard using:

1. (1) 3" x 5/16" bolt and (1) 1 1/4" washer
2. (1) 3" x 5/16" bolts and (1) 1 1/4" washer
3. (1) 3" x 5/16" bolts and (1) 1 1/4" washer
4. Repeat process for the other wing.

STEP 2

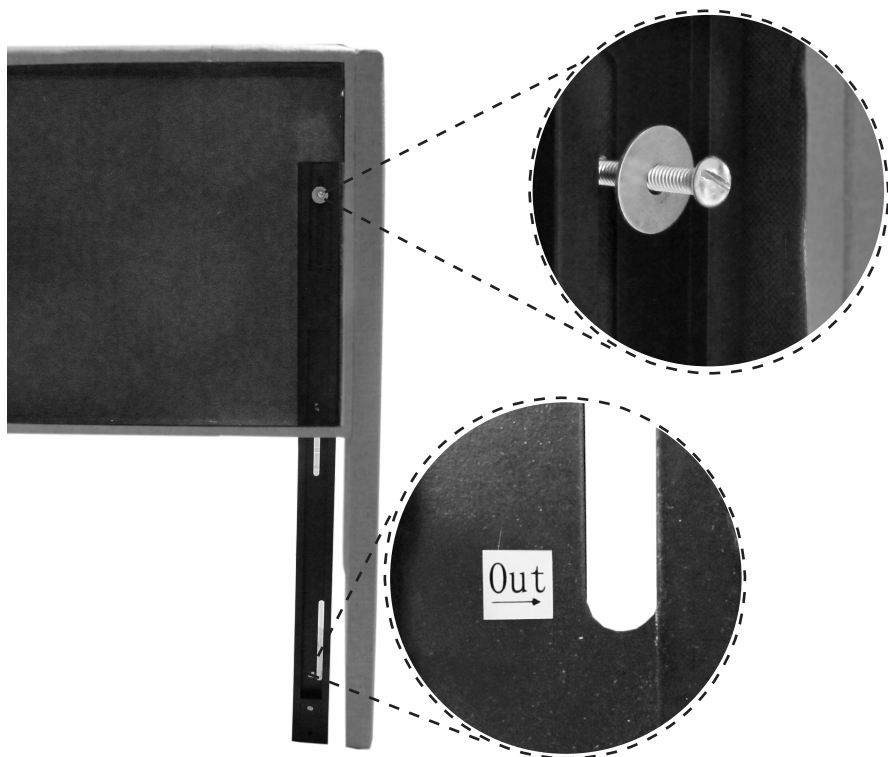

Insert legs through the holes in the headboard. Make sure that you place the correct leg facing "Out."

Attach each metal leg to the headboard using (2) 5/8" x 5/16" bolts and (2) 1 1/4" washers for each leg.

Note: Additional hardware included to attach headboard to standard bed frame.