


TV STAND

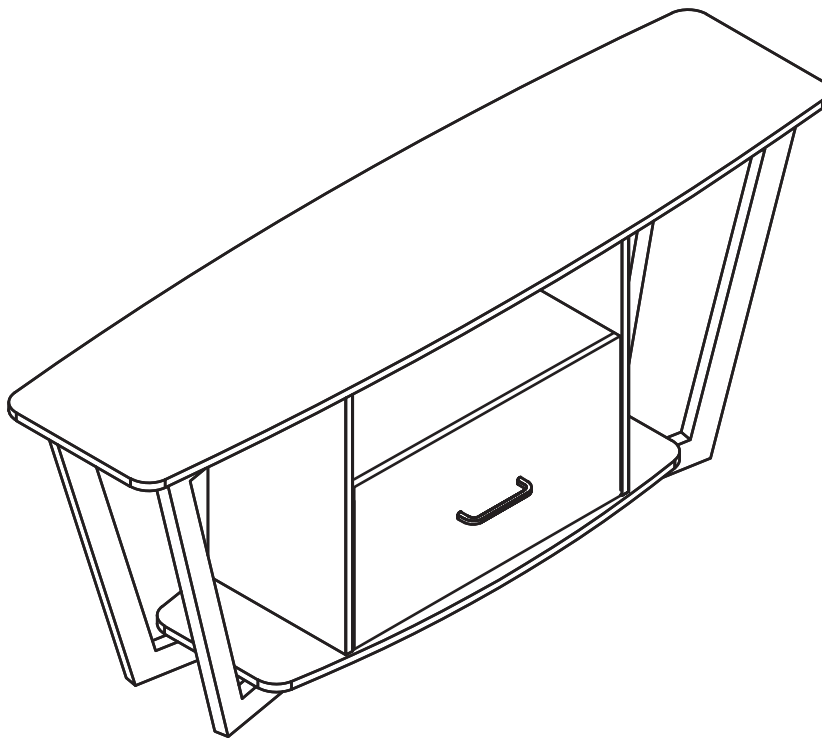

ASSEMBLY INSTRUCTIONS

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish . Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .














Please do not return to the store

Broken or missing parts?





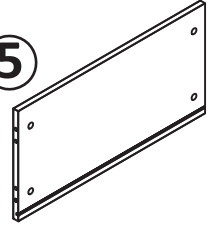
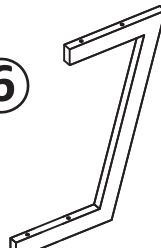
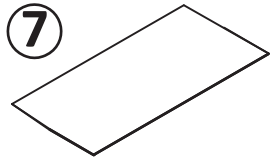
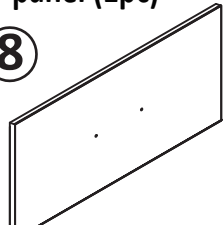
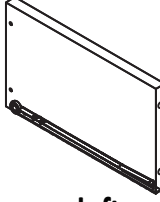
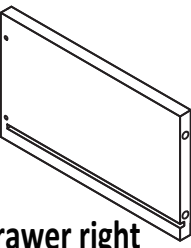
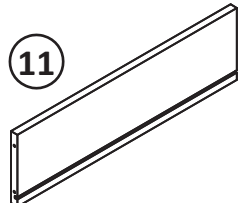
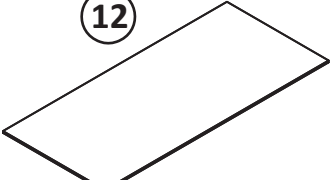
Need help with assembly?

If you have any questions just call or email us.

Hardware List


A 	B 	C 	D 
Cambolt (12pcs)	Camlock (12pcs)	Wood dowel (12pcs)	Bolt (16pcs)
E 	F 	G 	H 
Short screw (4pcs)	Long screw (4pcs)	Foot (4pcs)	Knob (1pc)
I 	J 	K 	Glue : For securing please apply to wood dowel first before inserting into panel .
Knob screw (2pcs)	Allen wrench (1pc)	Glue (1pc)	

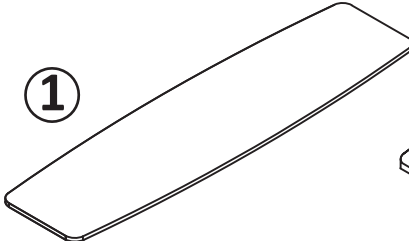Panel List


1 	2 	3 	4 
Top panel (1pc)	Bottom panel (1pc)	Left support panel (1pc)	Right support panel (1pc)
5 	6 	7 	8 
Middle panel (1pc)	Leg (4pcs)	Back panel (1pc)	Drawer front panel (1pc)
9 	10 	11 	12 
Drawer left panel (1pc)	Drawer right panel (1pc)	Drawer back panel (1pc)	Drawer bottom panel (1pc)

*Please count and verify all parts before assembly . *

Assembling the unit with camlocks and wood dowels.

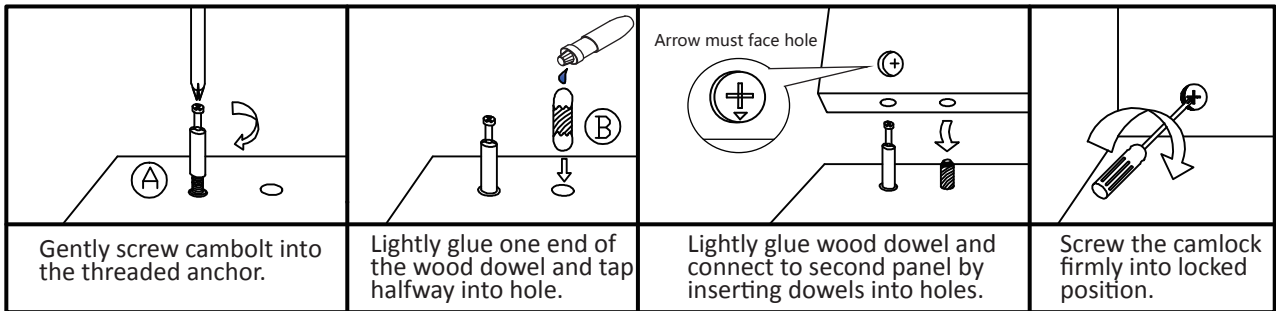


Exploded Views

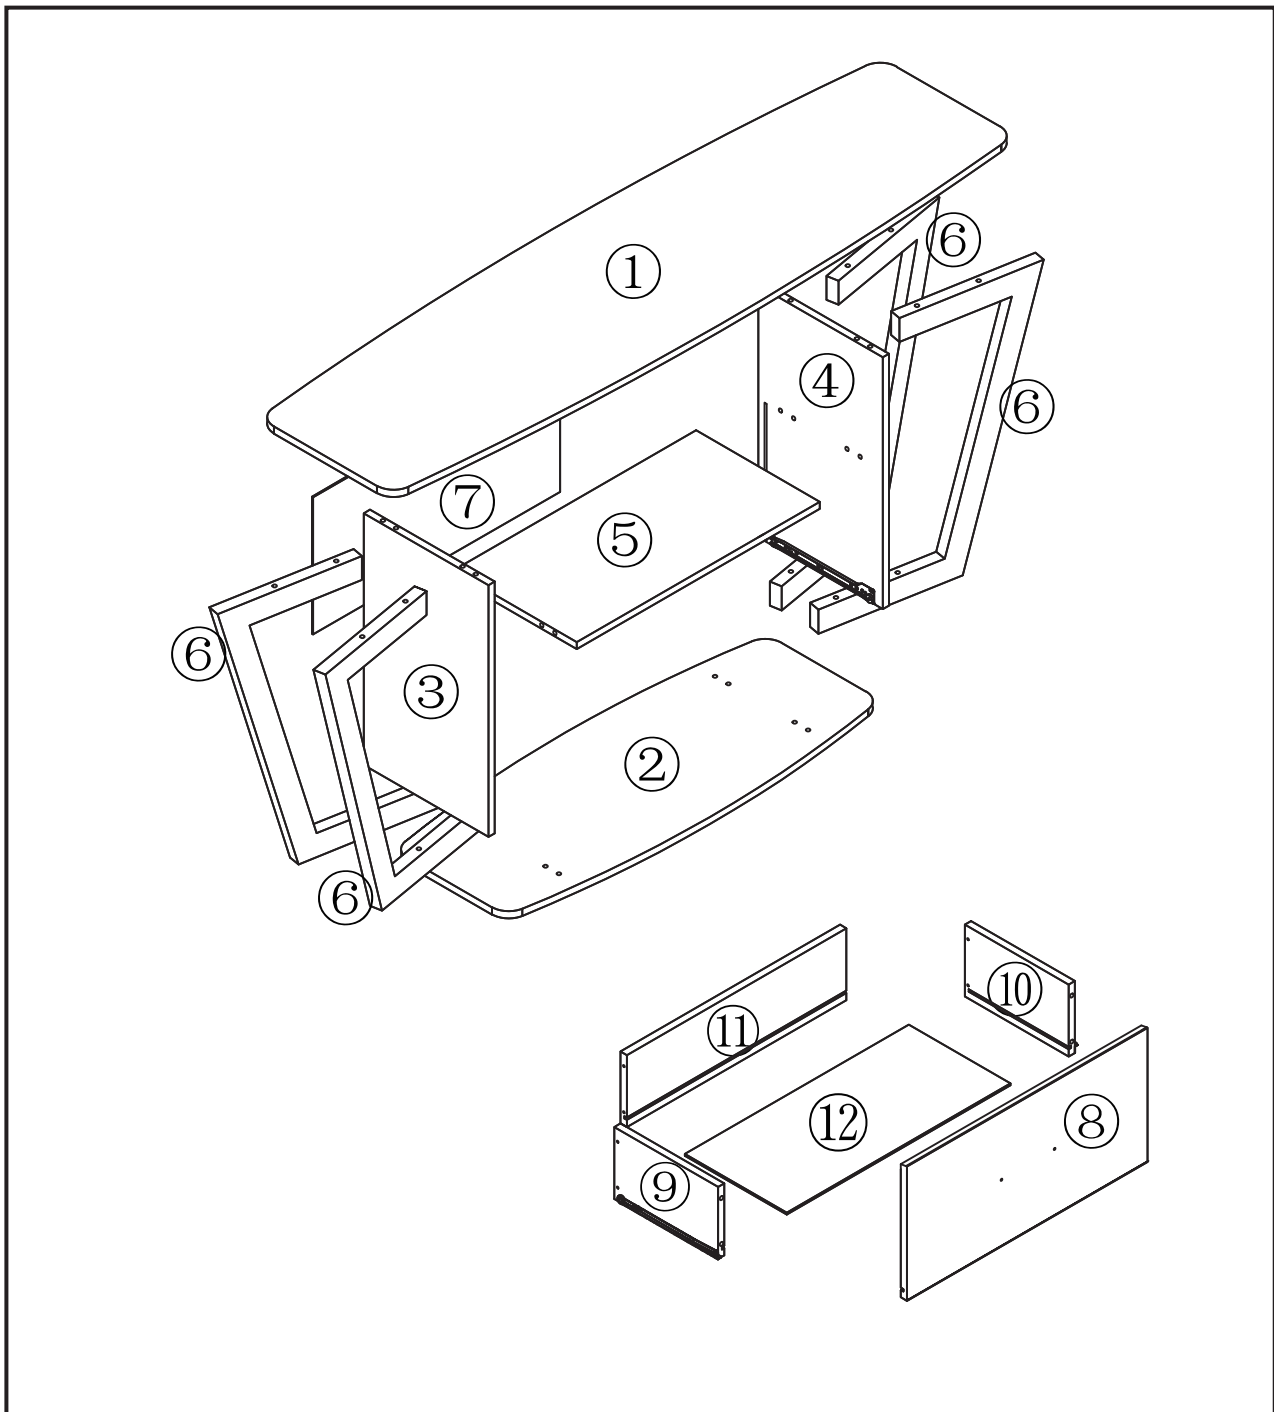

Step 1

*Assemble unit on carpet or flat surface.

- 1.Screw cambolts (A) and wood dowels (C) into right support panel (4) .
- 2.Attach middle panel (5) to right support panel (4) using camlocks (B) , make sure to not overtighten .

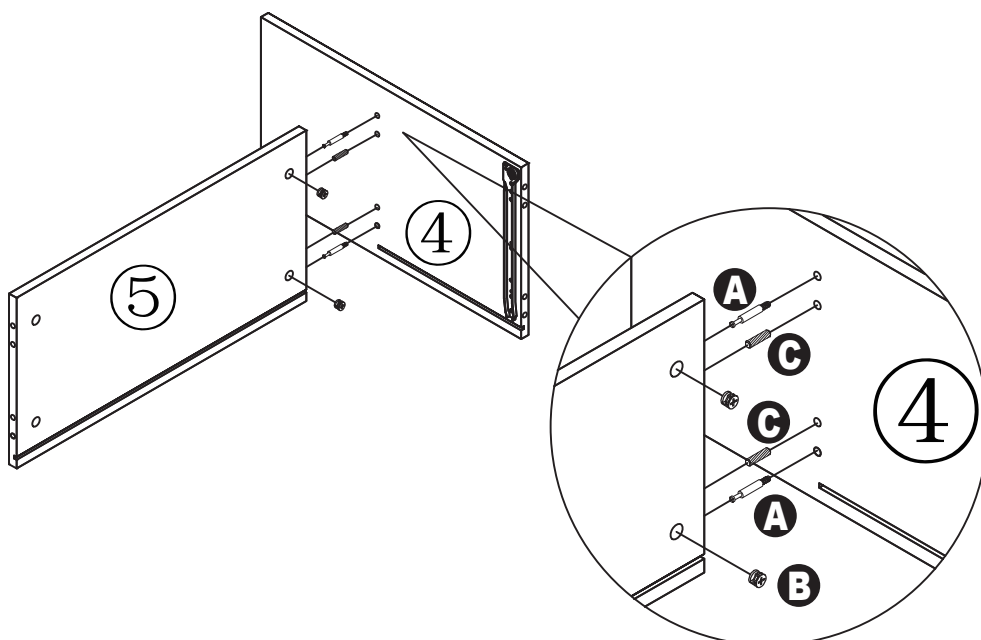

x 2




x 2



x 2

Step 2

- 1.Screw cambolts (A) and wood dowels (C) into left support panel (3) .
- 2.Attach left support panel (3) to assembly using camlocks (B) , gently tighten camlocks.

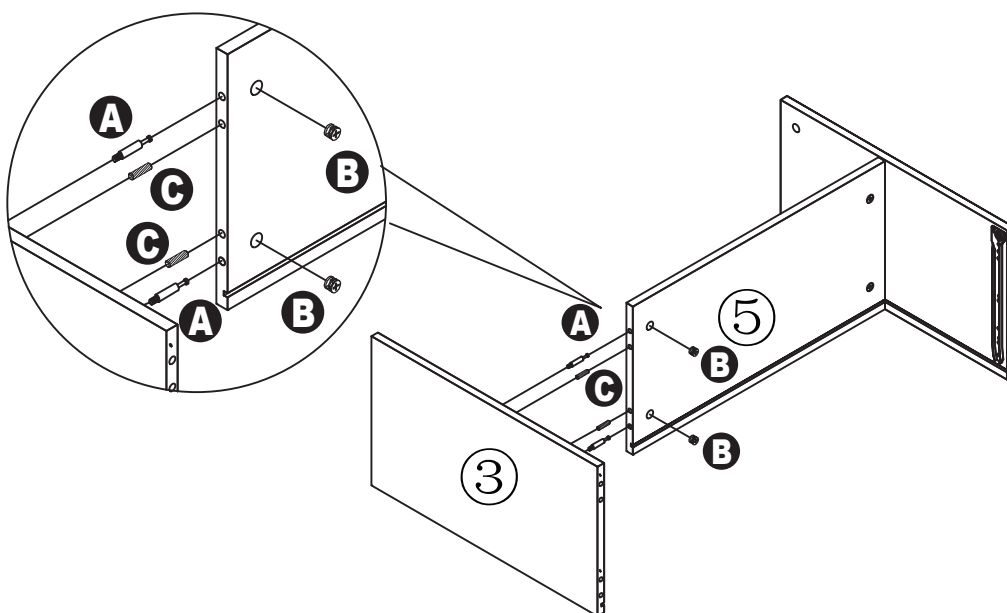

x 2




x 2



x 2



Step 3

1. Slide back panel ⑦ into grooves of assembly as shown.

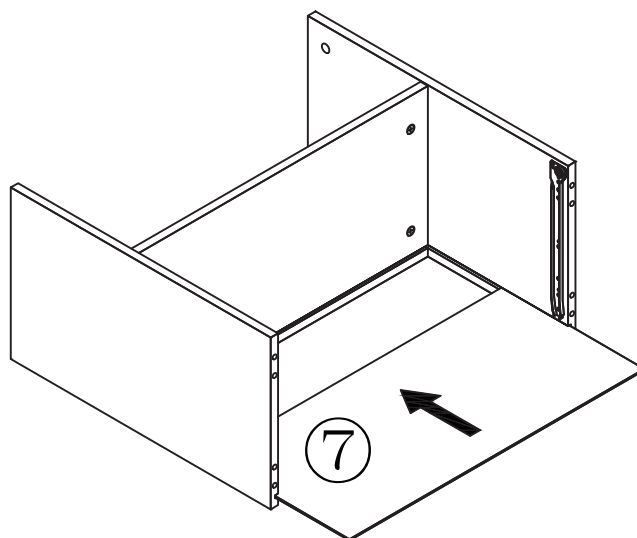


Step 4

1. Insert wood dowels (C) into bottom panel ②.
2. Attach bottom panel ② to assembly using long screws (F).

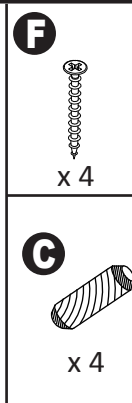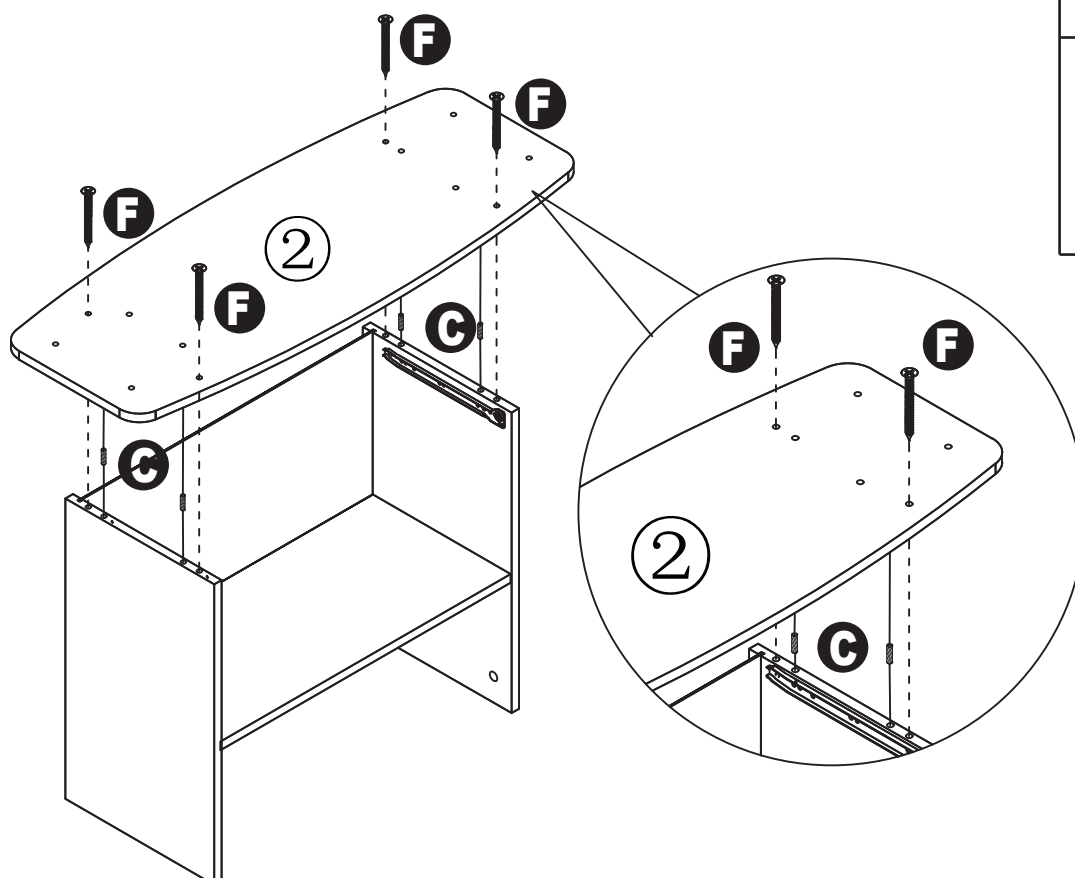

Step 5

1. Place Top Panel ① upside down on a soft surface.
2. Screw cambolts (A) and wood dowels (C) into top panel ①.
3. Attach top panel ① to assembly using camlocks (B), gently tighten camlocks.

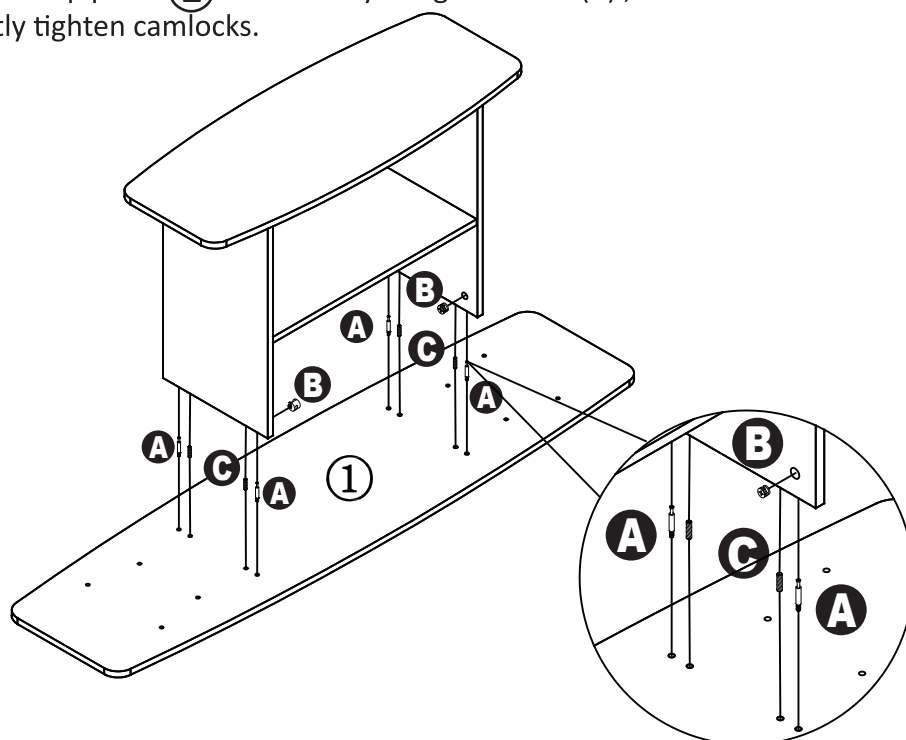

x 4




x 4



x 4

Step 6

1. Attach legs ⑥ to assembly using bolts (D) and allen wrench (J).

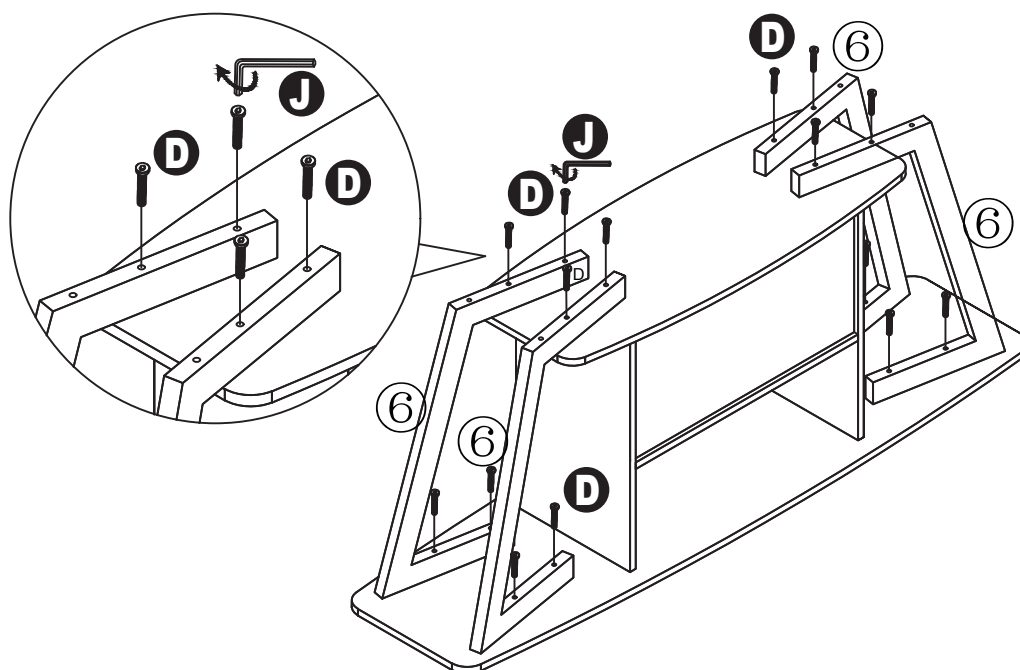



x 16



x 1


Step 7

1. Attach drawer left panel (9) and drawer right panel (10) to drawer back panel (11) using short screws (E) .
2. Push drawer bottom panel (12) through grooves of side panels into back panel (11) .

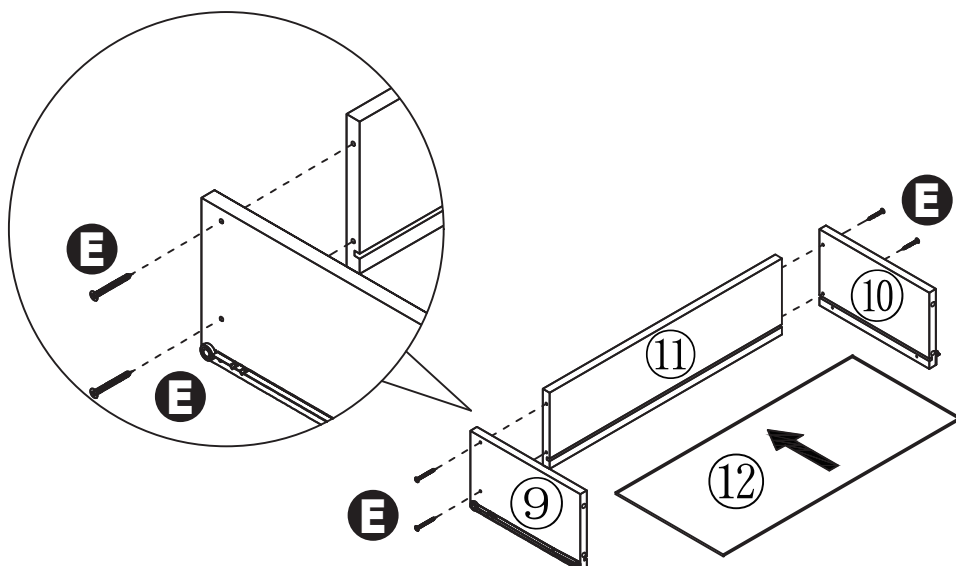


Step 8

1. Screw cambolts (A) into drawer front panel (8) .
2. Attach drawer front panel (8) to assembly using camlocks (B) , gently tighten camlocks.

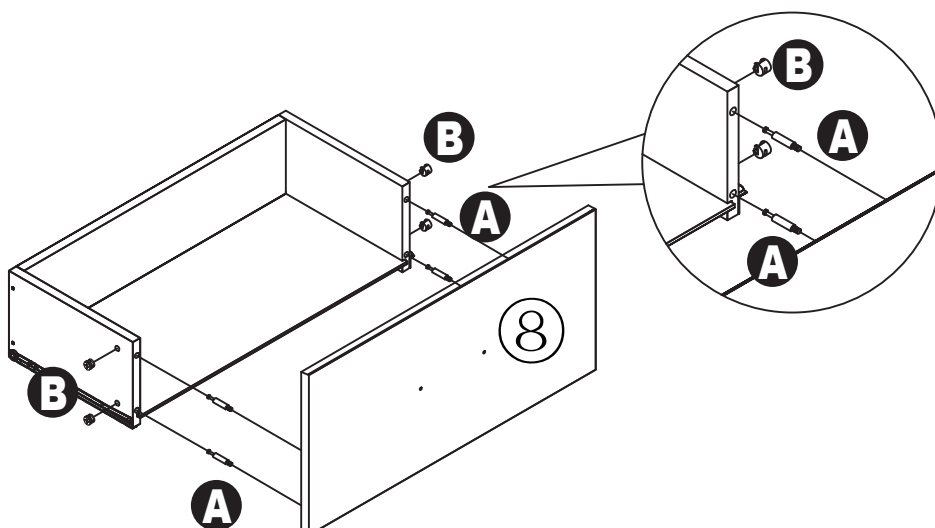


Step 9

1. Attach knob to drawer front panel (8) using knob screws (I).

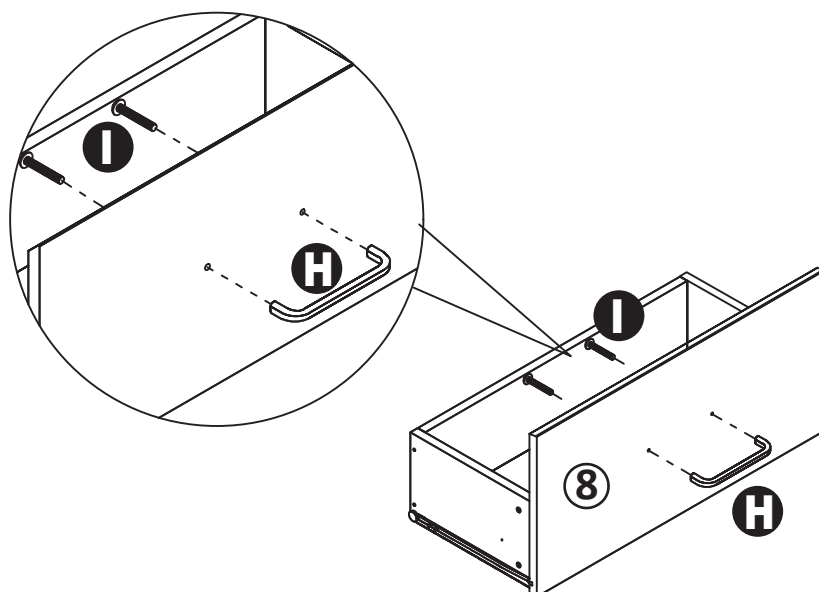

Step 10

1. Screw feet (G) into assembly.

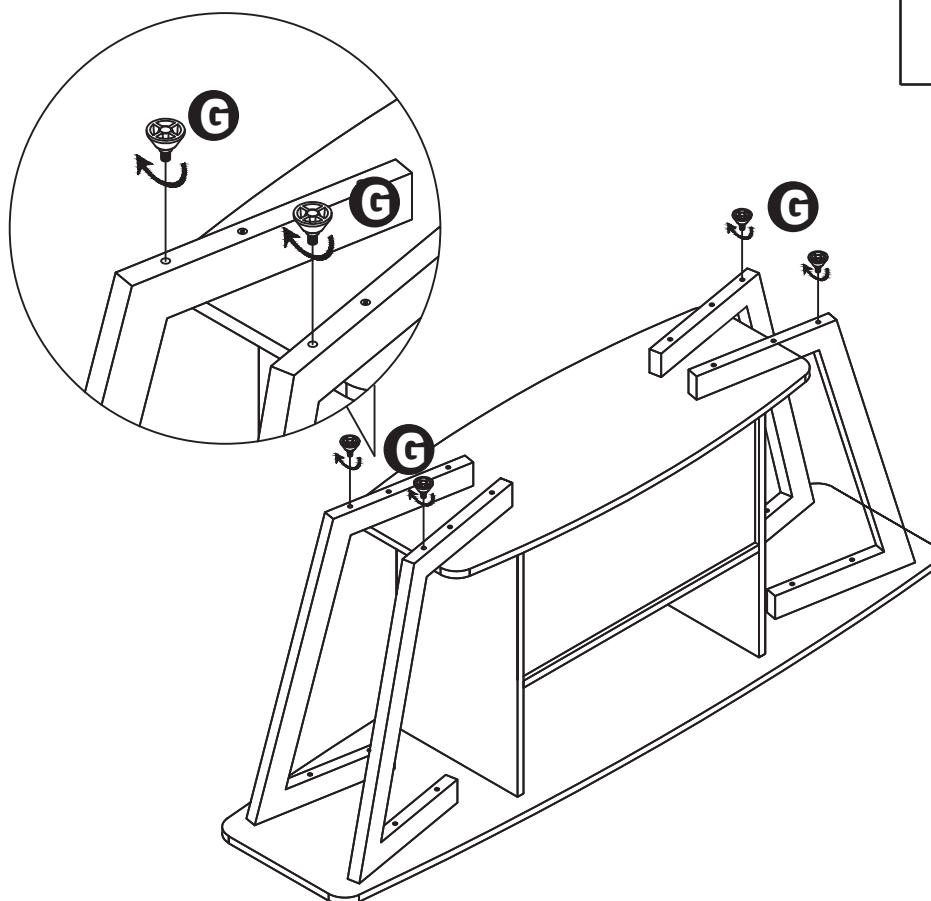

Step 11

1. Carefully place drawer into unit.

