


Assembly Instructions
High Back Office Chair

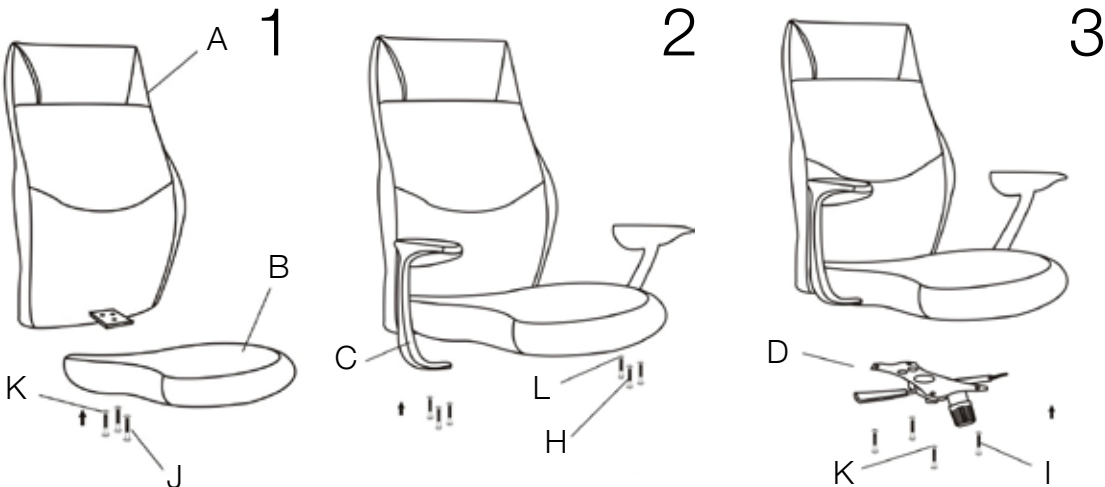

A (1 pc)



F (1 pc)



K (7 pcs)



B (1 pc)



G (5 pcs)



L (6 pcs)



C (2 pcs)



H (6 pcs)
Ø6 x 25mm



M (1 pc)
8mm



D (1 pc)



I (4 pcs)
Ø8 x 20mm




N (1 pc)
6mm



E (1 pc)



J (3 pcs)
Ø8 x 16mm

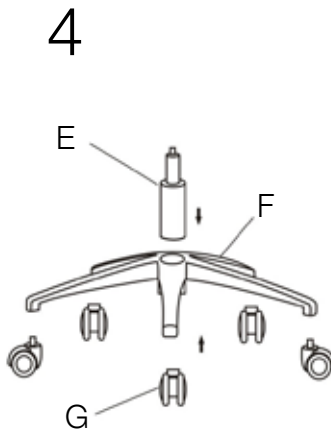

During assembly, hand tighten screw only. When the screw is in place, tighten completely.