



GALLERY DESK

TUN010CL	TUN011KC	TUN026	TUN021AG	TUN013LB	TUN018SC	TUN015BG
A  Cam Lock 22Pcs+4Pcs(spare)	B  Klix Cam 22Pcs+4Pcs(spare)	C  Dowel 9Pcs+2Pcs(spare)	D  Adjustable Glide 4Pcs	E  6 Hole L-Bracket 6Pcs	F  Screw #4*5/8" 36Pcs+5Pcs(spare)	G  60mm Black Grommet 2Pcs

STEP1

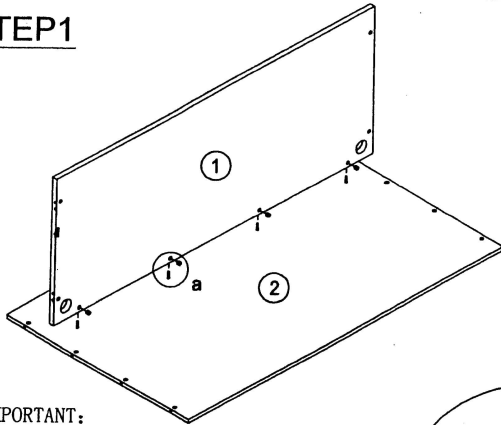


IMPORTANT:

FUNCTION OF KLIX CAM




1/4 RIGHT
TURN FOR
LOCKING



MAKE SURE THE ARROW IS
POINTING UPWARDS
BEFORE INSERTING INTO
THE PANEL'S HOLE.

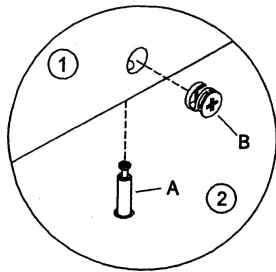


STEP2

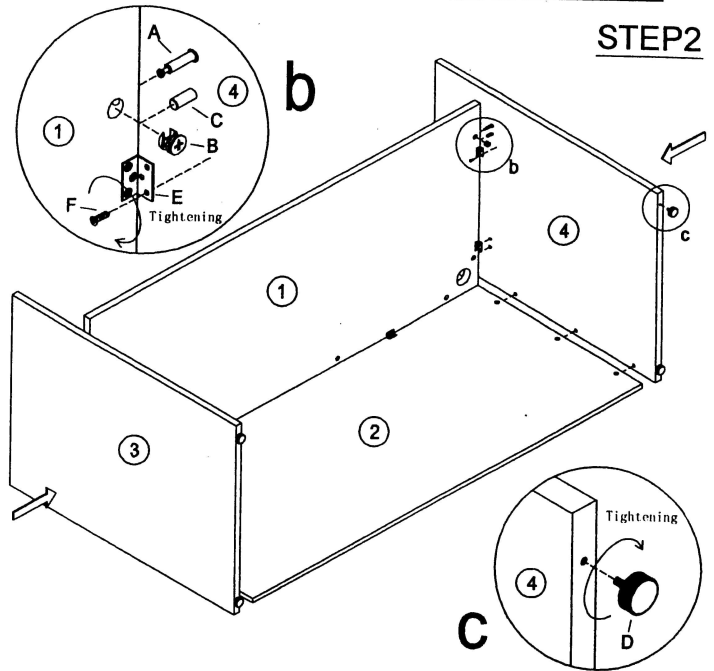

STEP3

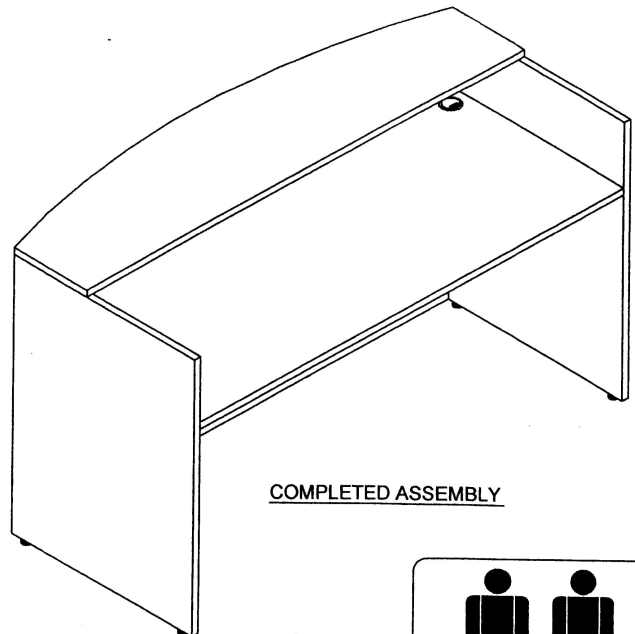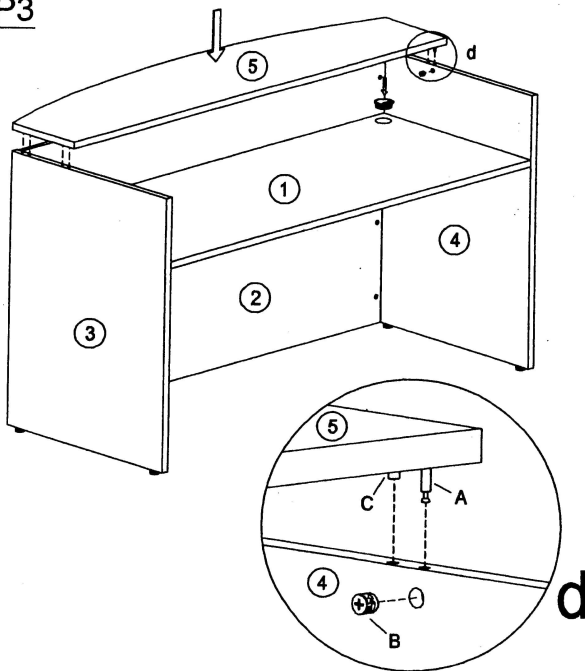

COMPLETED ASSEMBLY

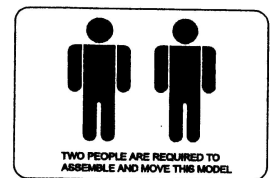

TWO PEOPLE ARE REQUIRED TO
ASSEMBLE AND MOVE THIS MODEL.

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.