


# YOUNGDALE

## Cabinet Hinges


### Youngdale Hinge Installation Information

#### Cutting the "Slot" and attaching the hinges

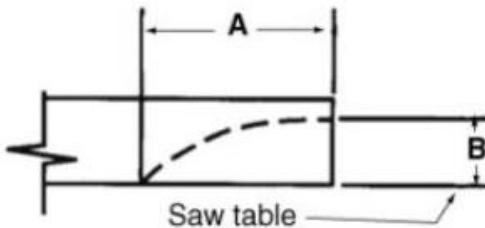

Use a 6-1/2" dado blade

9/32" wide

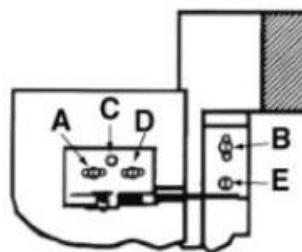

Hinge#	Dimension A	Dimension B
#3	1-7/8"	7/16"
#4	1-3/4"	3/4"
#5	1-7/8"	9/16"
#6	1-7/8"	9/16"
#65	1-7/8"	7/16"
#8	2"	11/16"

Install hinges on door using screw slot (A) or (D). Install all doors on cabinet using only screw (B) - then adjust all doors for fit. Then install the remaining screw in (E) on the stile and in (C) or the remaining adjustment slot on the door.  
(Recommended minimum face frame size is 1-1/2 inches)

**Proper installation requires that all hinge adjustment and set screws be installed!**  
**This hinge has two slotted and one round hole in the door part, use any two.**

#### Other Information

1. Two hinges are recommended for a typical cabinet door.
2. A typical cabinet door size is approximately 30" tall by 15" wide.
3. A typical cabinet door weight is between 9 and 15 pounds.
4. For doors taller than 36" add more hinges to keep the door from warping.
5. For doors taller than 36" use a hinge spacing of 24".
6. For doors heavier than 15lbs, add 1 hinge for each 10 extra pounds of weight.