



# Assembly Instructions

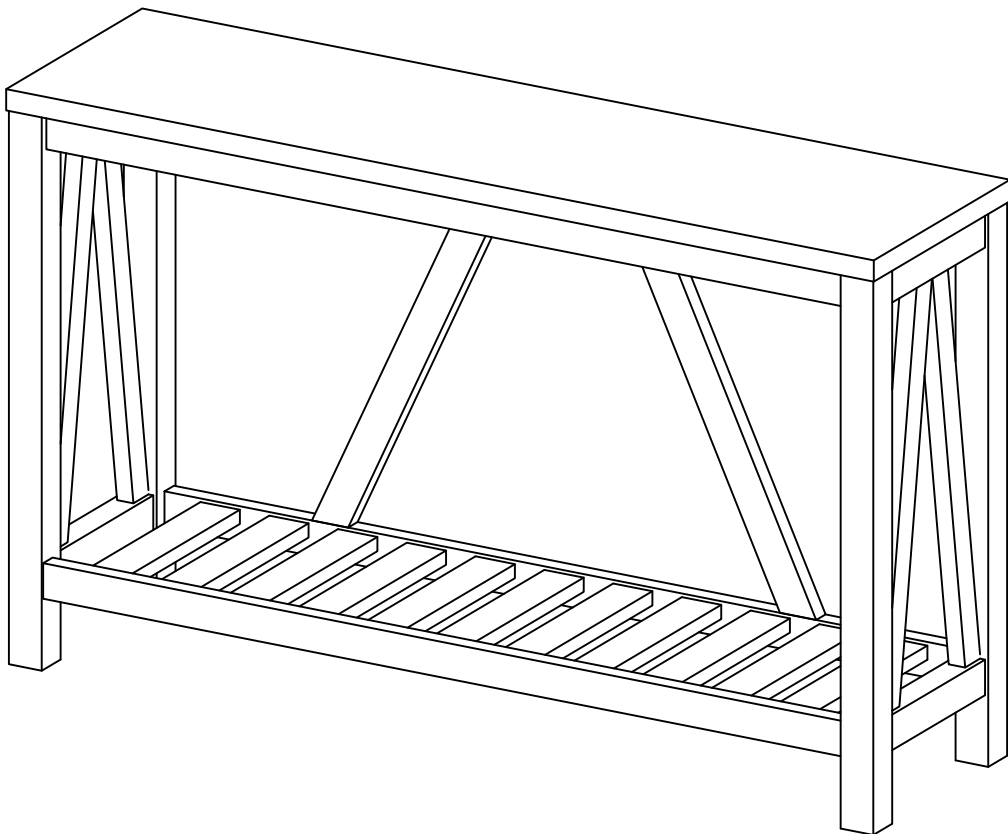


*Please visit our website for the most current instructions, assembly tips, report damage, or request parts.*

# General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

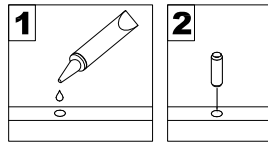


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

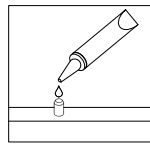


- VI. A Phillips head screwdriver is required for the assembly of this product .

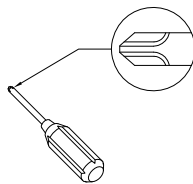









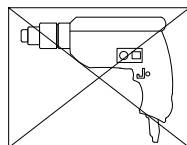



- VII. Power tools should not be used to assemble this product .

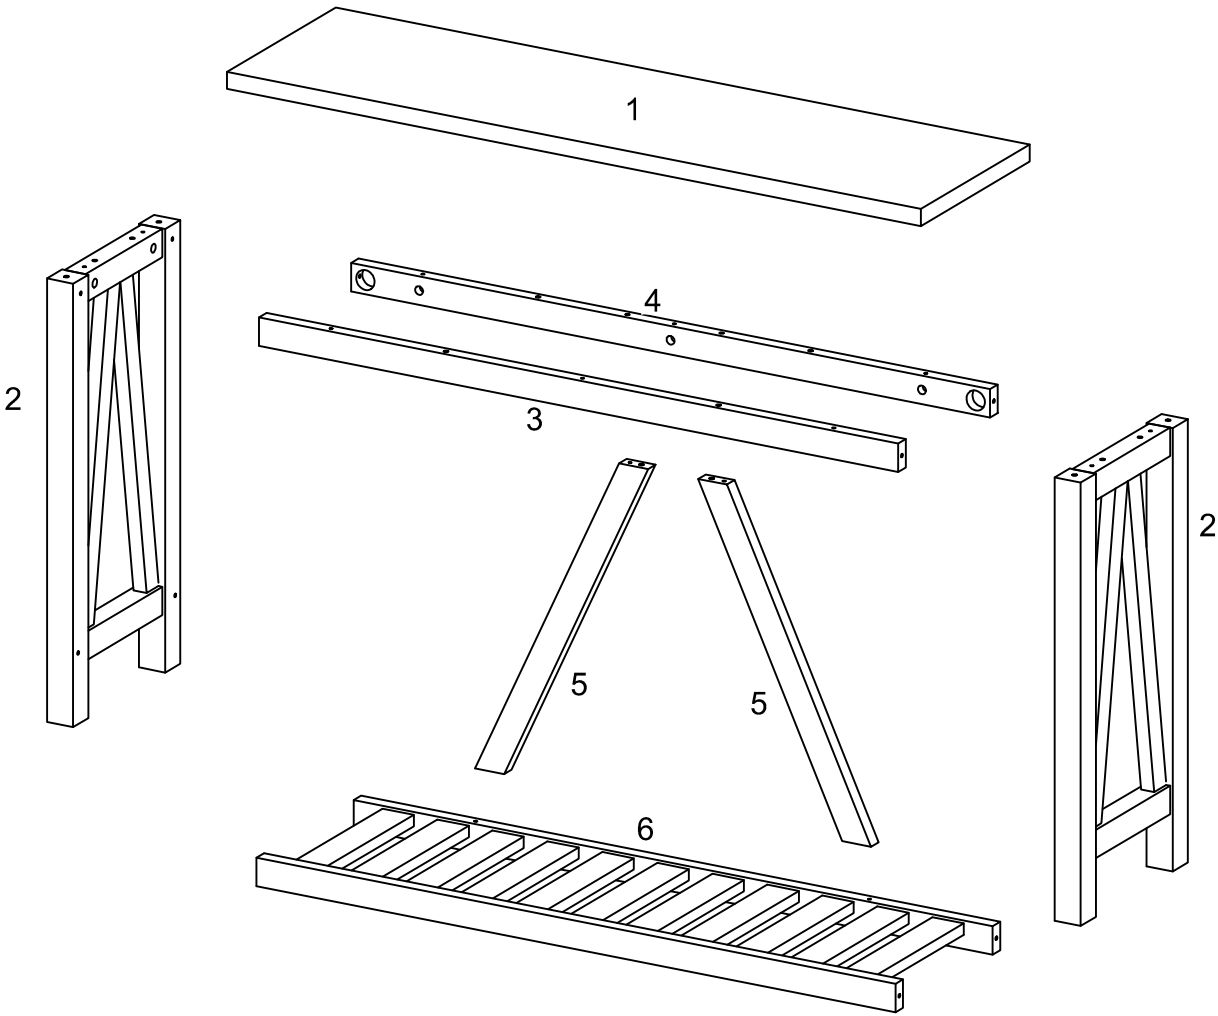


# Parts List



# Hardware List


|   |   |          |               |        |
|---|---|----------|---------------|--------|
| A |    | Ø8x30mm  | Wooden dowel  | 16 pcs |
| B |    | Ø7x50mm  | Bolt          | 4 pcs  |
| C |    | Ø6x35mm  | Cam bolt      | 10 pcs |
| D |    | Ø15x11mm | Cam lock      | 10 pcs |
| E |    |          | Cam lock      | 8 pcs  |
| F |    | M8x60mm  | Cam bolt      | 8 pcs  |
| G |   | M8       | Nut           | 8 pcs  |
| H |  | Ø38mm    | Plastic cover | 8 pcs  |
| J |  | Ø30mm    | Sticker       | 10 pcs |
| K |  | M13      | Wrench        | 1 pc   |
| L |  | M4       | Wrench        | 1 pc   |
| M |  |          | Glue tube     | 1 pc   |

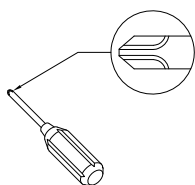

Philips head screwdriver required for assembly  
(not included)


*The hardware quantities listed above are required for proper assembly.  
Some extra hardware may also have been included.*

## Step 1

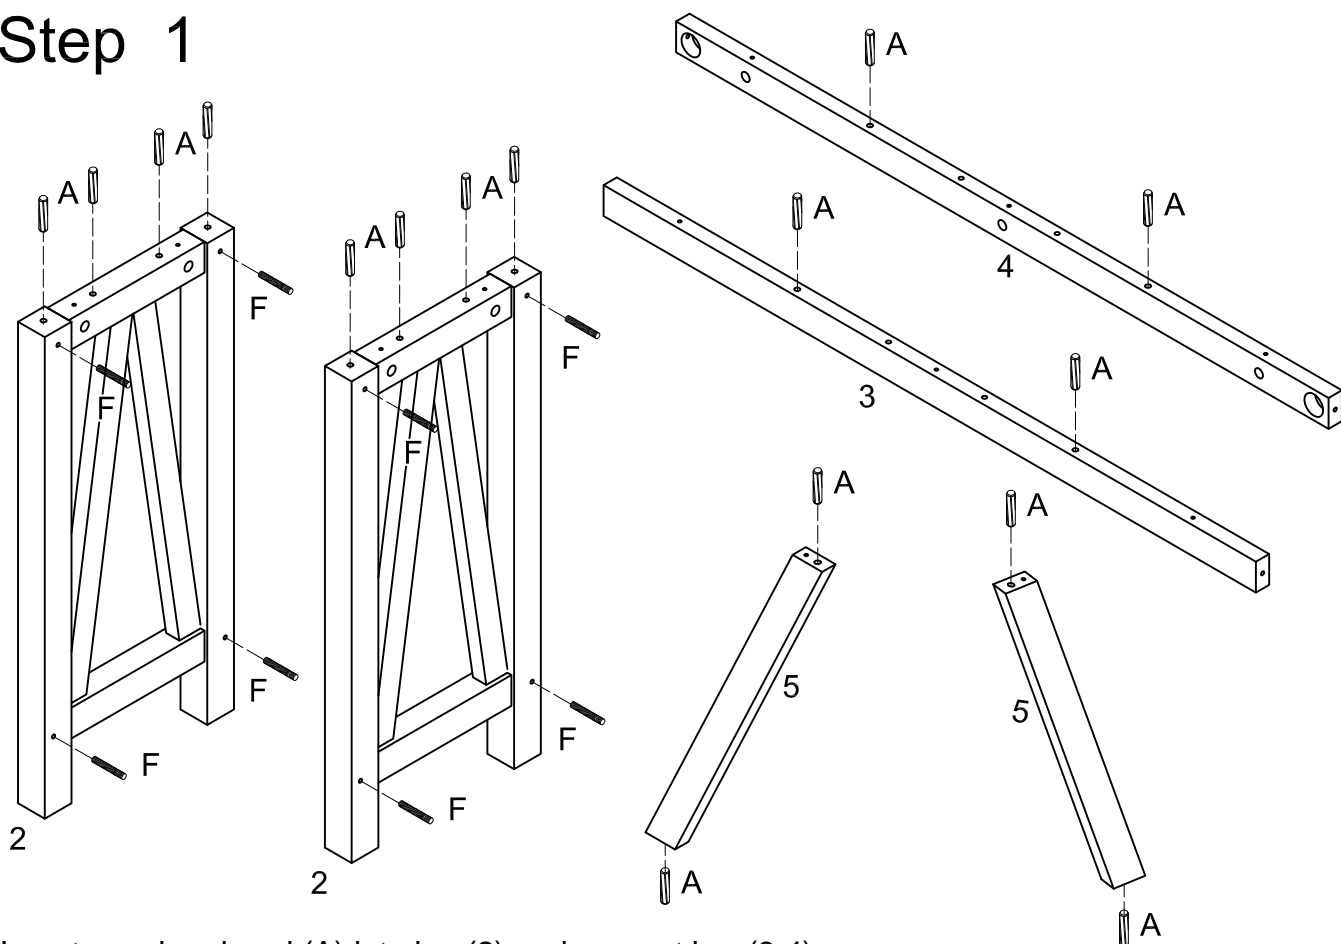


Insert wooden dowel (A) into leg (2) and support bar (3,4).

## Step 2

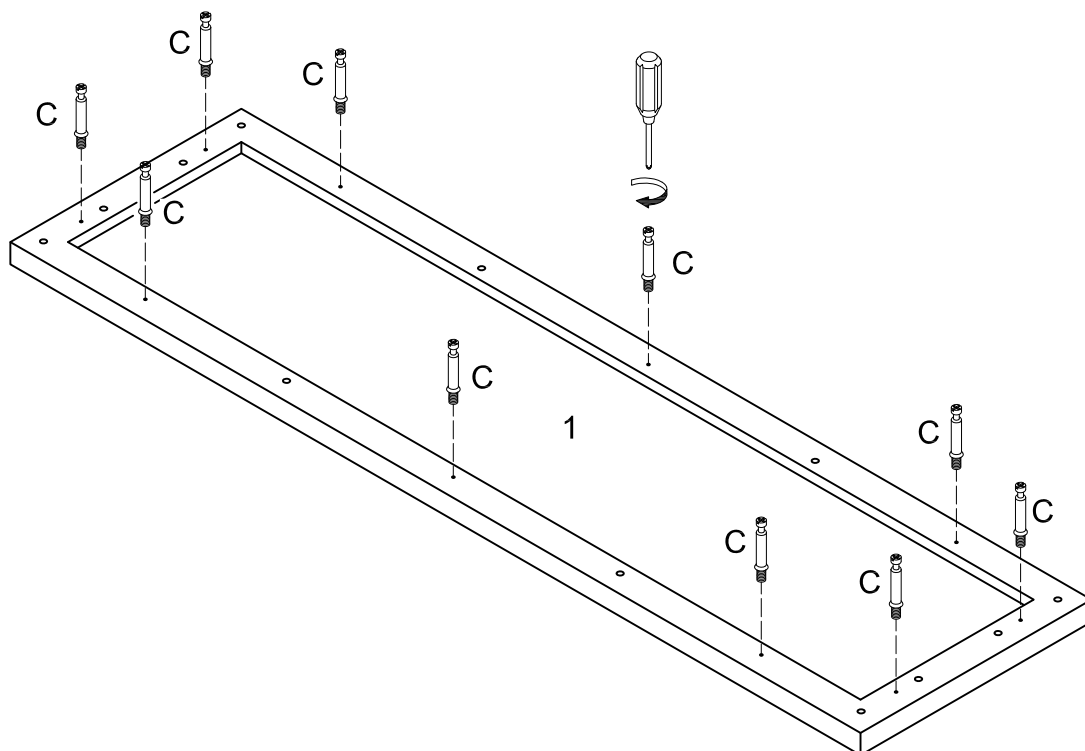



Secure cam bolt (C) to top panel (1).

## Step 3

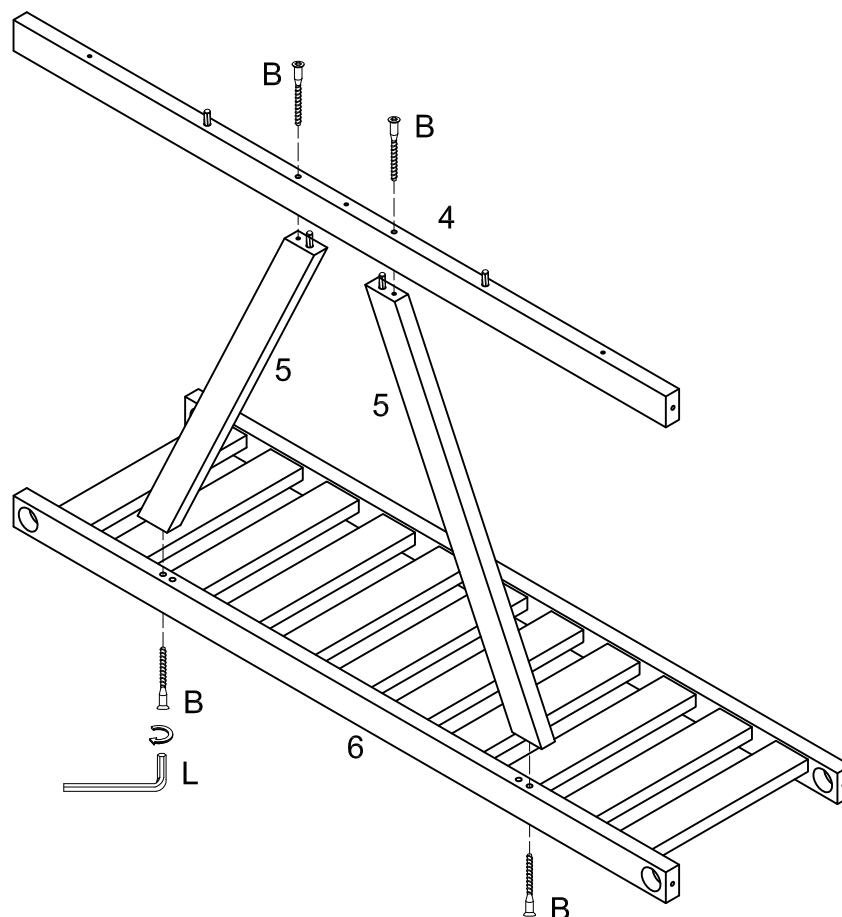


Use wrench (L) to secure cross bar (5) to support bar (4) and bottom shelf (6).


## Step 4

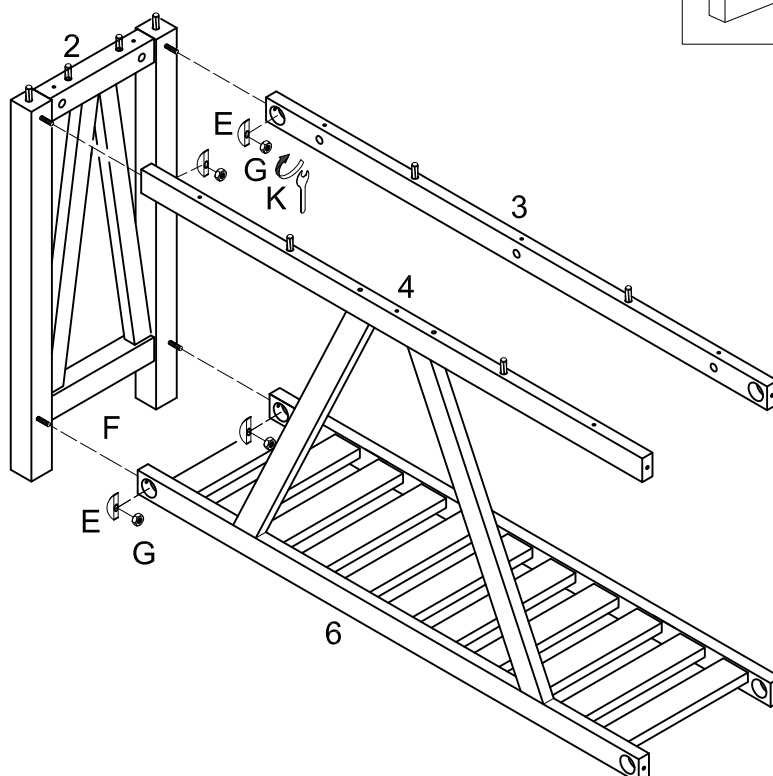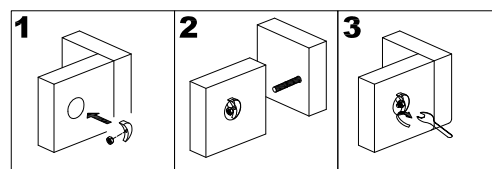

## Step 5

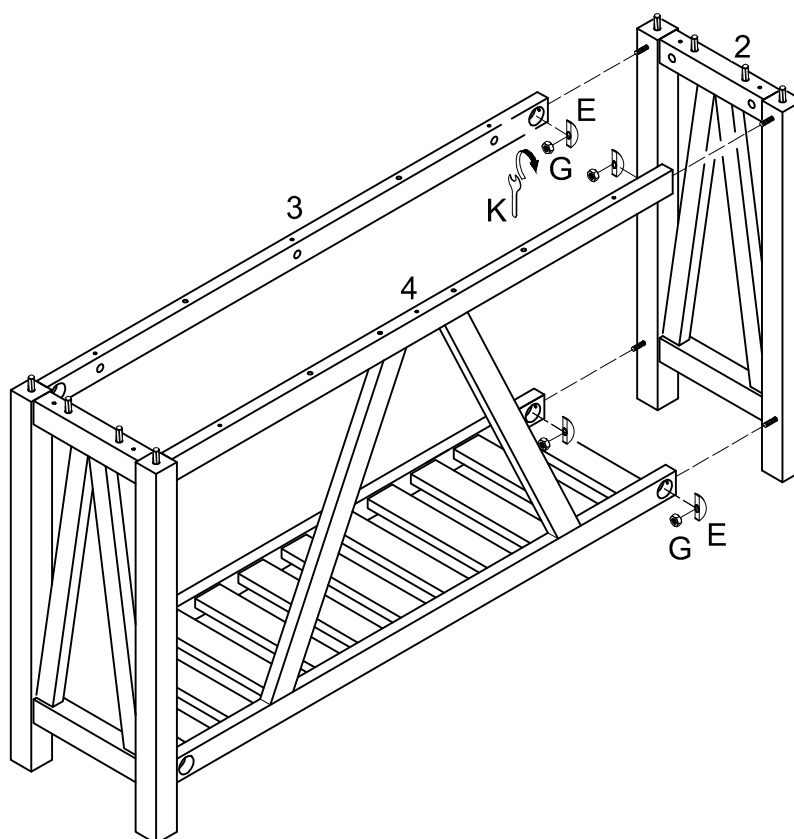


## Step 6

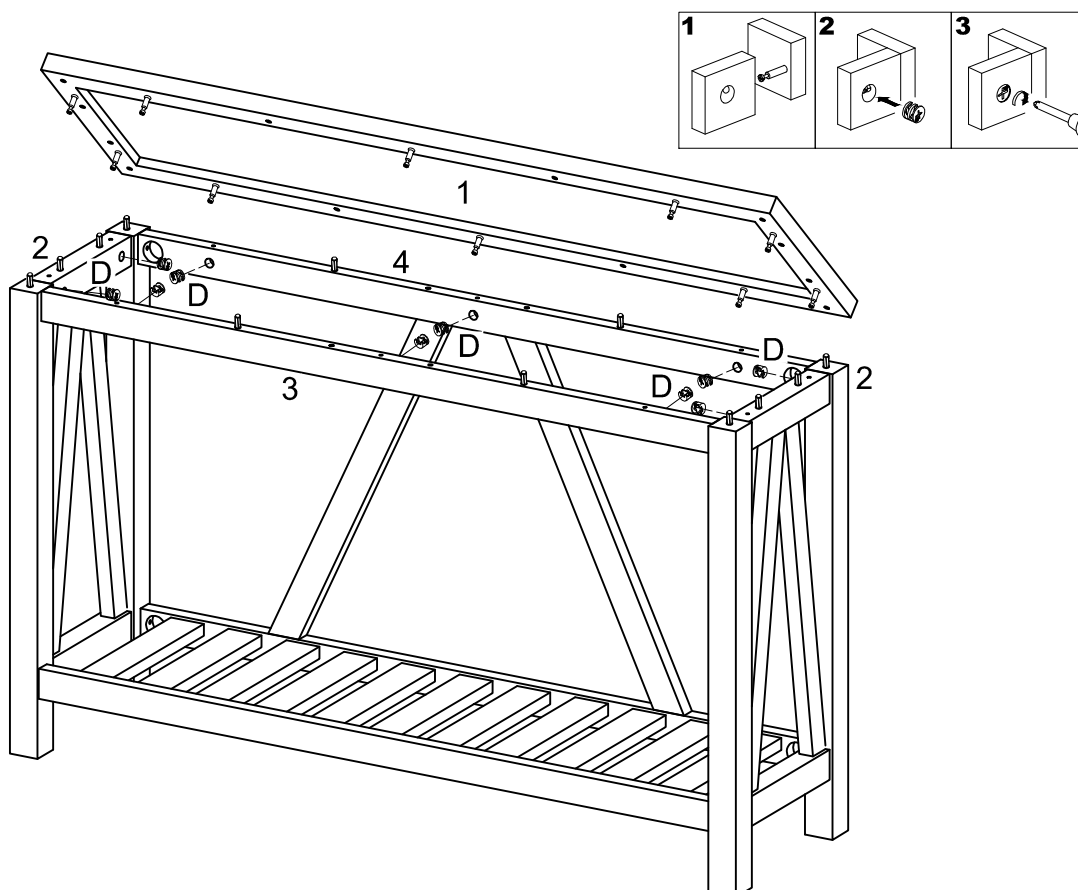


Insert top panel (1) into leg (2) and support bar (3,4), then insert and secure cam lock (D) to leg (2) and support bar (3,4) to lock it.

## Step 7

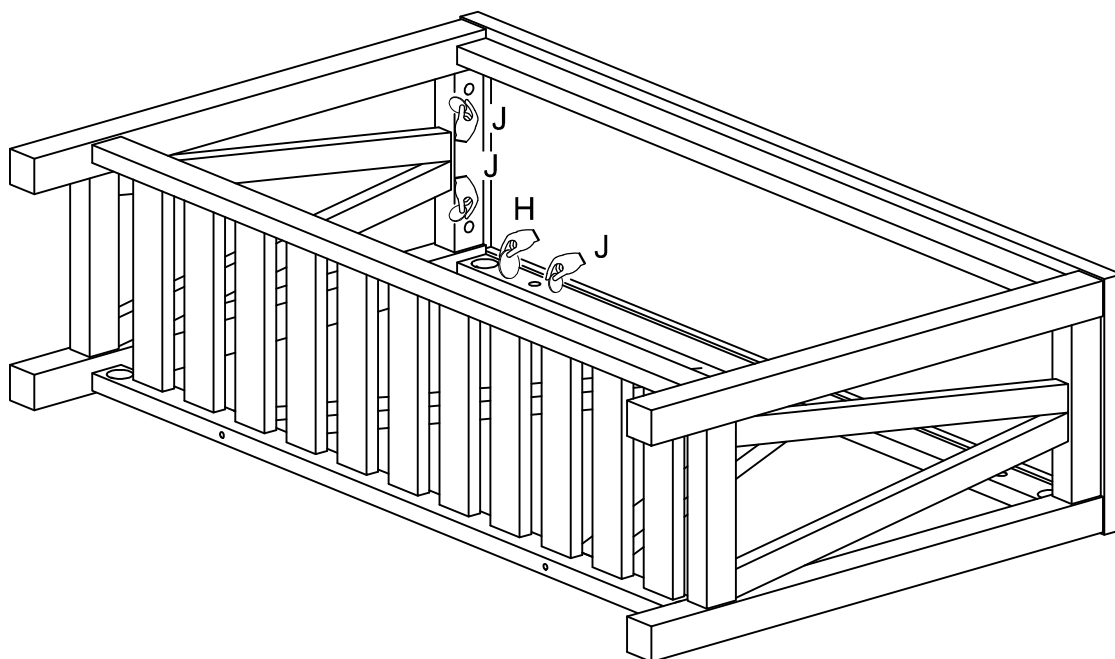

Place sticker (J) and plastic cover (H) over holes as per diagram.

## Step 8

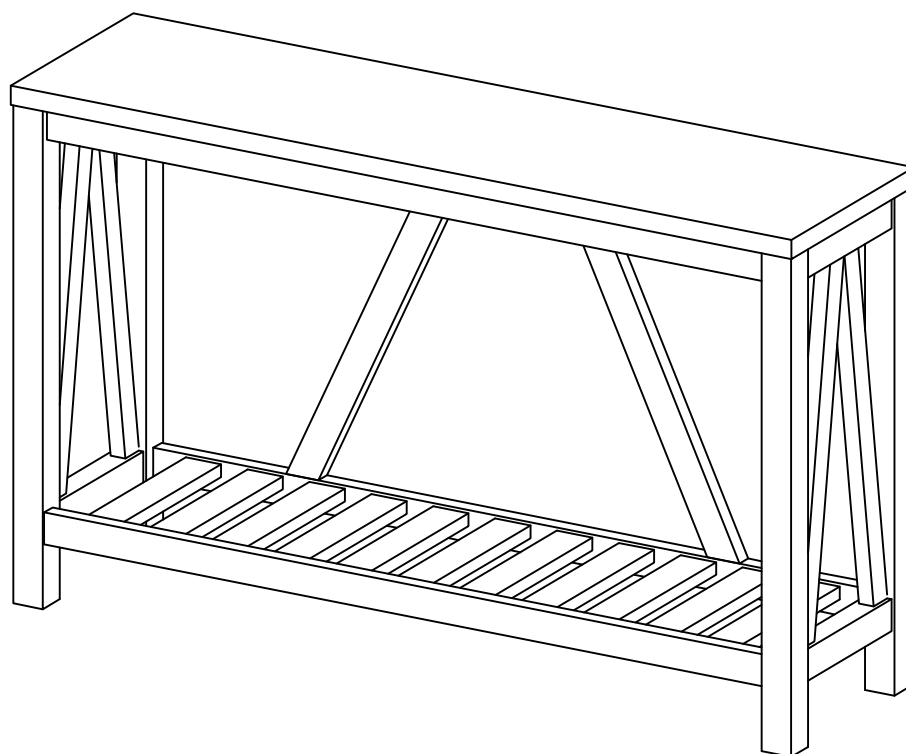

## Final Assembly