


Do not fully tighten the bolts until all bolts are started. Once all bolts are inserted, then go back and tighten all the bolts.

HARDWARE

A  x10

TRADITIONAL FAN TRELLIS ASSEMBLY INSTRUCTIONS

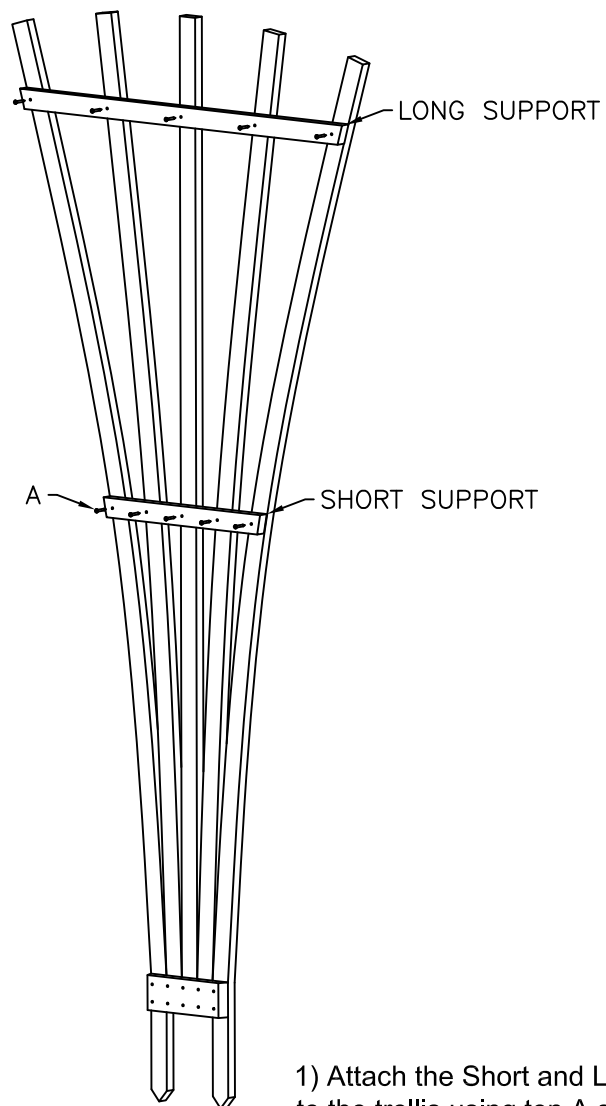

1) Attach the Short and Long Supports to the trellis using ten A screws

