

Size of Mattress and Foundation

The length and width of the upper and lower bunk mattress and foundation are as follows :

<u>Size</u>	<u>Length</u>	<u>Width</u>	<u>Thickness</u>
Twin	74" - 75"	37 ½" - 38 ½"	9 ½" max
Full	74" - 75"	52" - 53"	9 ½" max

You must use only this size mattress.

Ensure thickness of upper and lower mattress and foundation combined does not exceed 9 ½" and that the mattress is at least 5" below upper edge of guardrails.

This Bunk Bed uses a slat kit for mattress foundation.

Replacement Parts



SAFETY WARNINGS



- (1) Follow the information on the warnings appearing on the upper bunk end structure and on the carton. Do not remove warning label from bed.
- (2) Always use the recommended size mattresses or mattress support, or both, to help prevent the likelihood of entrapment or falls.
- (3) Surface of mattress must be at least 5 in. (127mm) below the upper edge of guardrails.
- (4) Do not allow children under 6 years of age to use the upper bunk.
- (5) Periodically check and ensure that the guardrail, ladder, and other component are in their proper position, free from damage, and that all connectors are tight.
- (6) Do not allow horseplay on or under the bed and prohibit jumping on the bed.
- (7) Always use ladder for entering or leaving upper bunk.
- (8) Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
- (9) Use of a night light may provide added safety precaution for a child using the upper bunk.
- (10) Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
- (11) The use of water or sleep flotation mattresses is prohibited.
- (12) **STRANGULATION HAZARD** : Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hooks, belts and jump ropes.
- (13) Keep these instructions for future reference.



BUNK BED

ASSEMBLY INSTRUCTIONS


(TWIN - TWIN) (TWIN - FULL) (FULL - FULL)

Thank you for choosing this Bunk Bed.



This practical design offers the utmost in versatility.

Before assembling your bunk bed, please read through these instructions carefully. Familiarize yourself with the different parts.


Please note that you will require a Phillips head screwdriver and an Allen wrench.

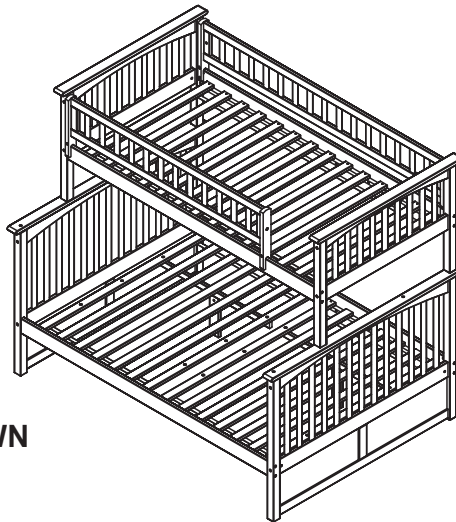


TWIN OVER FULL SHOWN

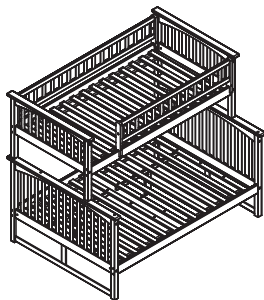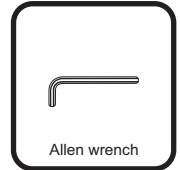

GUARDRAIL CAN BE SET UP AT EITHER END OF THE BUNK BED

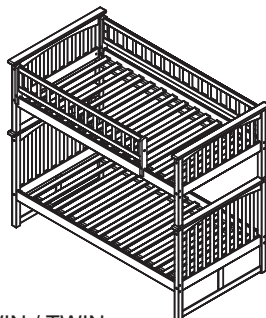


TWIN / TWIN

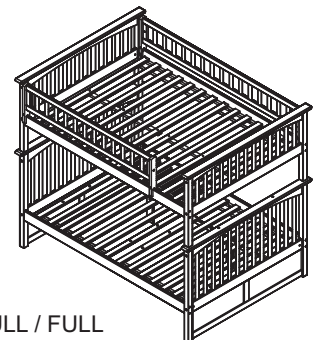



FULL / FULL

HARDWARE


NOTE: WE INCLUDE SPARE HARDWARE IN CASE THE ALLEN WRENCH, JCB, BARREL NUT, WOOD SCREW OR WOOD BUTTON ARE DAMAGED DURING ASSEMBLY.

- A**  JCB M6 X 3 1/2"(90mm) - 16 pcs
Spare - 2 pcs

- B**  JCB M6 X 2"(50mm) - 4 pcs
Spare - 2 pcs

- C**  Barrel Nut - 20 pcs
Spare - 2 pcs


- D**  1 " Wood Screw - 4 pcs
Spare - 2 pcs

- E**  Metal Pins - 4 pcs

- F**  Wood Button - 8 pcs
Spare - 1 pc

- G**  Allen wrench - 1 pc
Spare - 1 pc


PARTS LIST

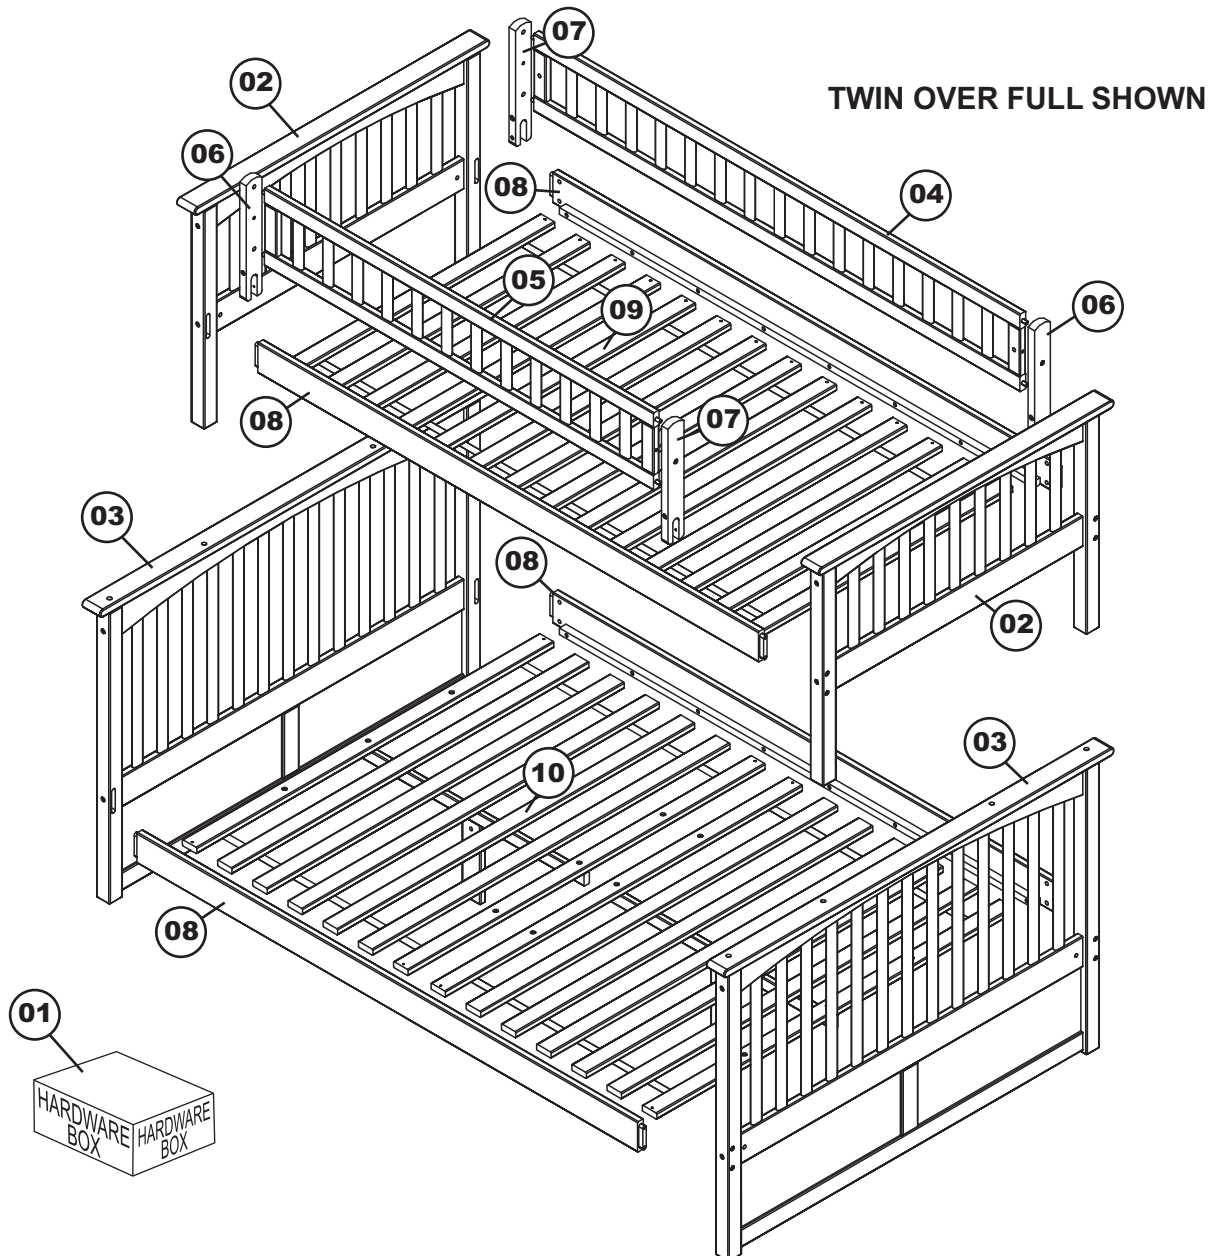

01	HARDWARE	1 BOX
02	UPPER PANEL	
03	LOWER PANEL	1 BOX
04	FULL GUARD RAIL	
05	3/4 GUARD RAIL	
06	LEFT END CAPS	1 BOX
07	RIGHT END CAPS	
08	LONG RAIL	
09	TWIN SLAT KIT	1 BOX
	OR	
	FULL UPPER BUNK SLAT KIT	1 BOX
10	FULL LOWER BUNK SLAT KIT	1 BOX
	OR	
	TWIN LOWER BUNK SLAT KIT	1 BOX

STEP 1

Attach the long rails (08) to the upper panels (02), using JCB M6 X 3 1/2" (A), and barrel nut (C). Tighten with the Allen wrench (G).

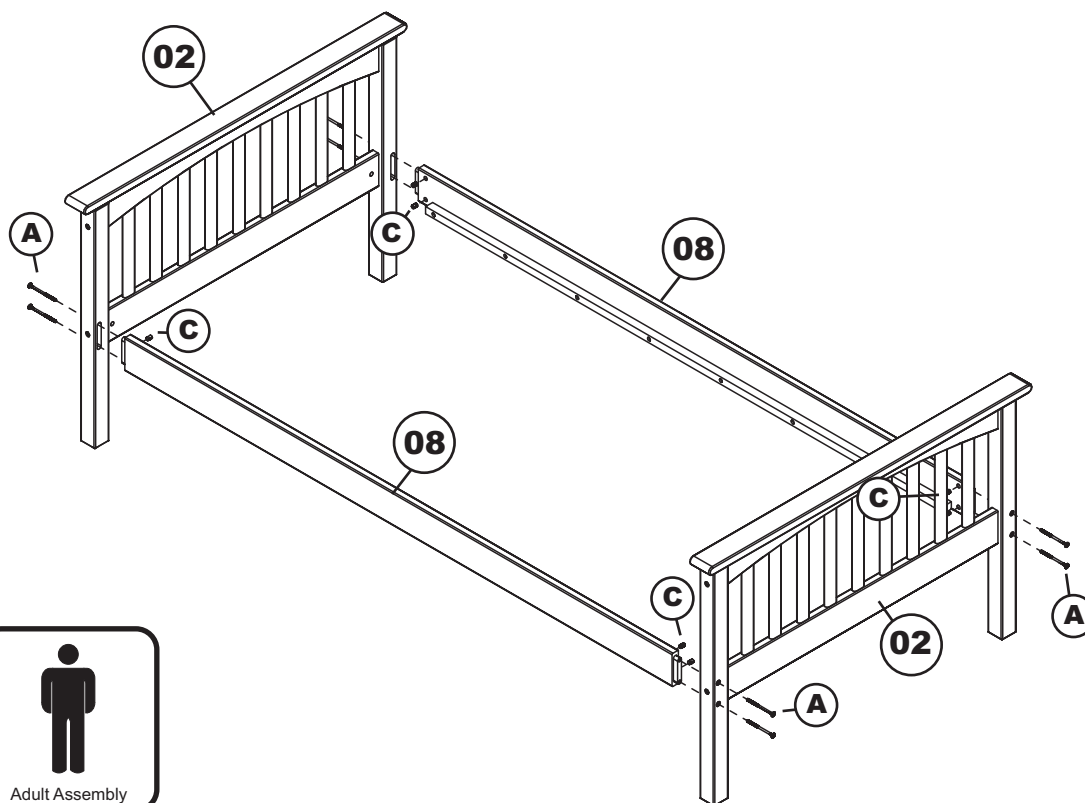

A



JCB M6 X 3 1/2"

C



Barrel Nut

G




Allen wrench



Adult Assembly

STEP 2

If the bunk bed will be placed next to a wall, the guard rail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

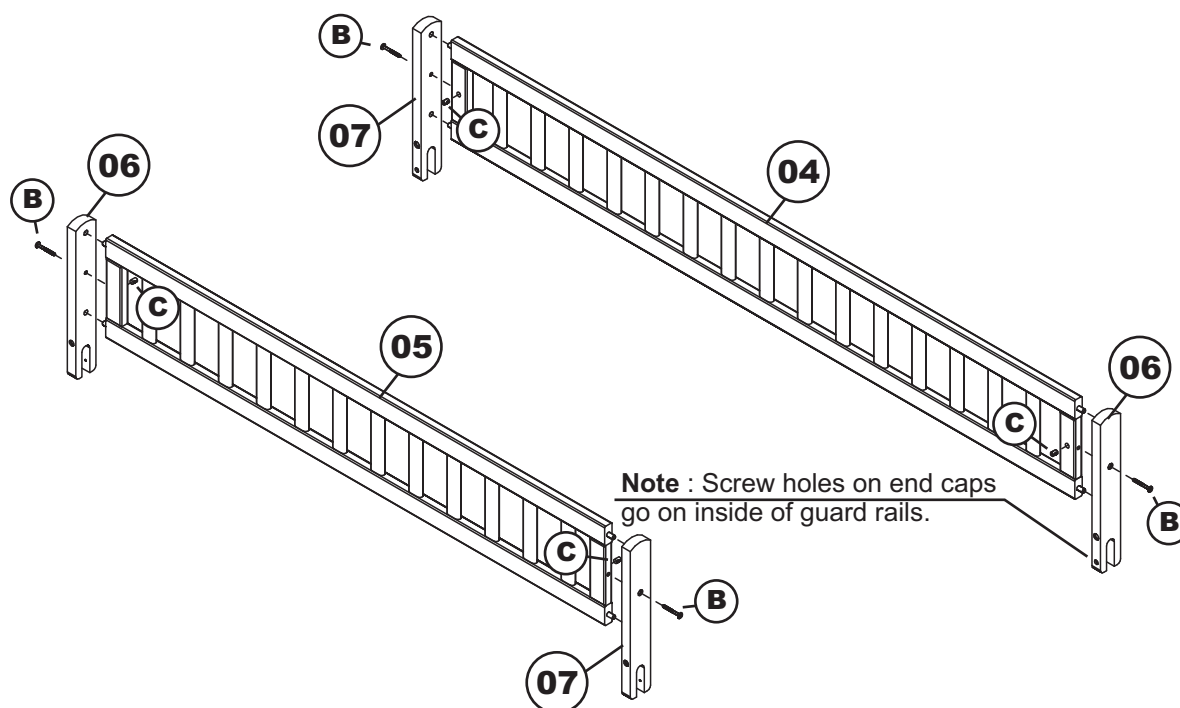

Note : Screw holes on end caps go on inside of guard rails.



Adult Assembly

B



JCB M6 X 2"

C



Barrel Nut

G




Allen wrench


Attach the full guard rail (04) to the end caps (06)(07), using JCB M6 X 2" (B), and barrel nut (C). Tighten with the Allen wrench (G). Repeat for 3/4 guard rail (05).

STEP 3

Lay the twin slat kit (09) onto the bed. Fix in place using wood screws provided in the slat kit box. FOR SLAT KIT ASSEMBLY follow assembly instructions included with slat kit.



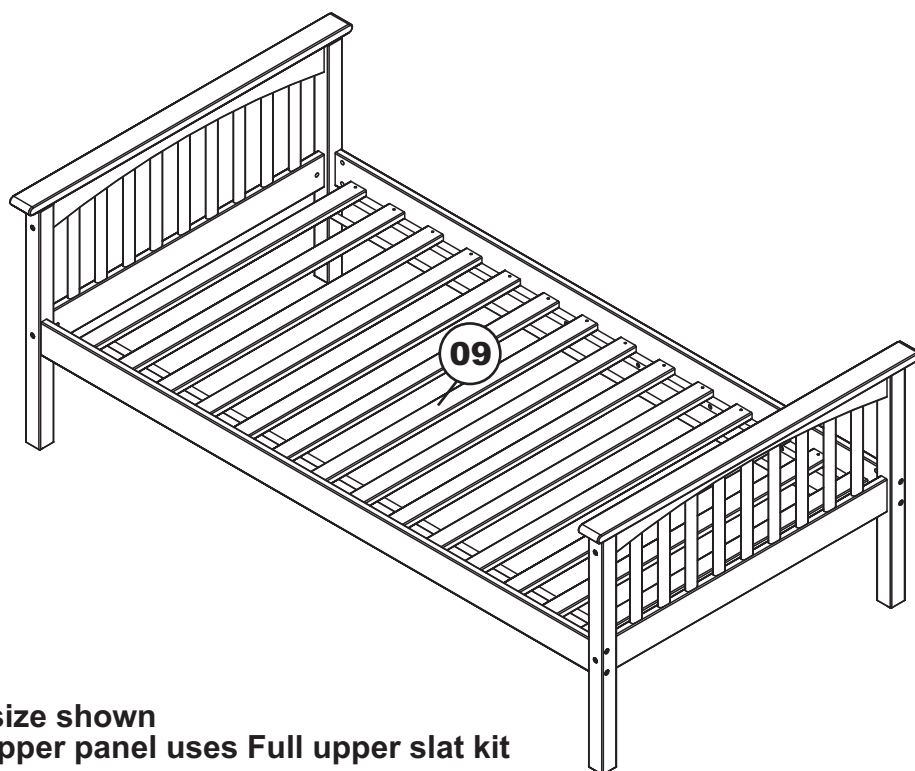


Twin size shown
Full Upper panel uses Full upper slat kit

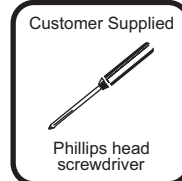

STEP 4


Install the full and 3/4 guard rail assemblies onto the long rails, and fix in place using wood screws (D). Tighten with the Phillips head screwdriver. (Customer Supplied)

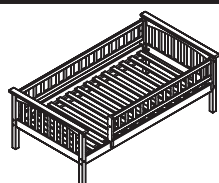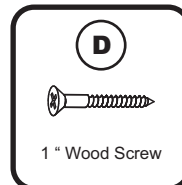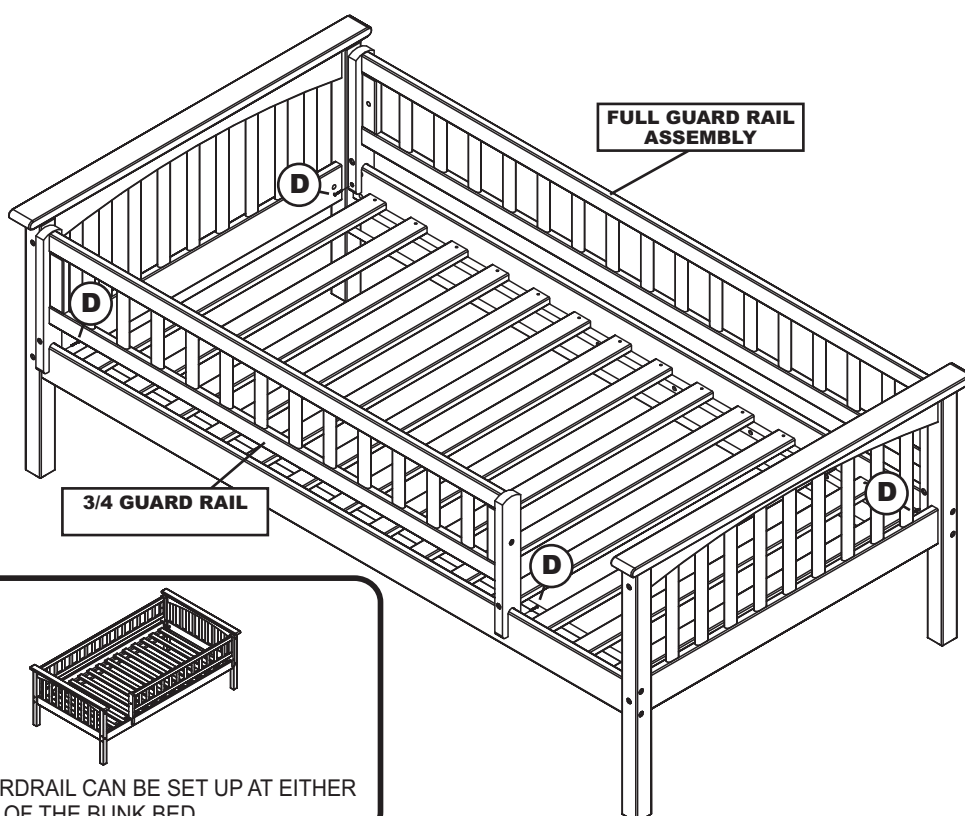

GUARDRAIL CAN BE SET UP AT EITHER
END OF THE BUNK BED

STEP 5

Attach the long rails (08) to the lower panel (03), using JCB M6 X 3 1/2" (A), and barrel nut (C). Tighten with the Allen wrench (G).

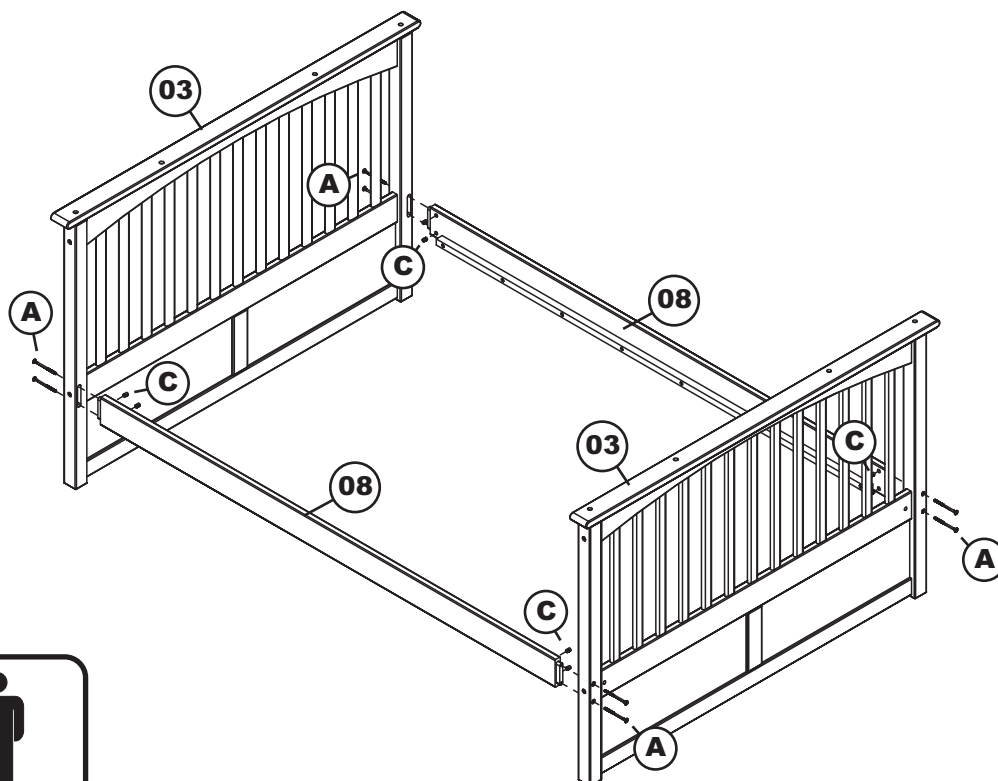

A



JCB M6 X 3 1/2"

C



Barrel Nut

G




Allen wrench



Adult Assembly

STEP 6

Lay the slat kit with center support (10) onto the bed, and fix in place using wood screws provided in the slat kit box. FOR SLAT KIT ASSEMBLY follow assembly instructions included with slat kit.

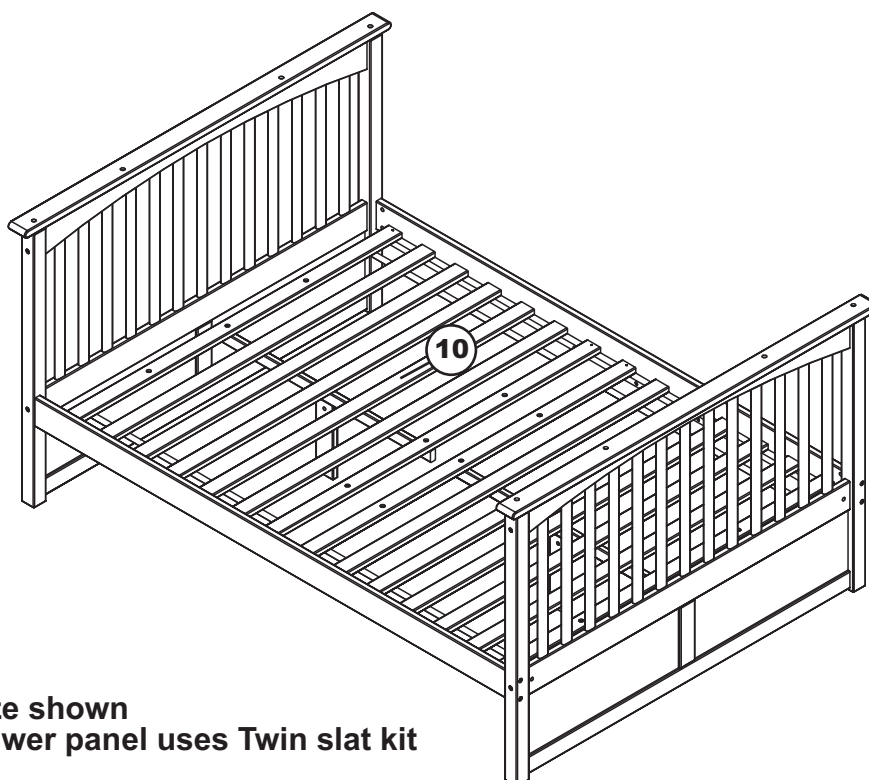

Adult Assembly

Customer Supplied







Phillips head
screwdriver

Full size shown
Twin lower panel uses Twin slat kit

STEP 7



Insert metal pins (E) into the holes in top of the lower panels. Lift the upper panels onto the lower panels as shown, and fit the metal pins into the holes in the bottom of the upper panel legs.

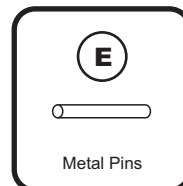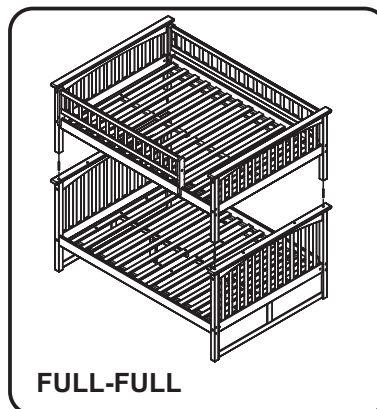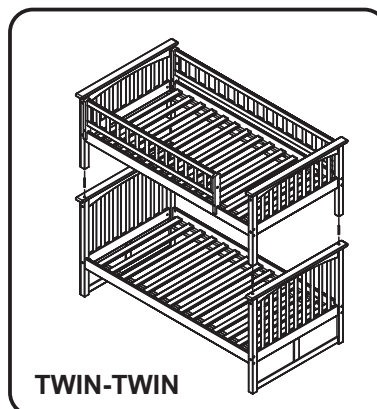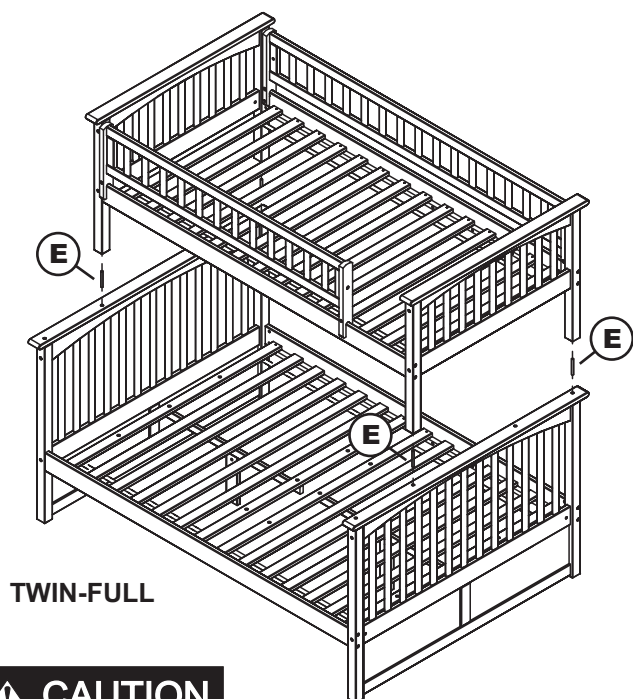

CAUTION
This step requires
two strong people.

STEP 8

Cover holes with wood buttons (F)(Twin Full, Full Full).

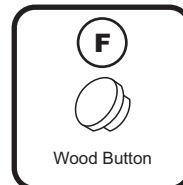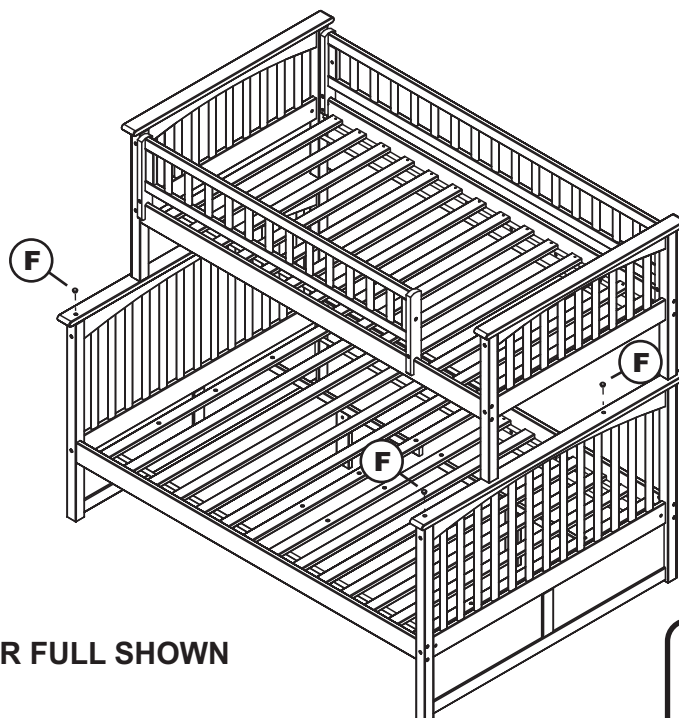

Lastly, install Ladder.

FOR LADDER ASSEMBLY, PLEASE
FOLLOW ASSEMBLY INSTRUCTIONS
INCLUDED WITH YOUR LADDER.

Congratulations !

Your bunk bed is now ready for use.

We recommend that you double check that all screws are tight,
and that all parts are secure before use and periodically check that all screws are tight to ensure lasting Safety.

STEP 9

LOWER BUNK

UPPER BUNK

LOWER BUNK

LOWER BUNK

STEP 10

STEP 10

Slide button (F) into the holes as shown.

TWO TWIN BEDS

TWO FULL BEDS

TWO TWIN BEDS

TWO FULL BEDS