

HOW TO MEASURE - ROLLER SHADES

HARBOR
SHADES

BASIC GUIDELINES


- Accurate measurements are essential in order for the roller shade to properly fit the window opening.
- Always use a steel tape measure.
- Measure each window separately even if multiple windows appear to be the same size.
- The shade can either be mounted inside or outside the window frame.

Select Mount Type

INSIDE MOUNT

Width: Measure the exact distance between inside surfaces of window frame at the top of the frame, closest to where brackets will be mounted.


Length: Measure height of window from inside surface at top of window down to sill, or to the point where fabric is to reach.

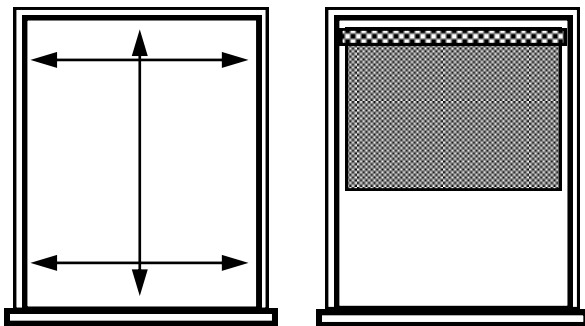

OUTSIDE & CEILING MOUNT

Width: Measure the width of the window opening and add 2-3" on each side for maximum light blockage. If the brackets are going to be mounted on the trim or framing around the window, measure from the outside edge of one trim to the other.

Length: Measure the full height of the window from the top of the outer frame to the lower sill.

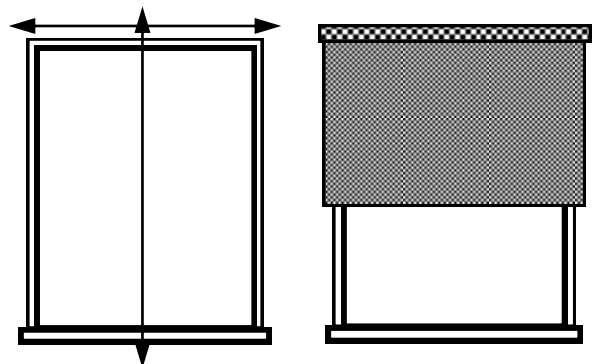

Note: The width measurements of the ordered shade are from end to end of the shade. The width of the fabric will be 1 1/8" narrower than the ordered width.