

STANDARD HEADBOARD ASSEMBLY

HEADBOARD COMPONENTS



(1) Headboard*



(2) headboard legs

*images might vary from actual product

HEADBOARD HARDWARE



(4) 5/8" x 5/16" bolts



(12) 1 1/4" washers



(4) 1" x 1/4" bolts



(4) 1/4" nuts

You will need:

- flat head screwdriver
- pliers

*Open all hardware packets in both packages before starting assembly.


IF YOU HAVE ANY QUESTIONS, PLEASE CALL US

LIMITED WARRANTY

We guarantee our upholstered furniture against defects in construction for a period of one (1) year. When a structural defect is brought to our attention, we will repair or replace it at our option at no charge to the customer (includes parts and labor, not transportation costs). Fabric wearability for upholstered furniture is not covered by the warranty. Vacuum for regular cleaning.

PLEASE DISPOSE OF PLASTIC BAG (S) AND CARTON (S) RESPONSIBLY.

STEP 1

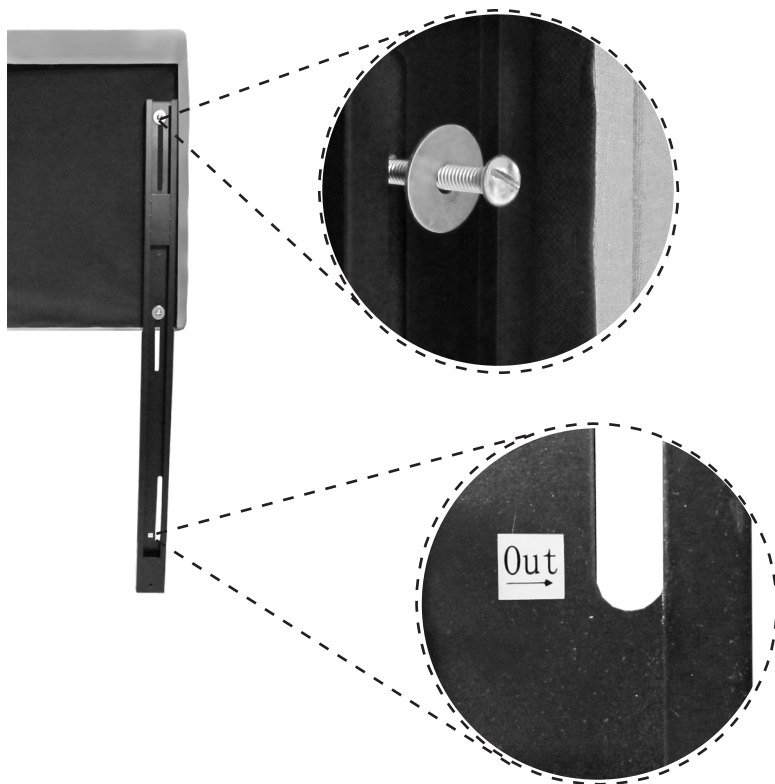

Place legs on the headboard, line up the slots to the holes in the headboard. Make sure that you place the correct leg facing "Out."

Attach the legs to the headboard with (2) $\frac{5}{8}$ " x $\frac{5}{16}$ " bolts and (2) $1\frac{1}{4}$ " washers for each leg.

Note: Additional hardware included to attach headboard to standard bed frame.