


# HEADBOARD

ASSEMBLY INSTRUCTIONS

## HEADBOARD COMPONENTS

---

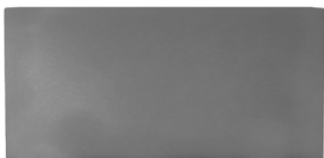

(1) Headboard\*

\*images might vary from actual product



(2) wings\*



(2) metal legs

## HEADBOARD & SIDE RAILS HARDWARE

---



(6) 3" x 5/16" bolts



(4) 5/8" x 5/16" bolts



(4) 1" x 1/4" bolts



(18) 1 1/4" washers



(4) 1/4" nuts

You will need:

- phillips screwdriver
- flat head screwdriver
- pliers

\*Open all hardware packets  
in both packages before  
starting assembly.

---

IF YOU HAVE ANY QUESTIONS, PLEASE CALL US

---


### LIMITED WARRANTY

We guarantee our upholstered furniture against defects in construction for a period of one (1) year. When a structural defect is brought to our attention, we will repair or replace it at our option at no charge to the customer (includes parts and labor, not transportation costs). Fabric wearability for upholstered furniture is not covered by the warranty. Vacuum for regular cleaning.

PLEASE DISPOSE OF PLASTIC BAG (S) AND CARTON (S) RESPONSIBLY.

## STEP 1

---

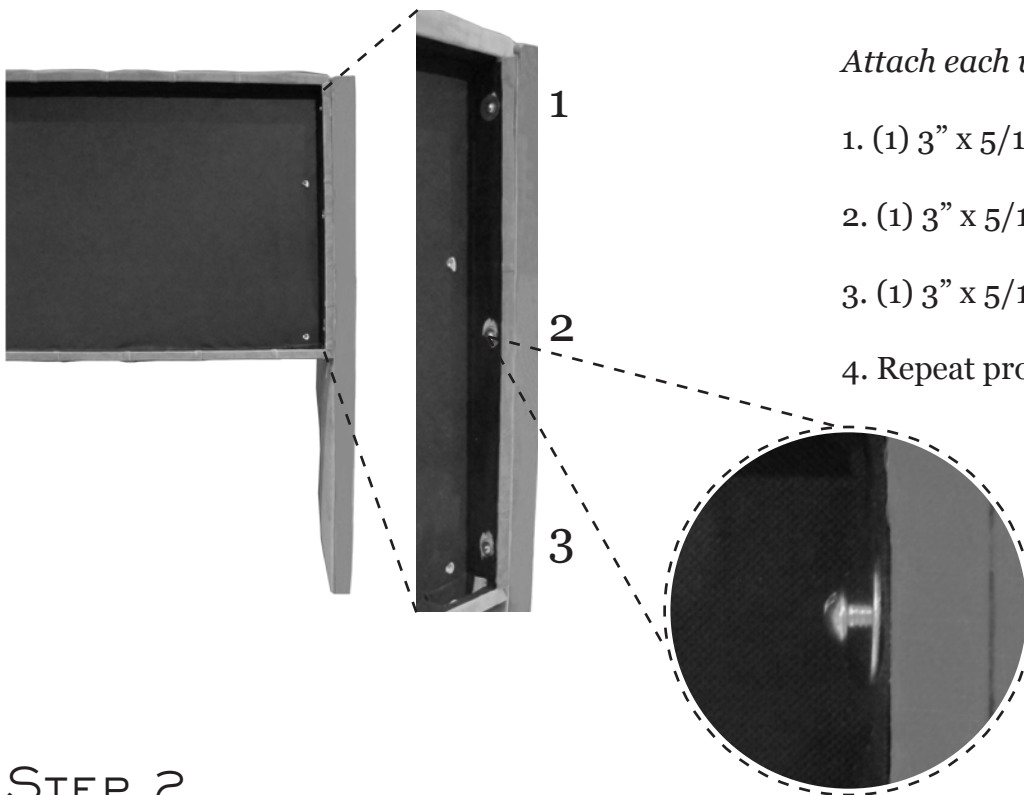


*Attach each wing to headboard using:*

1. (1) 3" x 5/16" bolt and (1) 1 1/4" washer
2. (1) 3" x 5/16" bolts and (1) 1 1/4" washer
3. (1) 3" x 5/16" bolts and (1) 1 1/4" washer
4. Repeat process for the other wing.

## STEP 2

---

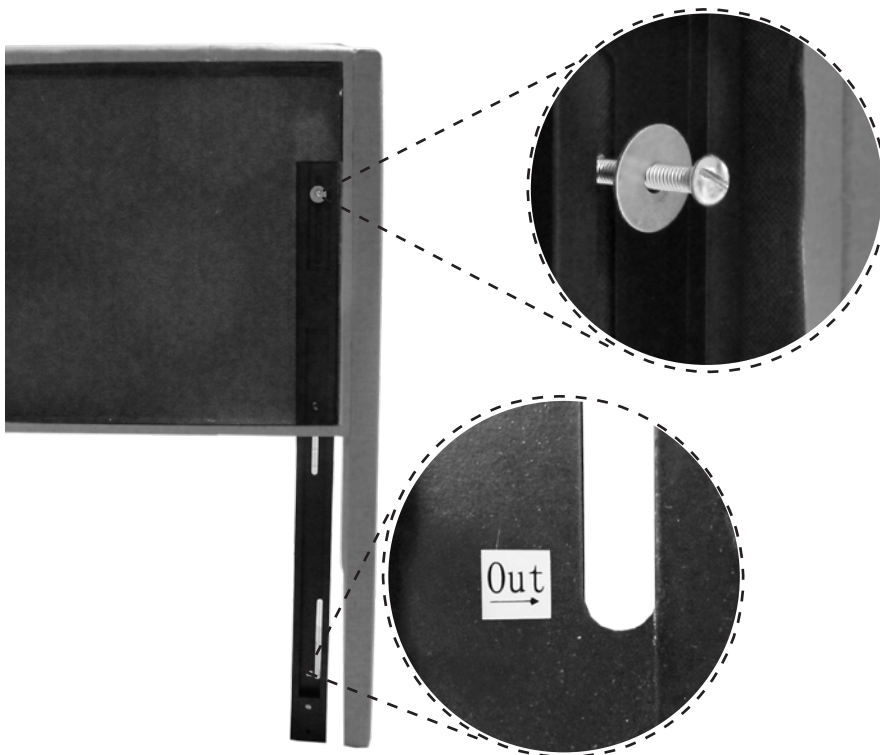

*Insert metal legs through the holes in the headboard. Make sure that you place the correct leg facing "Out."*

*Attach each metal leg to the headboard using (2) 5/8" x 5/16" bolts and (2) 1 1/4" washers for each leg.*