






## CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. The seat board can be cleaned with a mild cleaner. Test the cleaning method on a hidden area before using them over the entire area.


## NOTICE

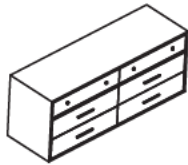- \* Please make sure that you have all parts indicated before you begin assembly of this item.
- \* This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- \* This item may require periodic tightening.
- \* Do not tighten bolts until completely assembled.

## Part List and Hardware List

Piece	Description	Picture	Quantity
A	DRAWER		1 X
B	LEG		4 X
H1	ALLEN BOLT 5/16* 2"		8 X
H2	ALLEN KEY 4mm		1 X
H3	Anti-Tip Hardware		2X

Product Dimensions: 56"W\*18"D\*36"H

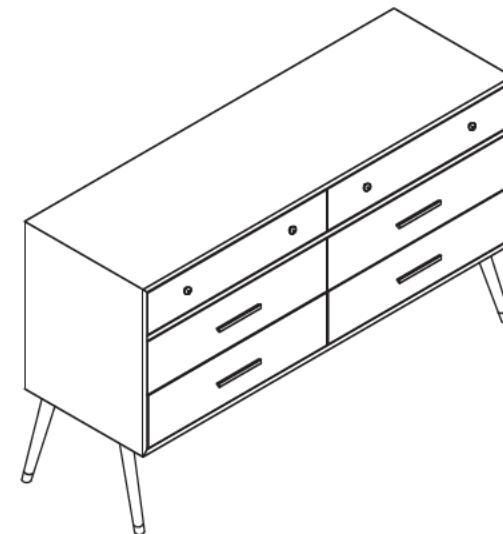


**Weight Capacity : 25 lbs on top of the product**  
**Warning : Do not stand on the product**  
**Warning : Do not over torque bolts**

## PREPARATION


Before beginning assembly of product, make sure **all** parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time:15 minutes.

Tools Required for Assembly (included):Allen key.

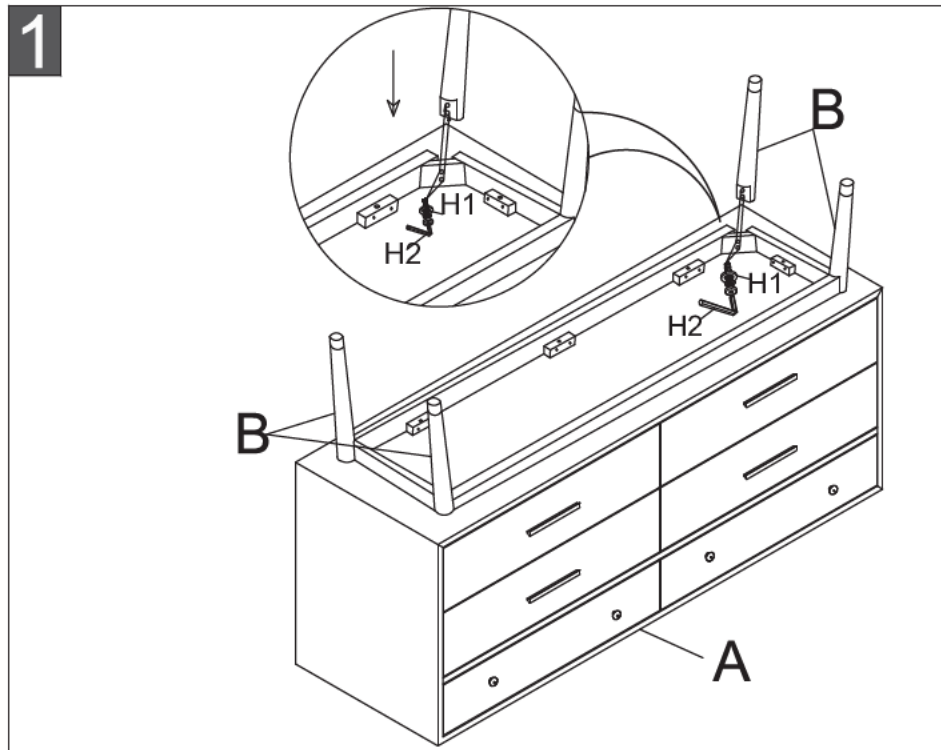

Step 1:  
Attach 4\*legs (B) in the corresponding position on the underneath of drawer (A) by using Allen key (H2) to lock with 8\*Allen bolts (H1). As picture.

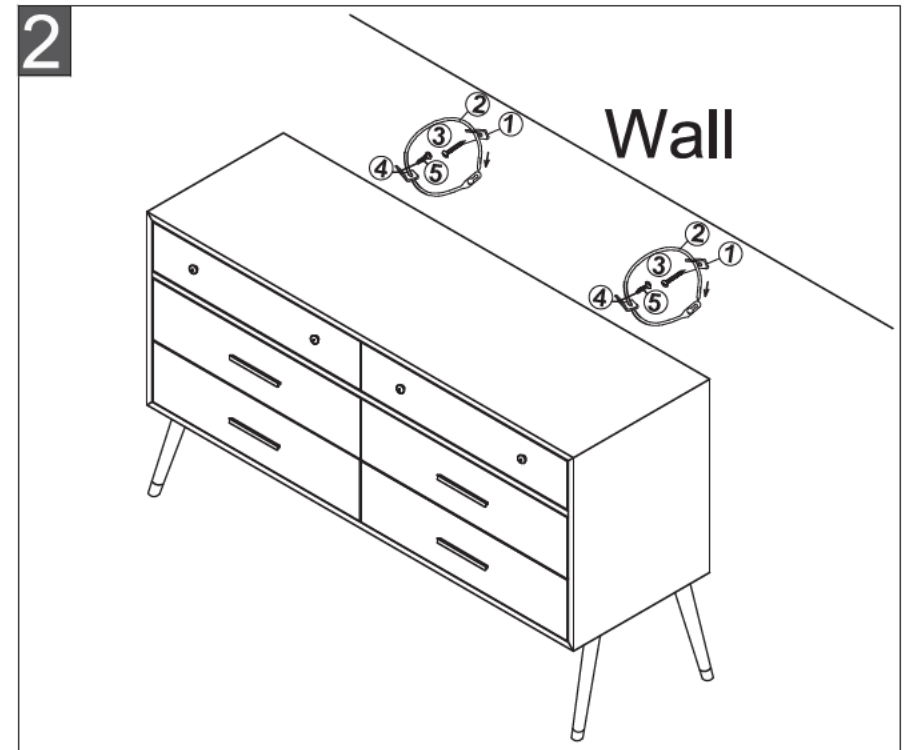

Step 2:  
Straighten up the assembled dresser. Following the installation instructions of anti-tipping to fix the dresser in the wall by 2 straps. Assembly is completed.