



BED FRAME

ASSEMBLY INSTRUCTIONS

Before assembling your bed frame, please read through these instructions carefully. Familiarize yourself with the different parts.

PARTS LIST

- 1 MID RAIL 1 PC**
- 2 TALL LEG 2 PCS**
- 3 SHORT LEG 2 PCS**
- 4 LONG RAIL 2 PCS**

Instructions apply for all sizes of bed
> Twin > Full > Queen > King


HARDWARE

- a** Wooden Dowels- 12 pcs
Spare - 1 pc
- b** JCB M6 X 120mm(4 3/4") - 2 pcs
Spare - 1 pc
- c** JCB M6 X 70mm(2 3/4") - 4 pcs
Spare - 1 pc
- d** Barrel Nut - 6 pcs
Spare - 2 pcs
- e** Allen Wrench - 1pc
Spare - 1pc

NOTE : WE INCLUDE SPARE HARDWARE IN CASE THE ALLEN WRENCH, JCB, WOODEN DOWEL OR BARREL NUT ARE DAMAGED DURING ASSEMBLY.


Step 1

Insert wooden dowels (a) to the locator holes will receive (a). Both end

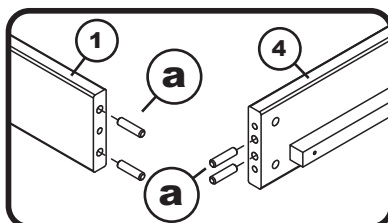

Step 2

Attach the legs (2) or (3) to mid rail (1), using JCB M6 X 120mm (b) and barrel nut (d). Tighten with the Allen wrench (e).

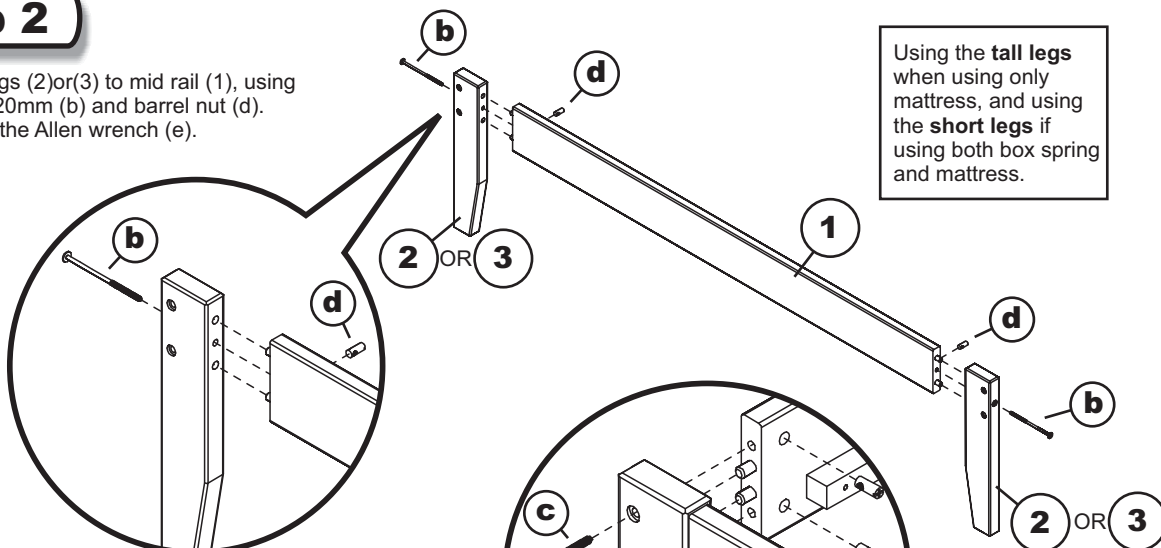

Step 3

Attach long rails (4) to the mid rail assemblies, using JCB M6 X 70mm (c) and barrel nut (d) as shown. Tighten with allen wrench (e). For Headboard assembly, follow assembly instructions included with headboard.

