

During assembly, hand tighten screws only. When all screws are in place, then tighten completely.

Assembly Instructions High Back Office Chair










C (1 pc)














F (4 pcs) M8-1.25 x 15mm

G (4 pcs)

H (1 pc)

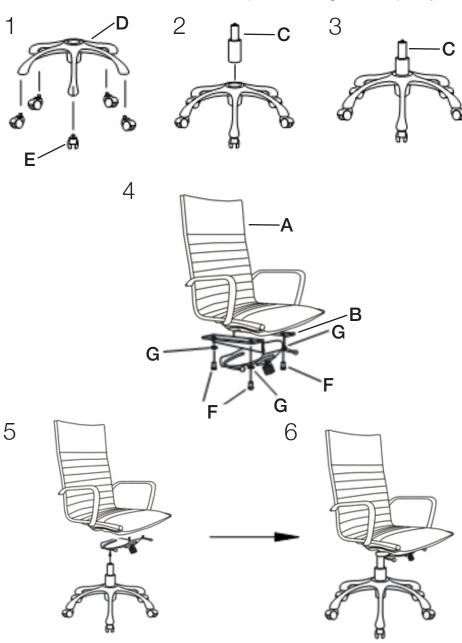

PLEASE NOTE: Check that you have received all components and hardware before assembling.