



STEP 10

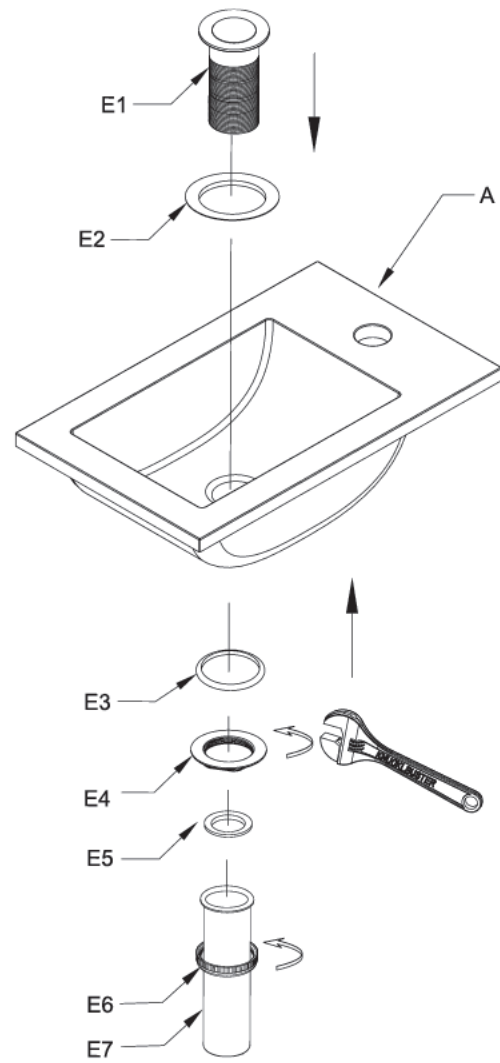


● Take apart the pop up drain and refer to the illustration install the drain into the sink.

STEP 11

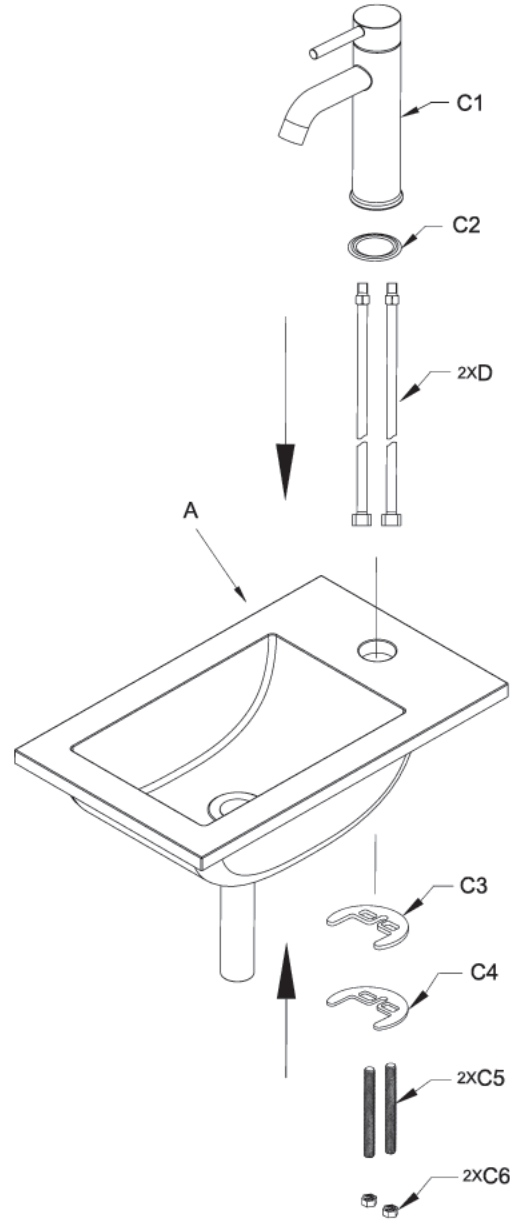


● Refer to the illustration, install the faucet with hot/cold water supply lines on the sink. Please install the rubber and metal gasket in turn.

STEP 12

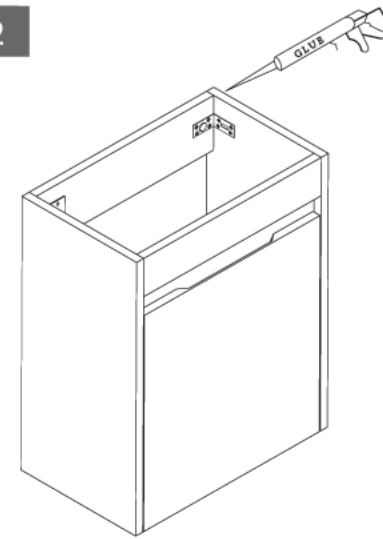


● Loosely apply sealant to the top installation area (please refer to the installation instruction of B).

STEP 13

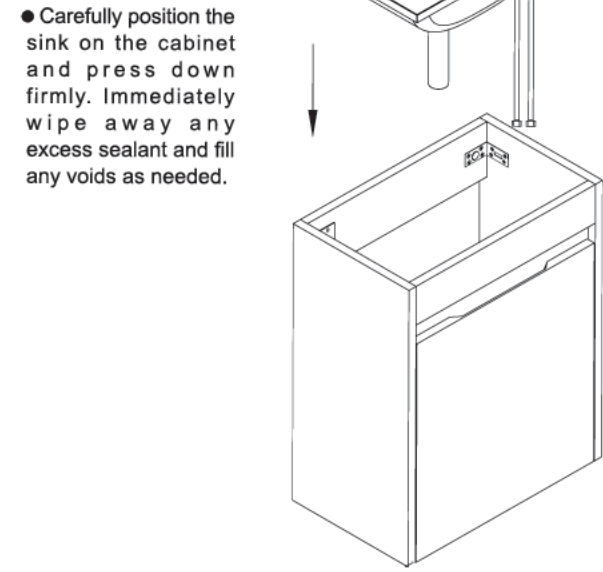


● Carefully position the sink on the cabinet and press down firmly. Immediately wipe away any excess sealant and fill any voids as needed.

STEP 14

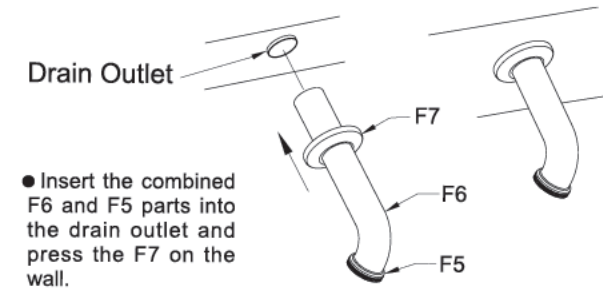



● Insert the combined F6 and F5 parts into the drain outlet and press the F7 on the wall.

STEP 15

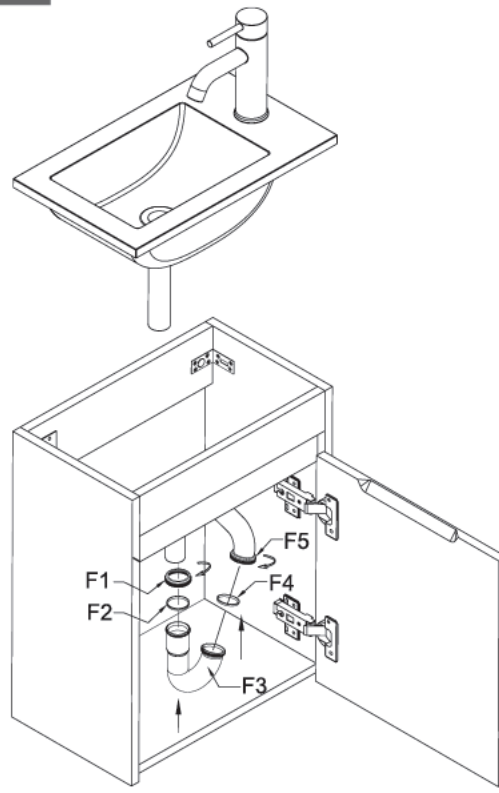


● Combine F1, F2, F3, F4, F5 parts and tighten the nut. Please adjust the P-trap based on your requirement.

STEP 16

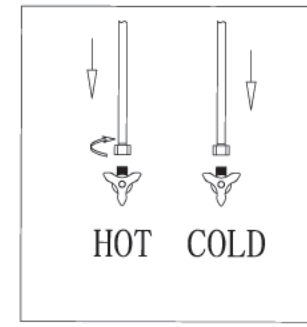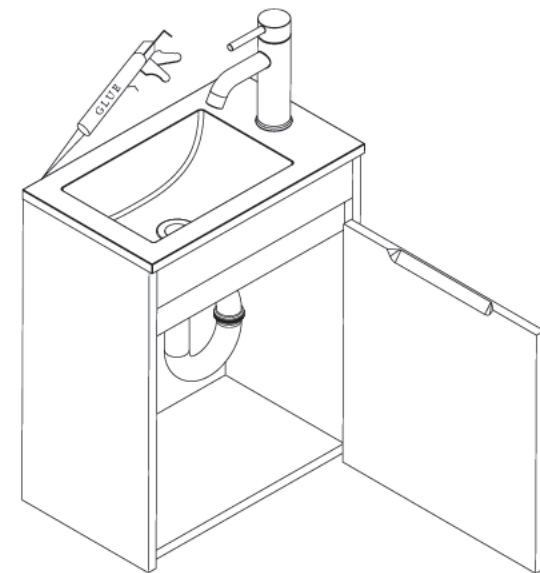

● To help prevent mildew, apply sealant to the space between the wall and edge of the cabinet. Install the hot/cold water supply lines.

DIMENSIONS

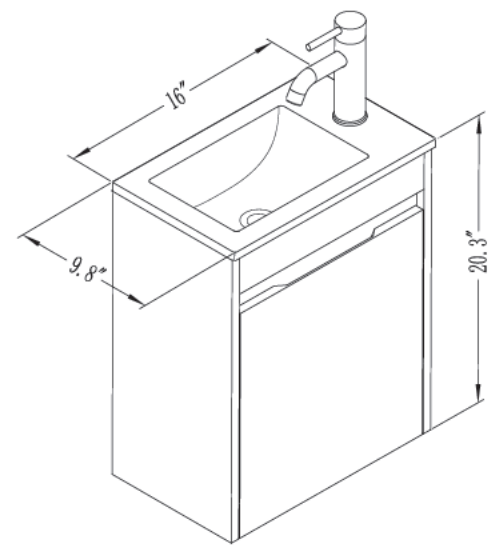

CARE AND CLEANING

1. Many cleansers contain abrasive and chemical substance which is not suitable for cleaning stainless steel, enamel, plating or plastic products. You may use mild cleansers or soaps to clean the surfaces. Wipe any splashes of cleaner solutions from the surface with a clean soft cloth.
2. Maintain ventilation in the bathroom and separate the dry area from the damp one if conditions permit. Try to open the door and windows of the bathroom to maintain adequate ventilation.
3. This cabinet is built to withstand normal bathroom humidity. For best results, keep this vanity dry and take necessary steps to minimize bathrom humidity by opening windows and doors and using the exhaust fan (if available).
4. To maintain the cabinet door, clean and wipe the door regularly with a soft cloth. Wipe condensation with a dry, soft cloth. Keep away from fires and high temperatures.
5. Please do not sit, lean or step on the basin cabinet.

Thank you very much for purchasing from us.


We have always been trying to provide the best service and reliable products for every customer.

We sincerely hope you will be satisfied with our products and leave us FIVE STARS and POSITIVE feedback/review in our page.

However, accident may happen sometimes, please contact us to resolve any issue before leaving a negative feedback.


Many thanks and welcome to our shop again!

INSTALLATION INSTRUCTIONS

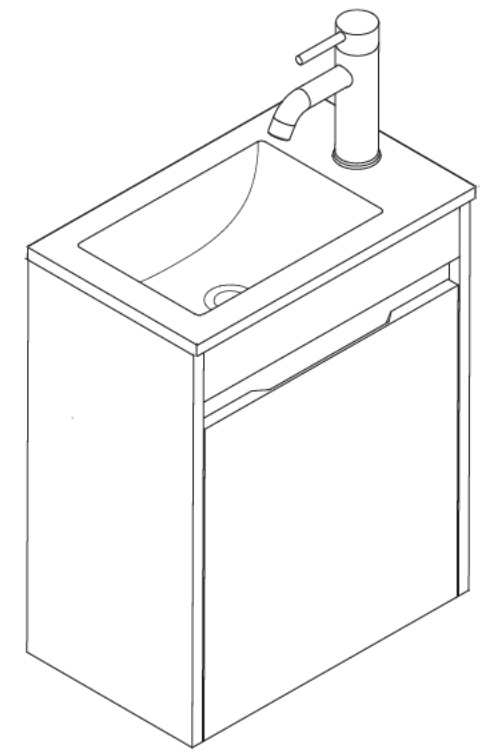


PARTS LIST

A

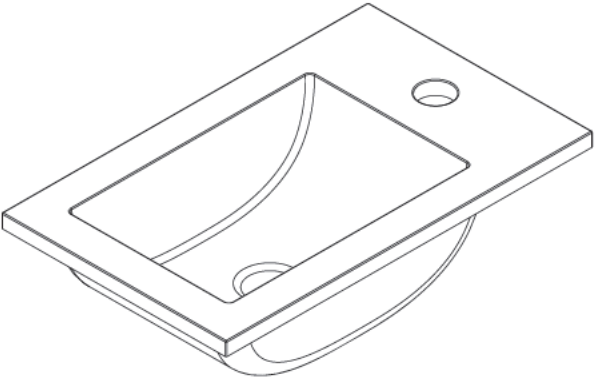

B

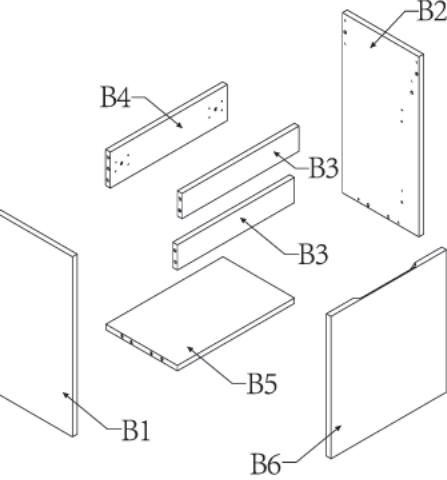

← B7x12

← B8x10

← B9x12

← B10x12


← B11x24

← B12x4

← B13x2

← B14x2


C

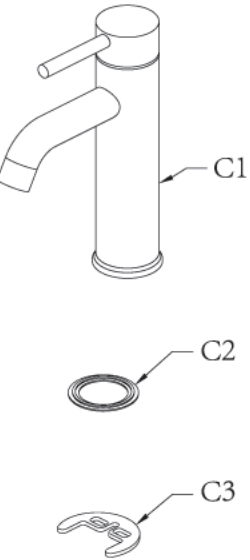


← C5x2

← C6

D

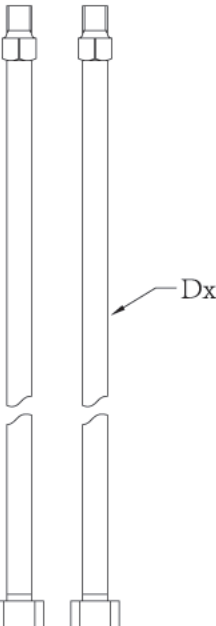


E

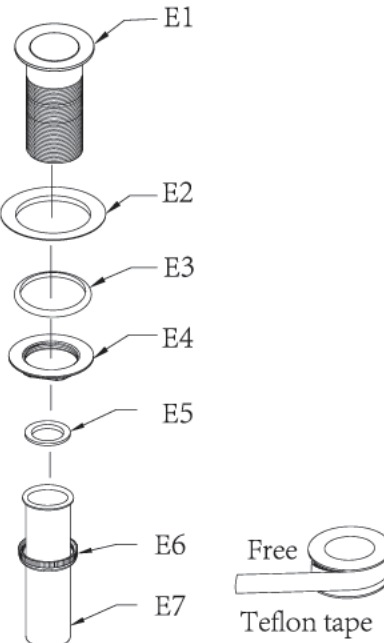


Free Teflon tape

F

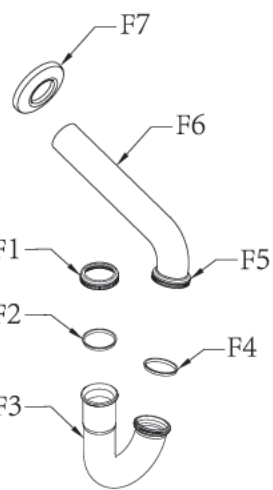

G

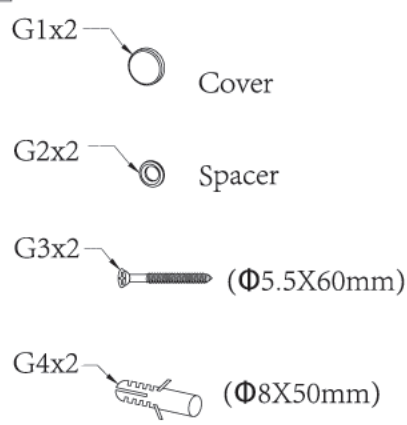

Cover

Spacer

(Φ5.5X60mm)

(Φ8X50mm)

CAUTION: Please confirm the part list before installtion

INSTALLATIONS

STEP 1


HARDWARE LIST

B7

← 12PCS

←

←

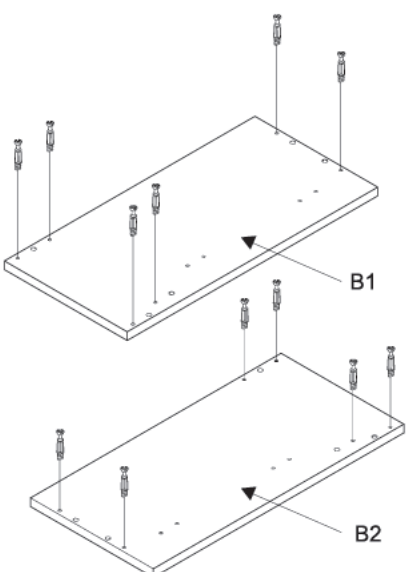

● Insert the cam screw into the shelves above.

STEP 2


HARDWARE LIST

B7

← 10PCS

←

←

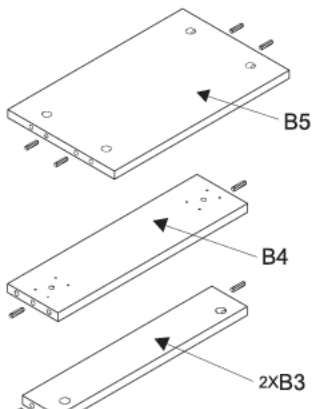

● Insert the wooden dowel pins into the shelves.

STEP 3

HARDWARE LIST

B11


← 4PCS

B13

← 2PCS

←

←

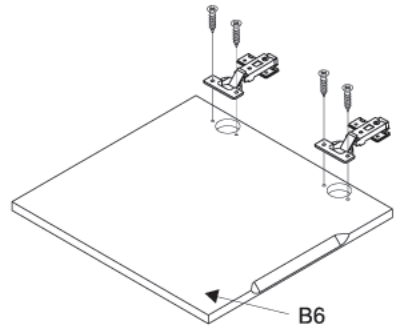

● Apply B11 screws to fix the hinge on the shelf #B6.

STEP 4

HARDWARE LIST

B9


← 6PCS

B10

← 6PCS

←

←

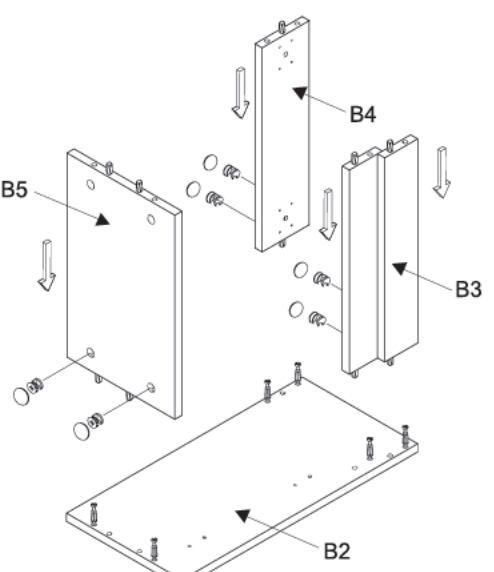

STEP 5

HARDWARE LIST

B9


← 6PCS

B10

← 6PCS

←

←

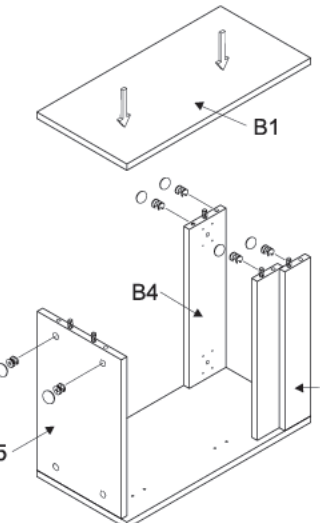

● Install the #B1 on the cabinet and tighten the cam lock with the cover.

STEP 6


HARDWARE LIST

B11

← 8PCS

←

←

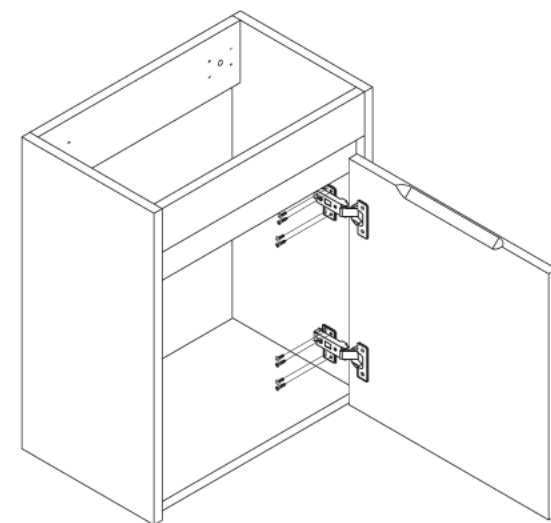


A

B

C

D

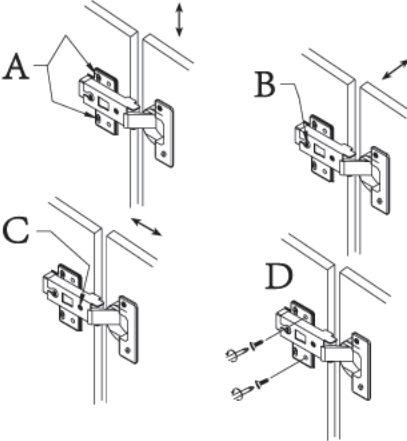

A.Height adjustment C.Side to side adjustment
B.Depth adjustment D.After adjustment A/B/C,tighten screws.

● Use E screws to connect the hinge bracket to the cabinet. To ensure proper cabinet alignment, refer to the above illustrations for instructions about adjusting the cabinet height, depth and lateral movement.

STEP 7

HARDWARE LIST

B11


← 16PCS

B14

← 2PCS

←

←

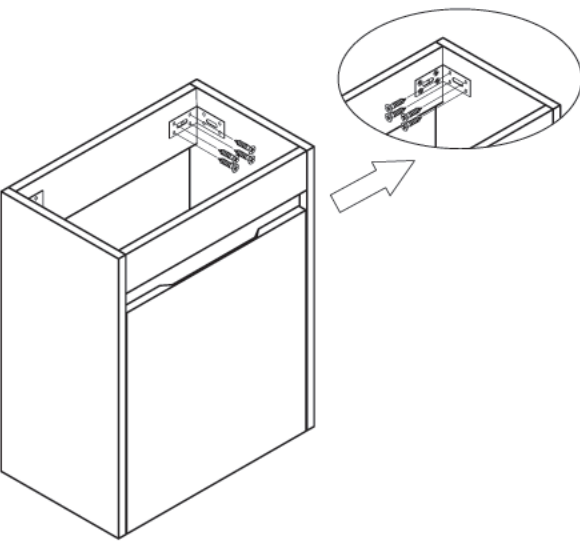

STEP 8


HARDWARE LIST

G4

← 2PCS

←

←

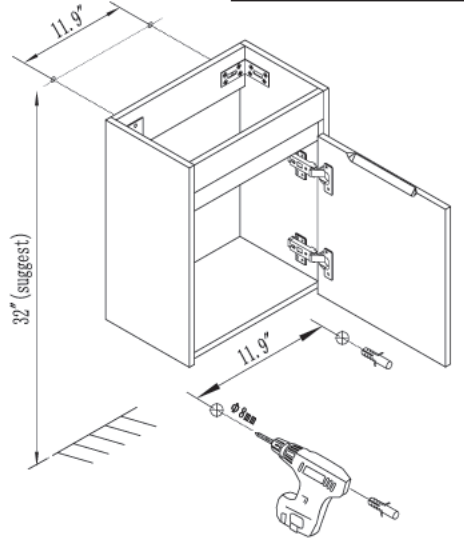

● Measure the distance of hole on the back of cabinet and insert the expansion anchor into the wall.

STEP 9

HARDWARE LIST

G1

← 2PCS

G2


← 2PCS

G3

← 2PCS

←

←

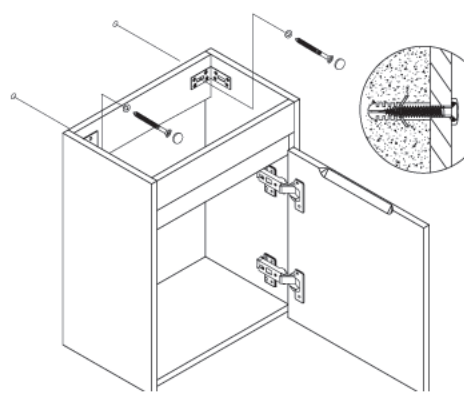

● Insert G3 screws to the G2 spacer and install the cabinet to the wall, then tighten the nut cover.