


Night Stand

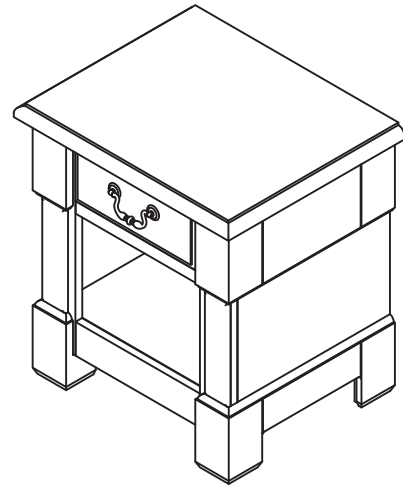


IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

Part List

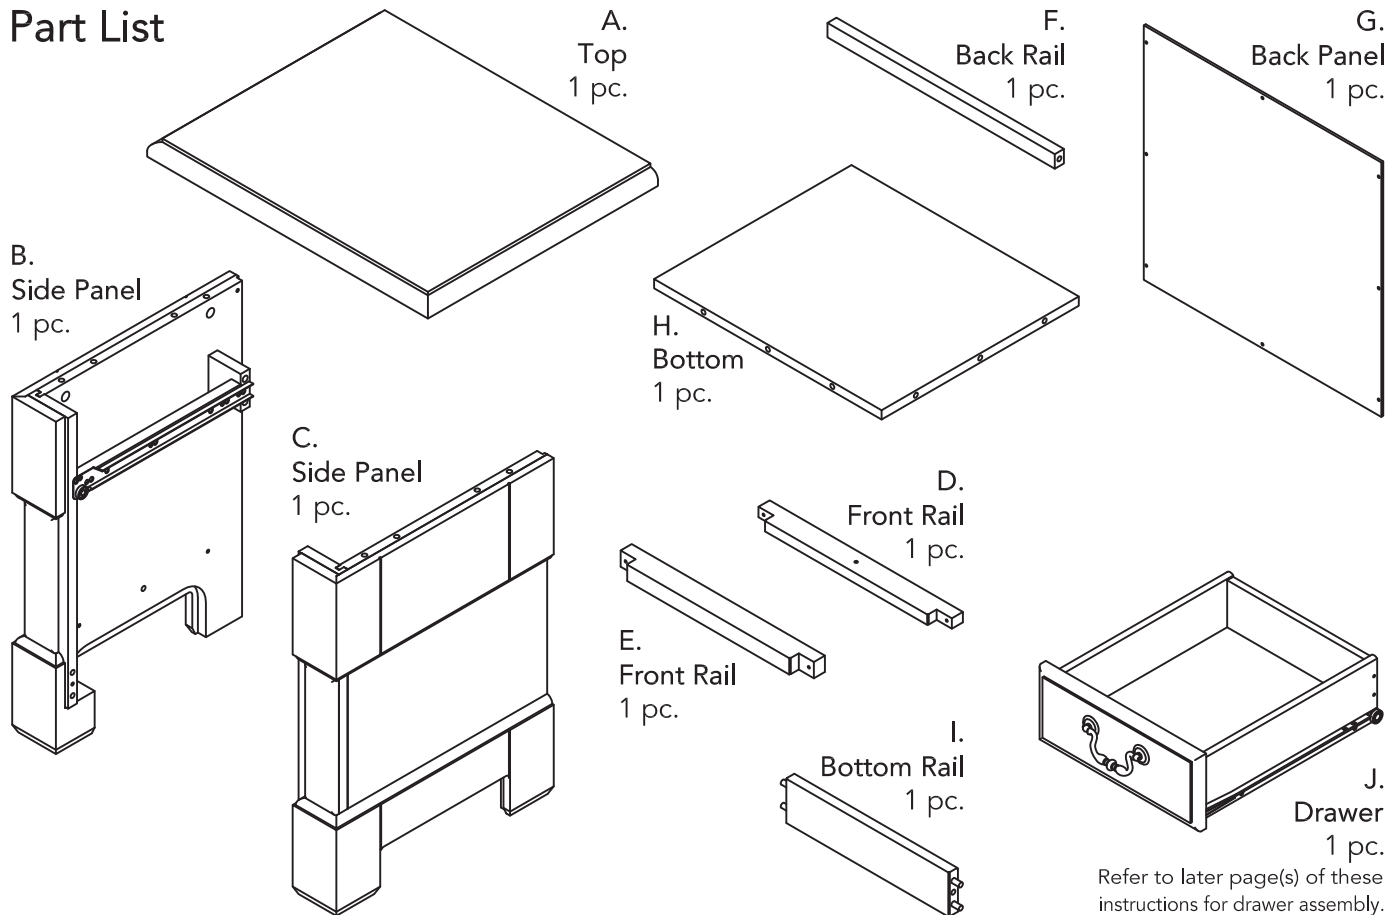

Hardware List



Cam Lock Screw
14 pcs. (+2 extra)



Cam Lock
14 pcs. (+2 extra)



M3x32
1 1/4" Round Head Screw
4 pcs. (+1 extra)



M4x25
1" Round Head Screw
1 pc. (+1 extra)



M3x13
1/2" Round Head Screw
8 pcs. (+1 extra)



M3x32
1 1/4" Flat Head Screw
8 pcs. (+1 extra)



M3x19
3/4" Flat Head Screw
2 pcs. (+1 extra)



Machine Screw
2 pcs.



Handle
1 pc.



Wooden Dowel
7 pcs. (+1 extra)

Tool(s) required for assembly: Phillips screwdriver

Assembly Instructions 2/7

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.

STEP 1

Insert Cam Lock Screws into pre-drilled holes in Top (A), Side Panels (B), (C) and Bottom Rail (I), then tighten.



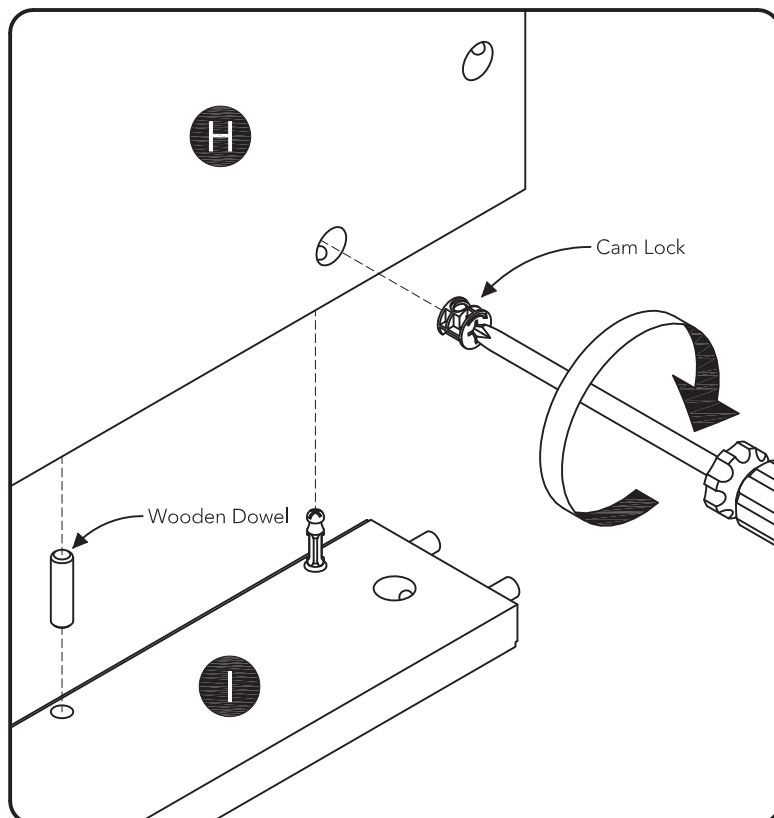


Figure 1

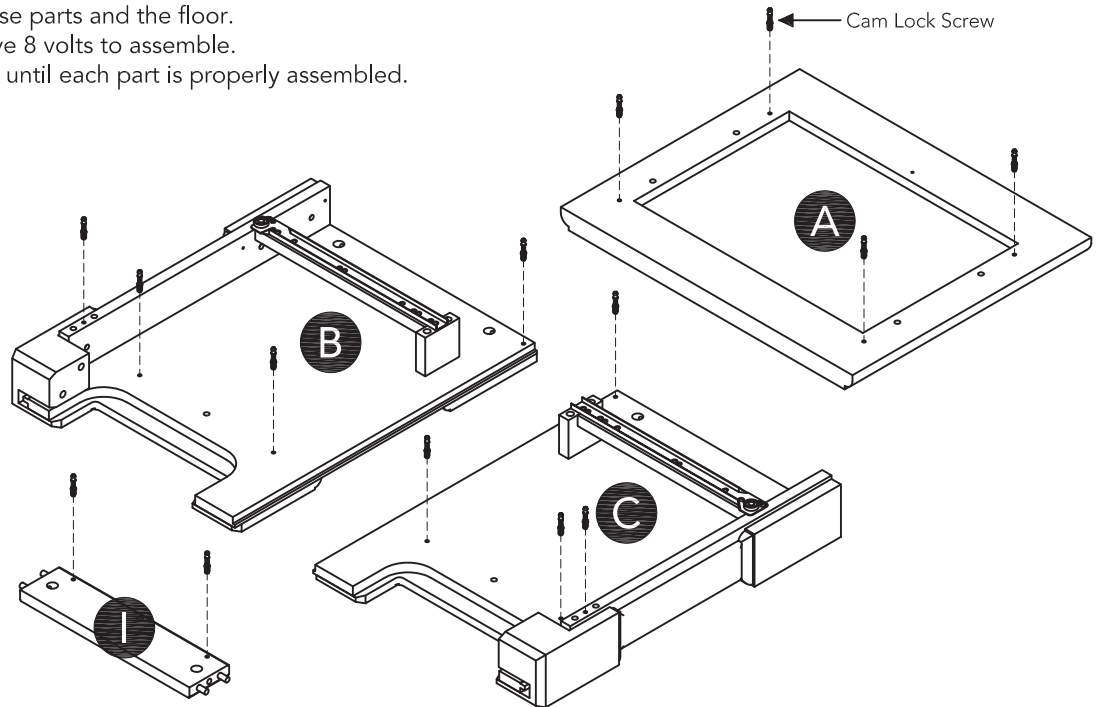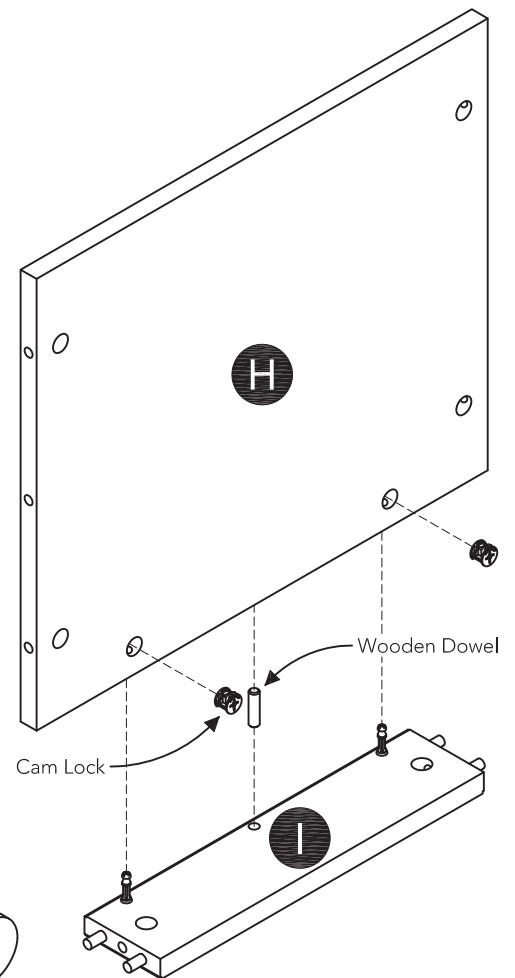


STEP 2

Attach Bottom (H) to Bottom Rail (I) with Cam Locks and Wooden Dowel. (See Figure 1).

Assembly Instructions 3/7


STEP 3

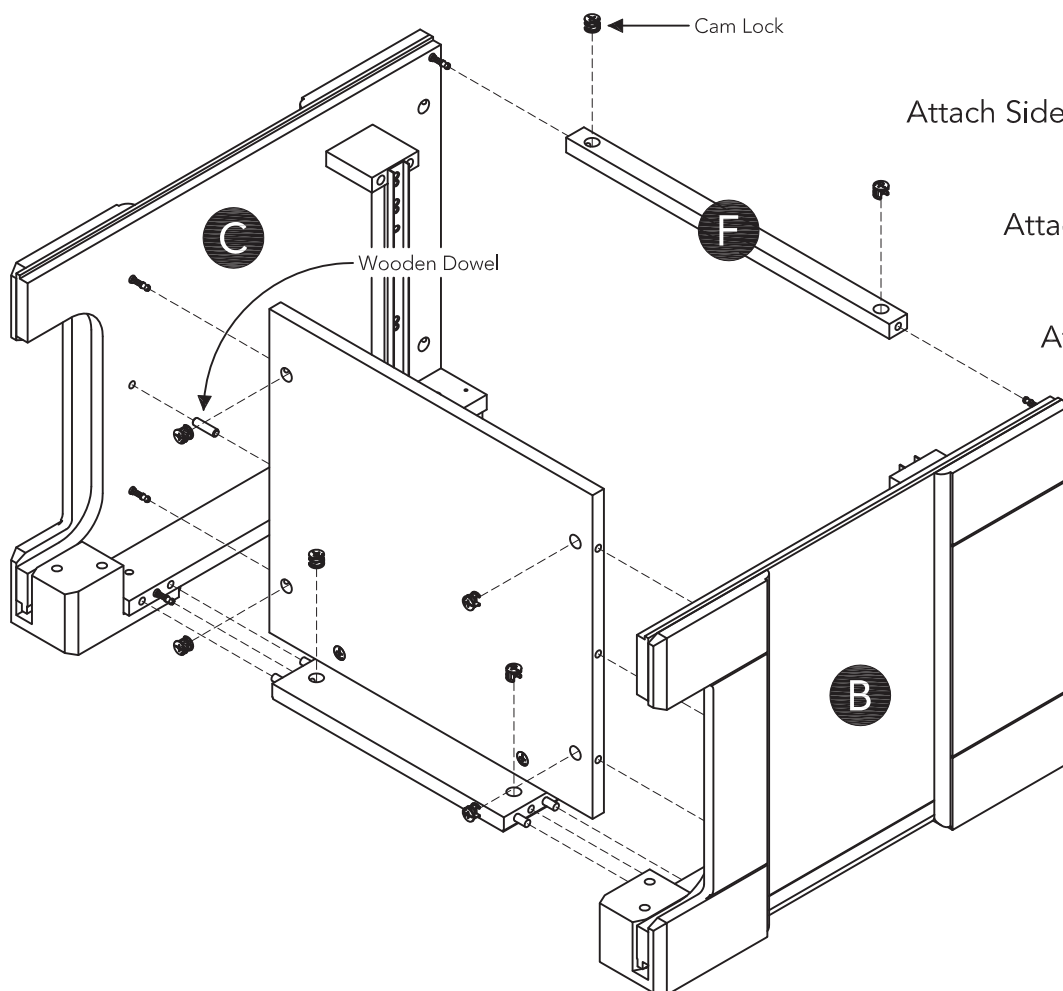

Attach Side Panel (B) to unit with Cam Locks and Wooden Dowel.

Attach Back Rail (F) to unit with Cam Lock.

Attach Side Panel (C) to unit with Cam Locks and Wooden Dowel.

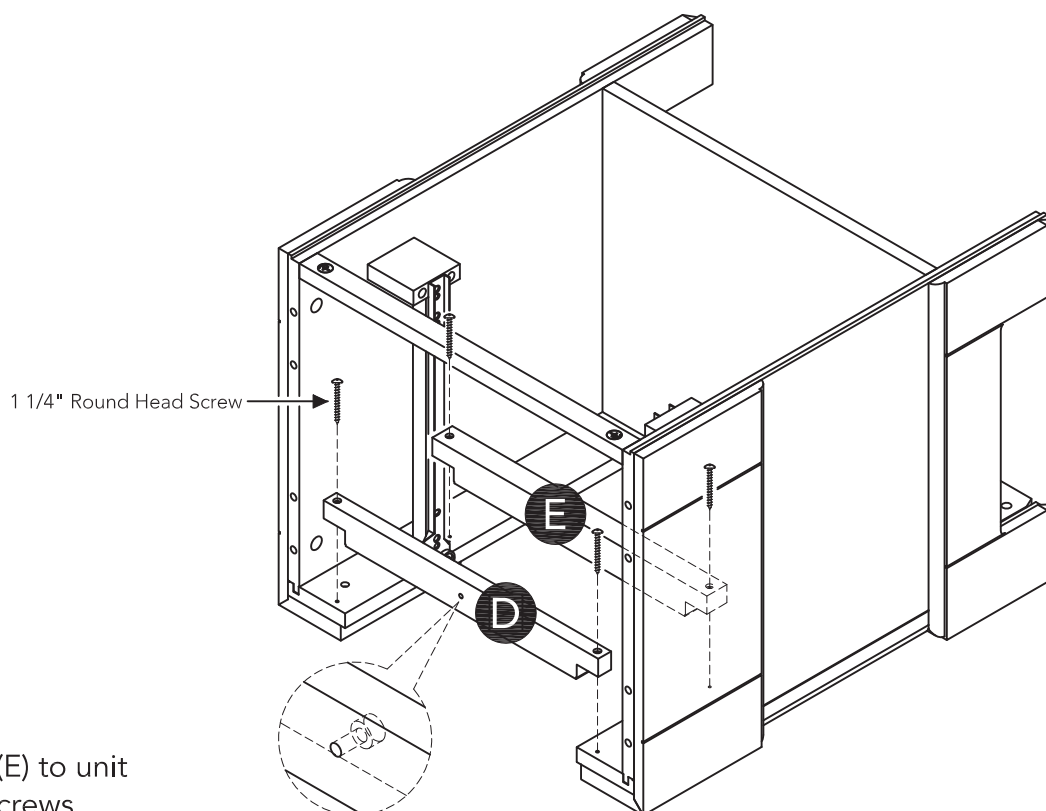

STEP 4

Attach Front Rails (D) and (E) to unit with 1 1/4" Round Head Screws.


Assembly Instructions 4/7

STEP 5

Place Top (A) upside down on a soft cloth.

Attach unit to Top (A) with Cam Locks, 1" Round Head Screw and Wooden Dowels.

Note: A Philips screwdriver 5" or less in length is recommended.

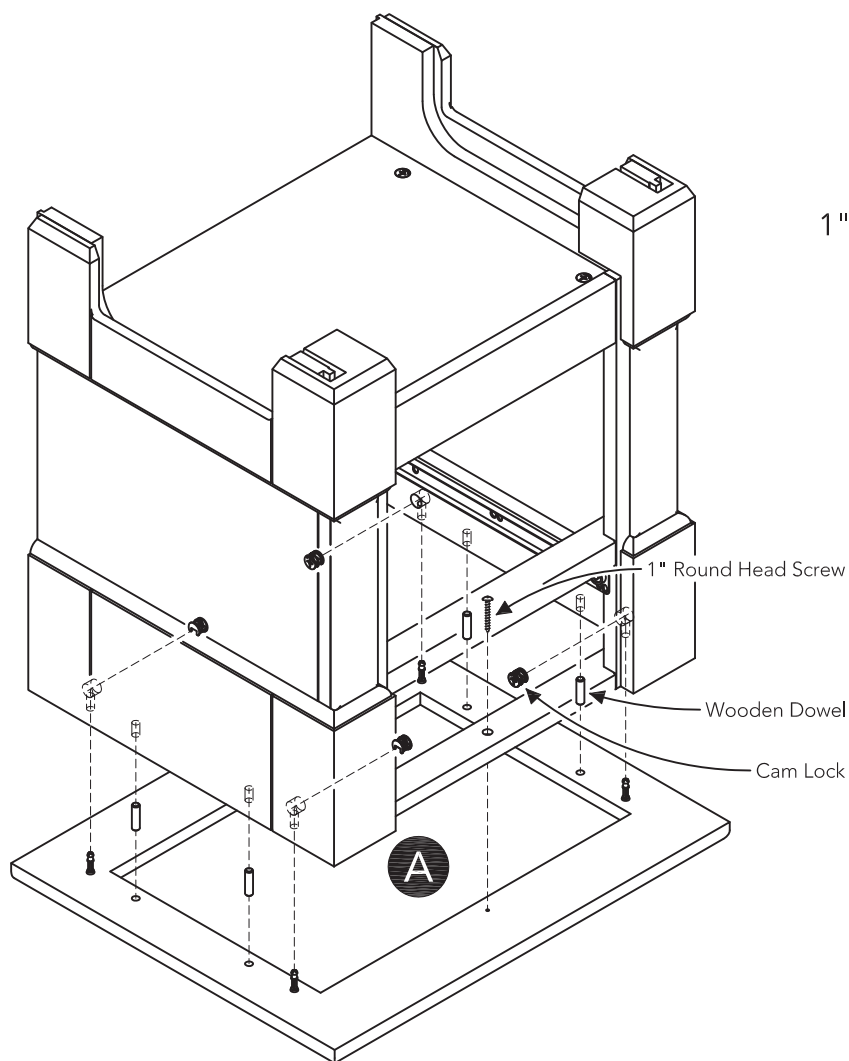


1/2" Round Head Screw


STEP 6

Turn unit over to its' upright position.

Attach Back Panel (G) to unit with 1/2" Round Head Screws.

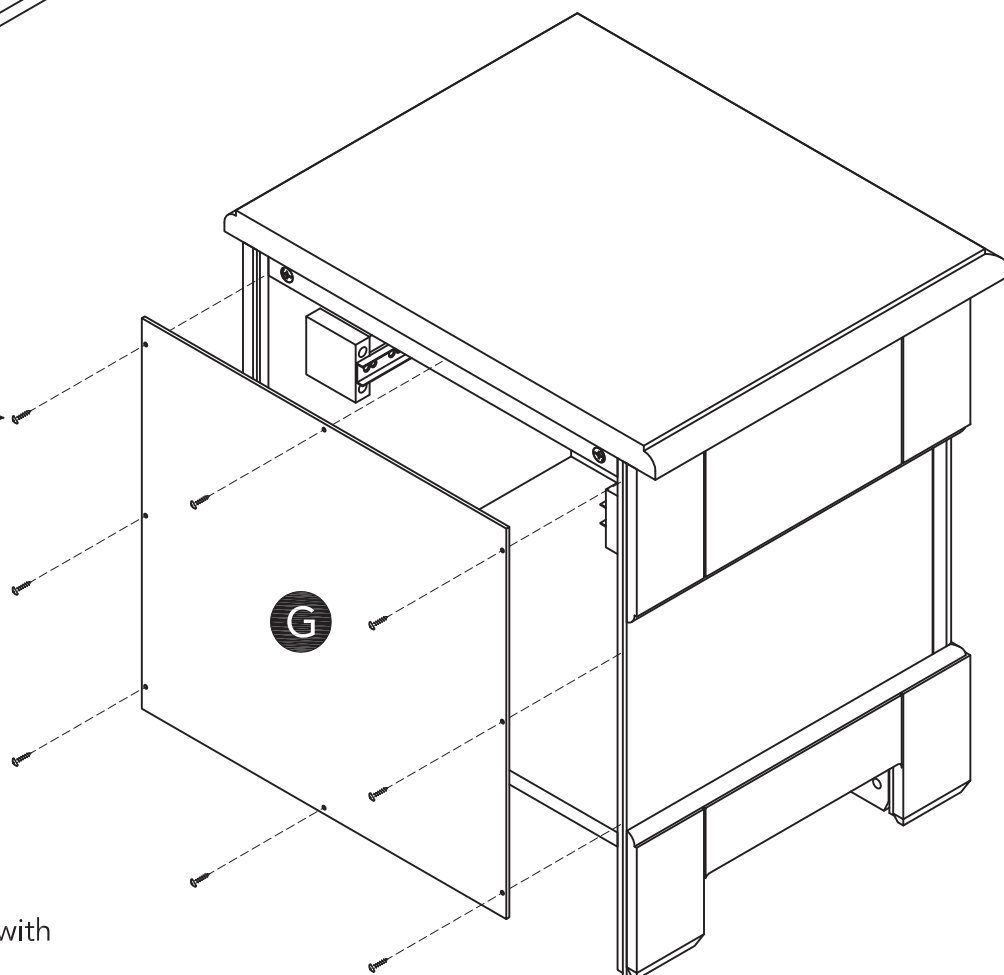

Drawer (J)

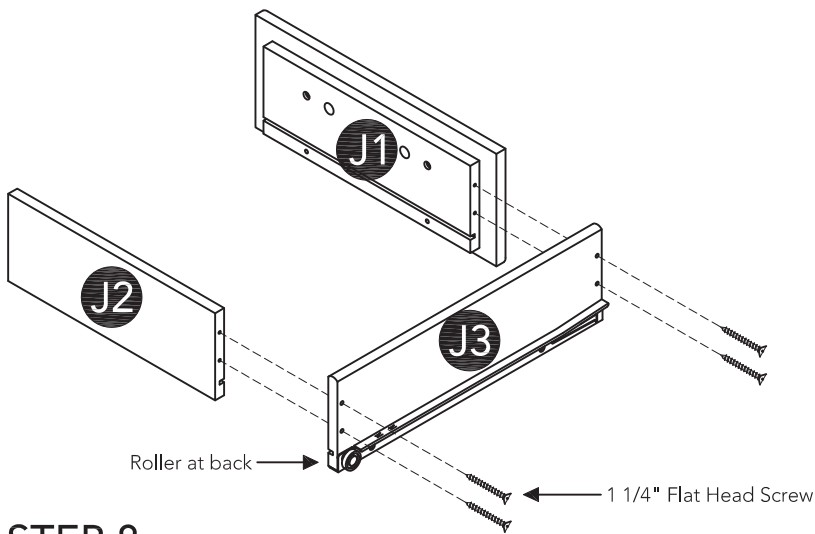



STEP 7

Attach Drawer Side (J3) to Drawer Front (J1) and Drawer Back (J2) with 1 1/4" Flat Head Screws.

STEP 8

Insert Drawer Bottom (J5) into groove.

Attach Drawer Side (J4) to unit with 1 1/4" Flat Head Screws.

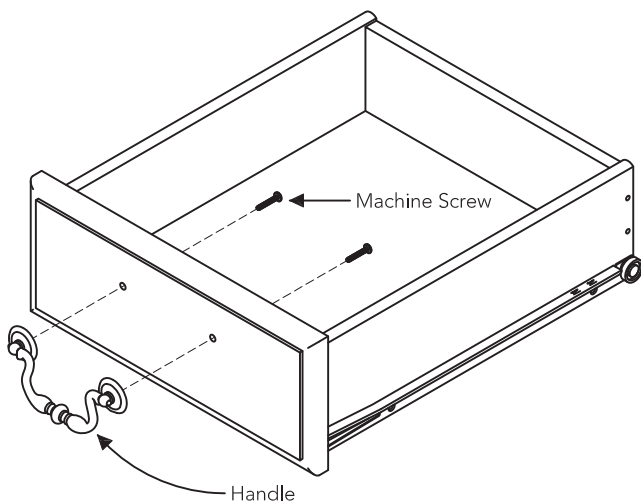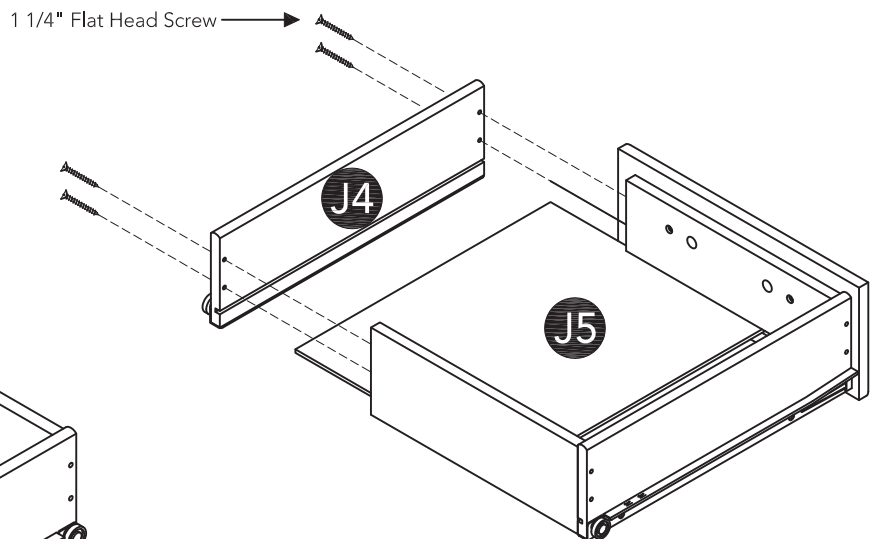


STEP 9


Attach Handle with Machine Screws.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.


Part List

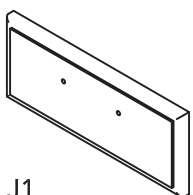


J1.
Drawer Front
1 pc.

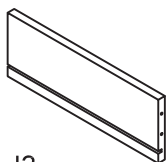


J2.
Drawer Back
1 pc.

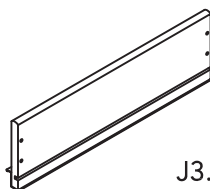

J3.
Drawer Side
1 pc.

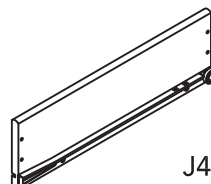

J4.
Drawer Side
1 pc.


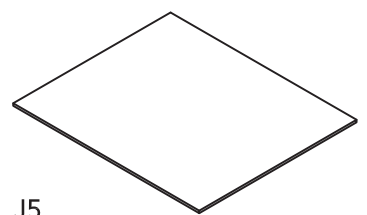


J5.
Drawer Bottom
1 pc.

Assembly Instructions 6/7

STEP 10

Loosen slightly screws pre-installed on back of drawer front.

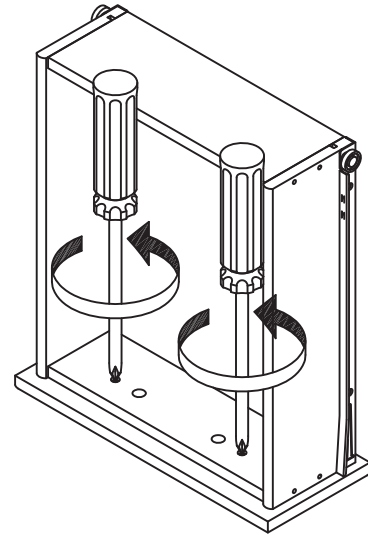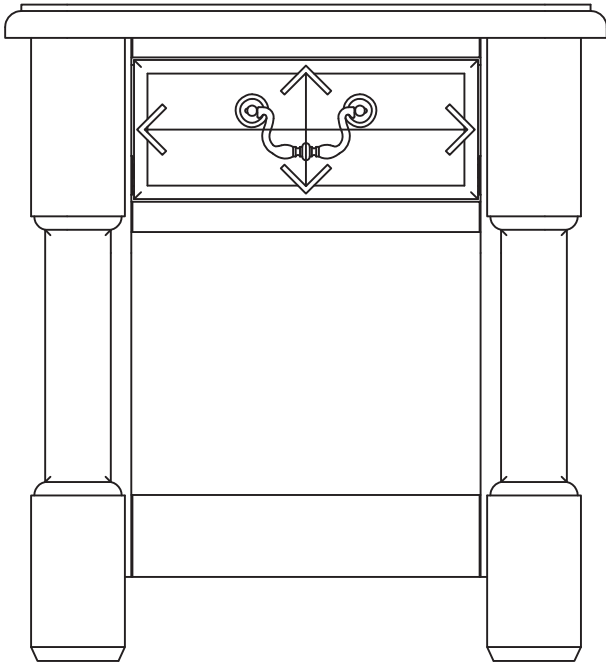

STEP 11



Insert drawer into unit, then adjust drawer front panel left or right and up or down until drawer gaps look proportional.

STEP 12

Pull drawer open slowly and re-tighten screws from Step 10.


Make sure drawer front panel does not move and lock drawer front panel into position with 3/4" Flat Head Screws.

Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

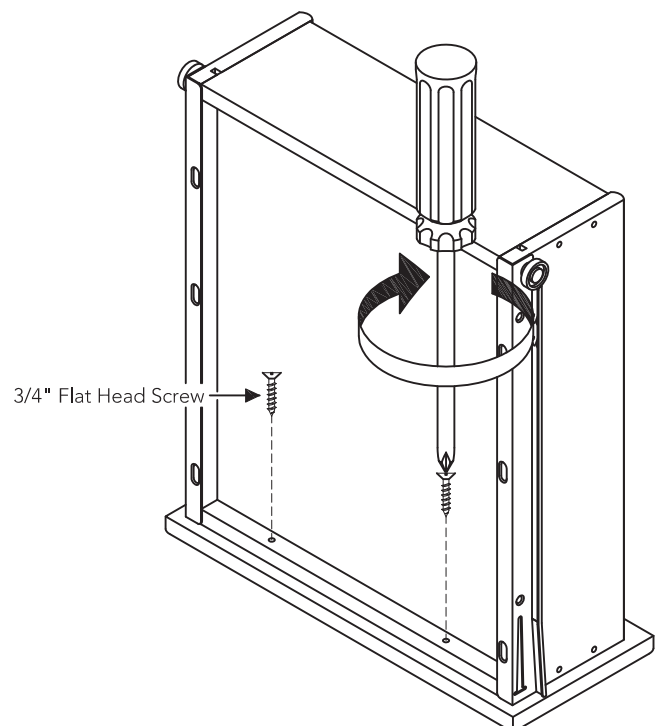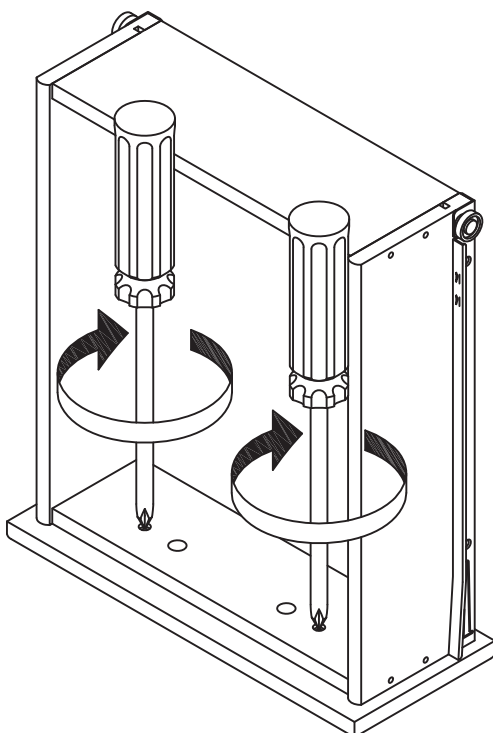

STEP 13

Slide Drawer (J) into position.

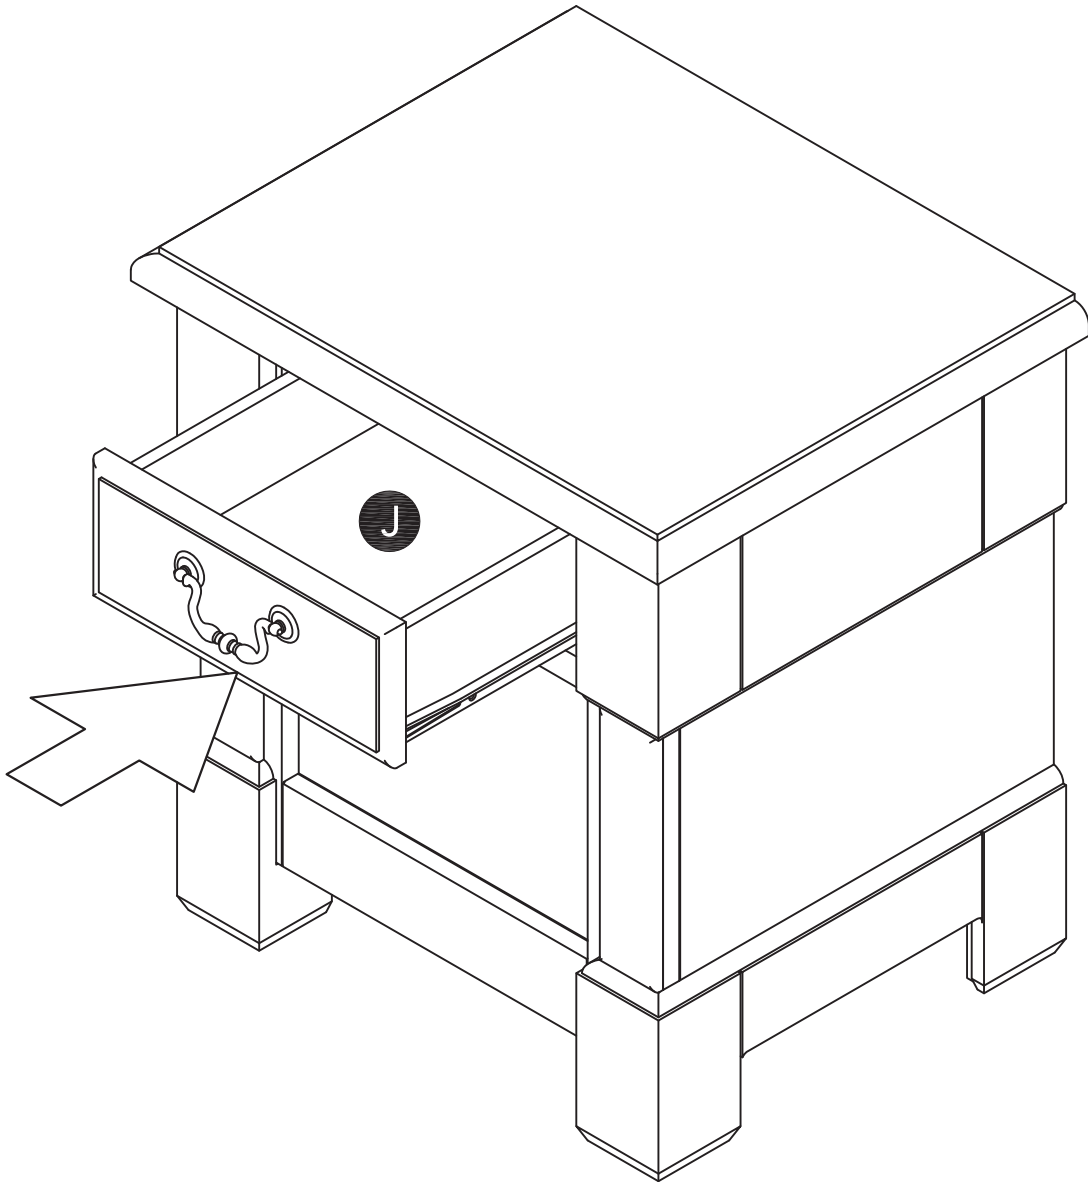

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.

**PREVENT
CRACKING**



Do not place
in direct sunlight.

**PREVENT
FADING**



Do not write
directly on surface.

**PREVENT
MARKING**



Do not place hot
objects on surface.

**PREVENT
FINISH DAMAGE**



Do not use rubber
based placemats.

**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.

**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.

