


# ROUND END TABLE

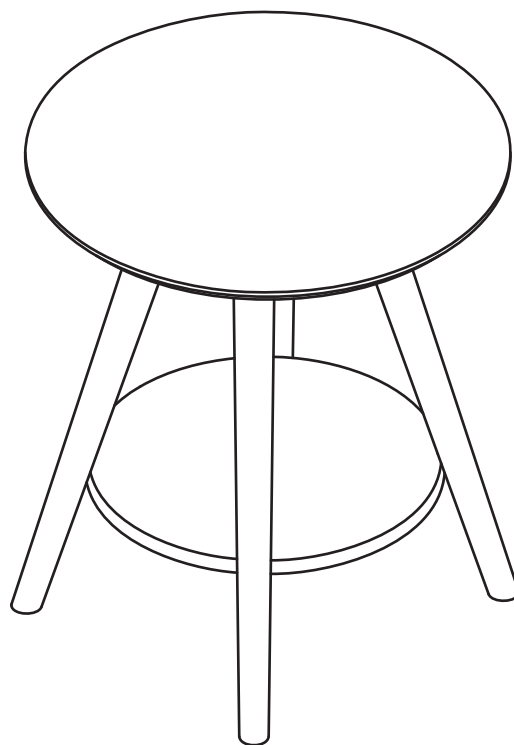

## ASSEMBLY INSTRUCTIONS

---







We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish . Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .

---




Please do not return to the store  
Broken or missing parts?  
Need help with assembly?

## Hardware List

<b>A</b>	
<b>Cam bolt (4pcs)</b>	
<b>B</b>	
<b>Cam lock (4pcs)</b>	
<b>C</b>	
<b>Blot (8pcs)</b>	
<b>D</b>	
<b>Flat washer (8pcs)</b>	
<b>E</b>	
<b>Lock washer (8pcs)</b>	
<b>F</b>	
<b>Allen wrench (1pc)</b>	


## Part List

①

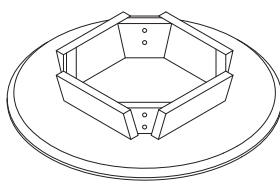


Top panel (1pc)

②

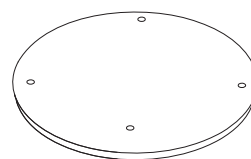




Bottom shelf (1pc)

③

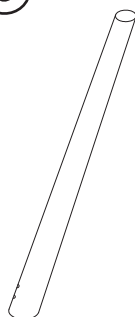

Leg (4pcs)


## Assembling the unit with camlocks .

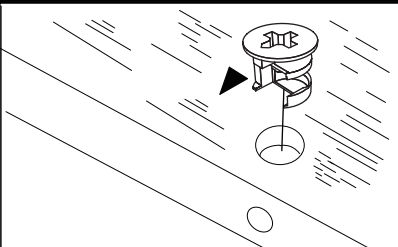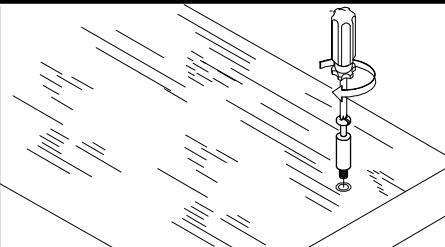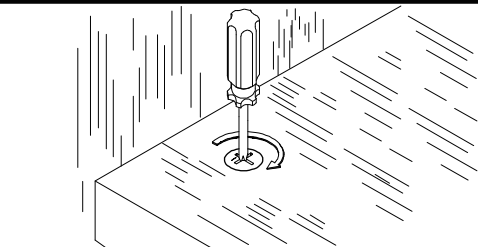		
Insert camlock, arrow must face bolt hole.	Gently screw cam bolt into the threaded anchor	Gently screw the cam clockwise into locked position. Do not overtighten.

## Step 1


\* Place bottom shelf ① upside down on carpet or other soft surface.\*

1. Screw cambolts (A) into legs ③ .
2. Connect leg ③ to top panel ① as shown using bolt (C ), lock washer (E ), flat washer (D), and allen wrench (F) .
3. Insert camlocks (B) into bottom shelf ② .
4. Connect bottom shelf ② to assembly as shown.

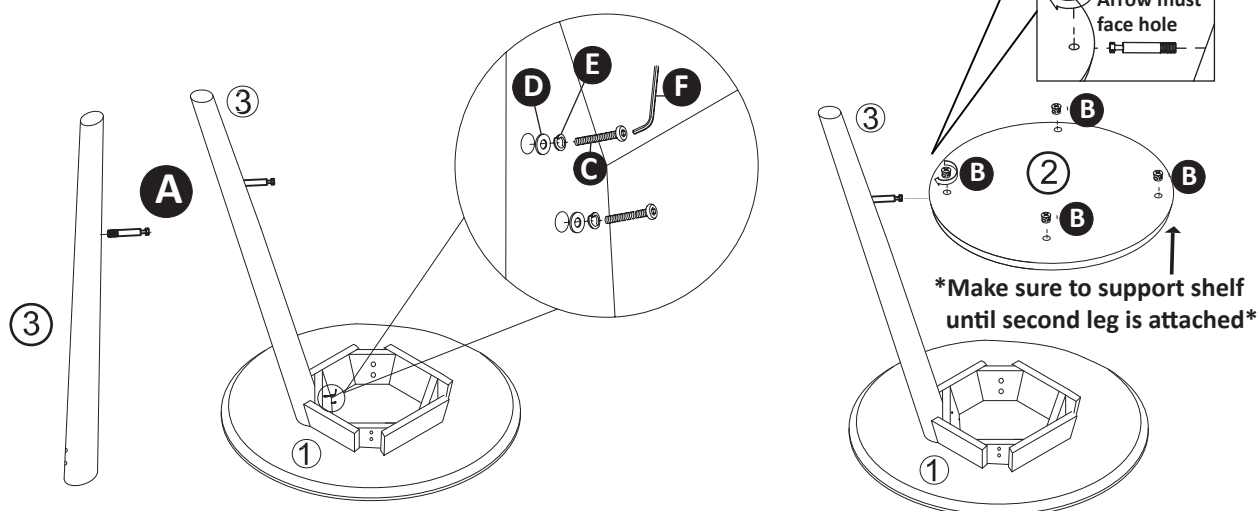


## Step 2

1. Connect leg ③ to assembly as shown using bolt (C ), lock washer (E ), flat washer (D), and allen wrench (F).

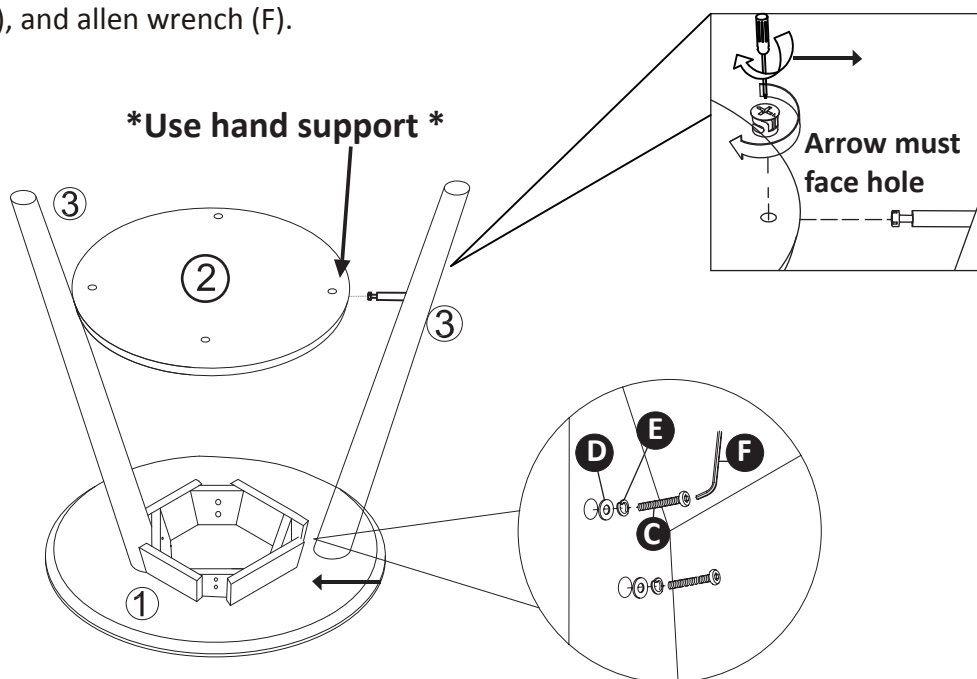

### Step 3

1. Connect leg ③ to assembly as shown using bolt (C), lock washer (E), flat washer (D), and allen wrench (F).

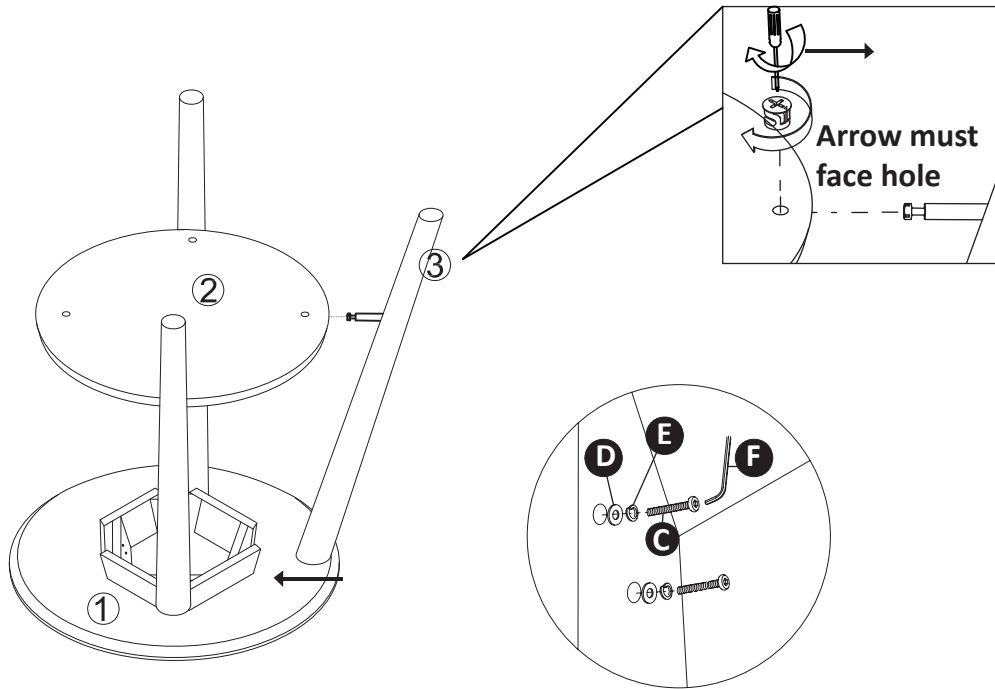

### Step 4

1. Connect leg ③ to assembly as shown using bolt (C), lock washer (E), flat washer (D), and allen wrench (F).
2. Enjoy.

