



ASSEMBLY INSTRUCTIONS


LOFT

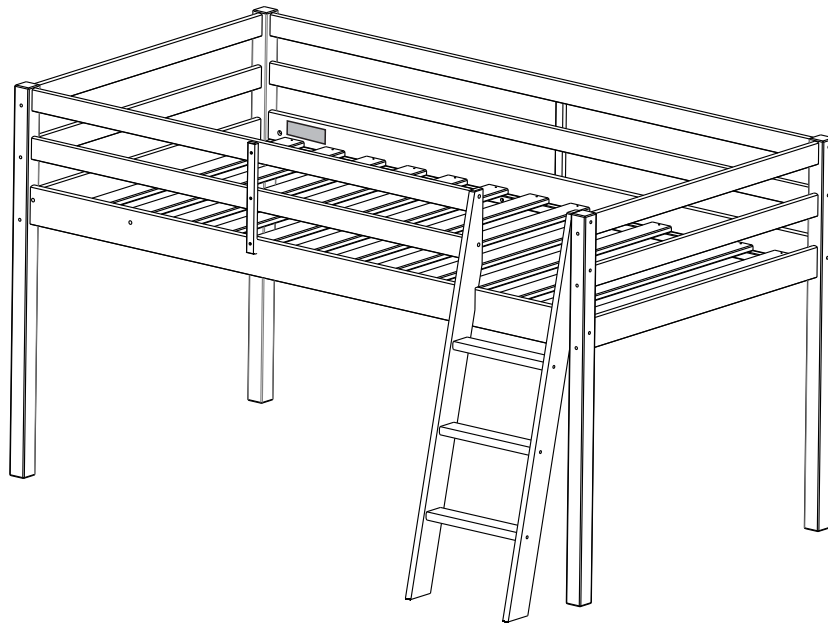

OPTION 1

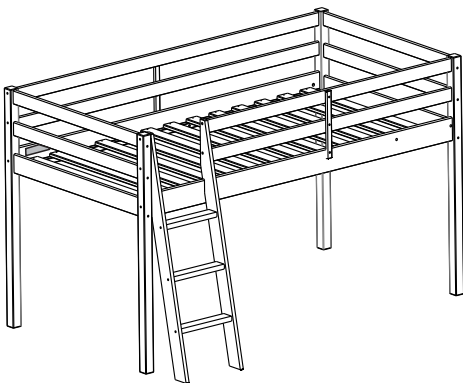


OPTION 2

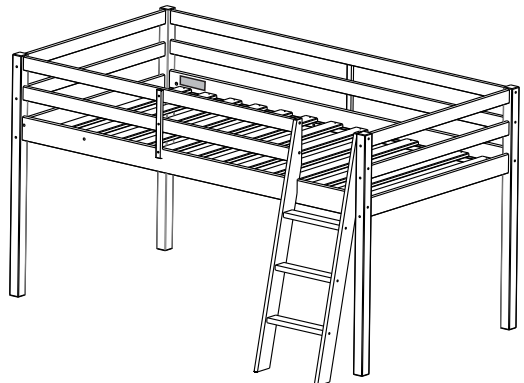


REPLACEMENT PARTS


Please do not contact the company purchased from as we can help you faster.

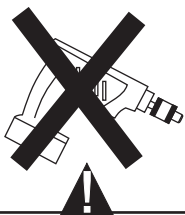


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

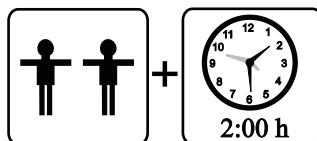

Tools Required






(Not included)





(Not included)

Part List - LOFT

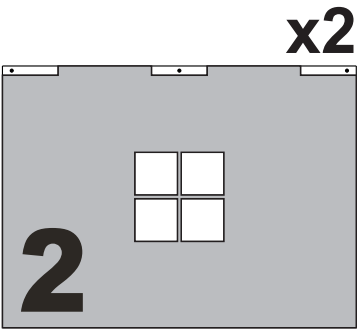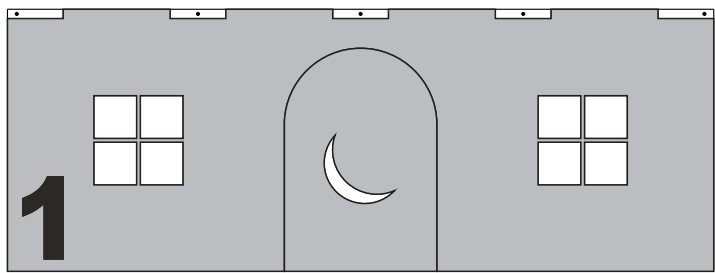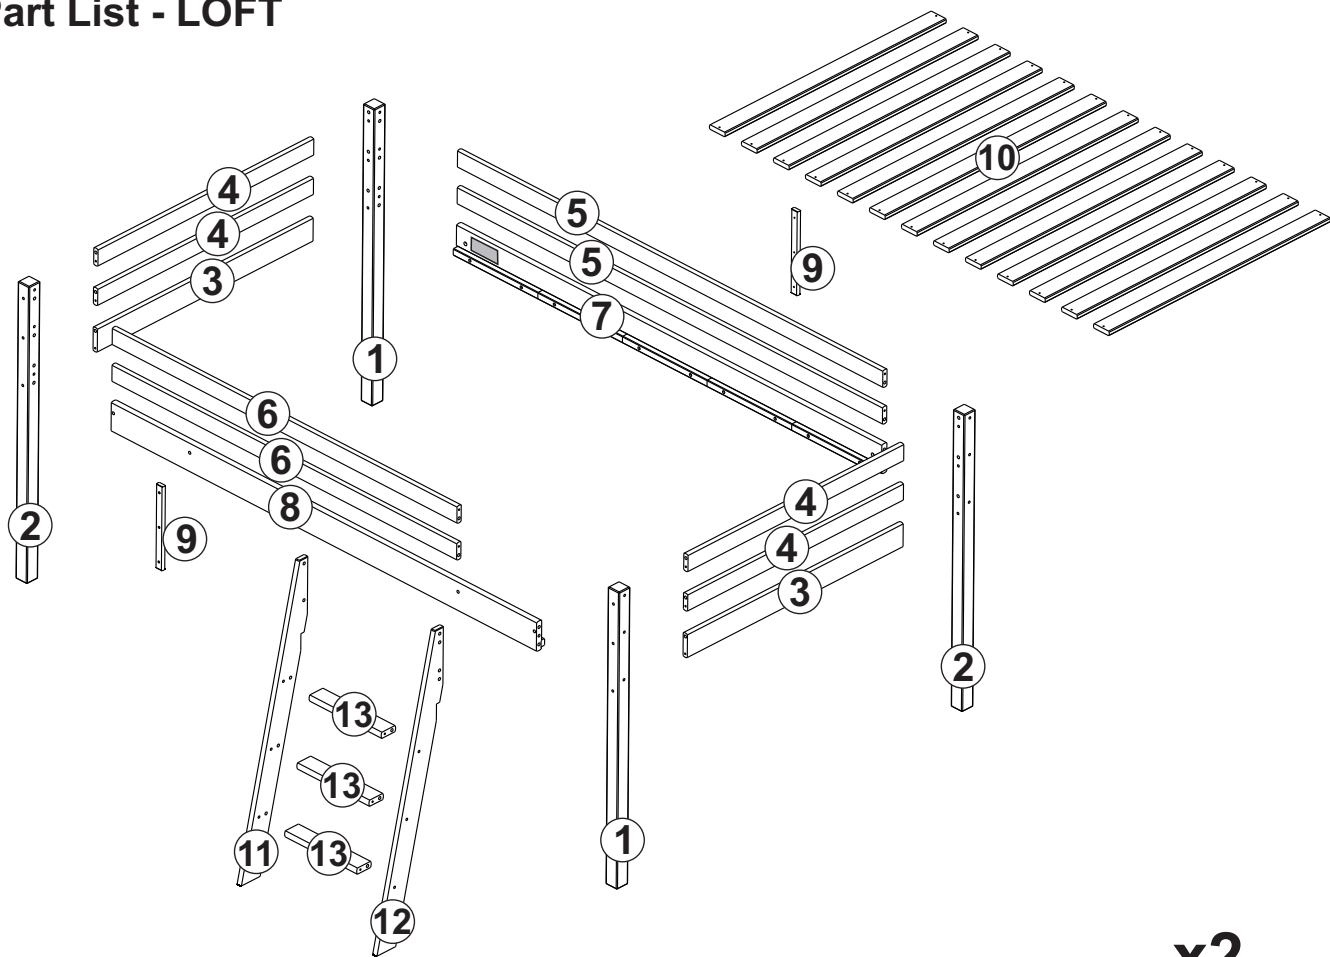

Identifying the Hardware-Identify the hardware using the illustrations below.

A  1/4 x 100 x 17mm	B  7 x 90 x 17mm	C  4.0 X 30
D  7 x 60 x 17mm	E  1/4	F  10X40
G  02	H  4,0 x 35	I  02
K  3,5 x 16	L  01	

01

F





10X40

34


L



01

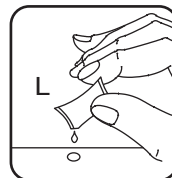

(Not included)

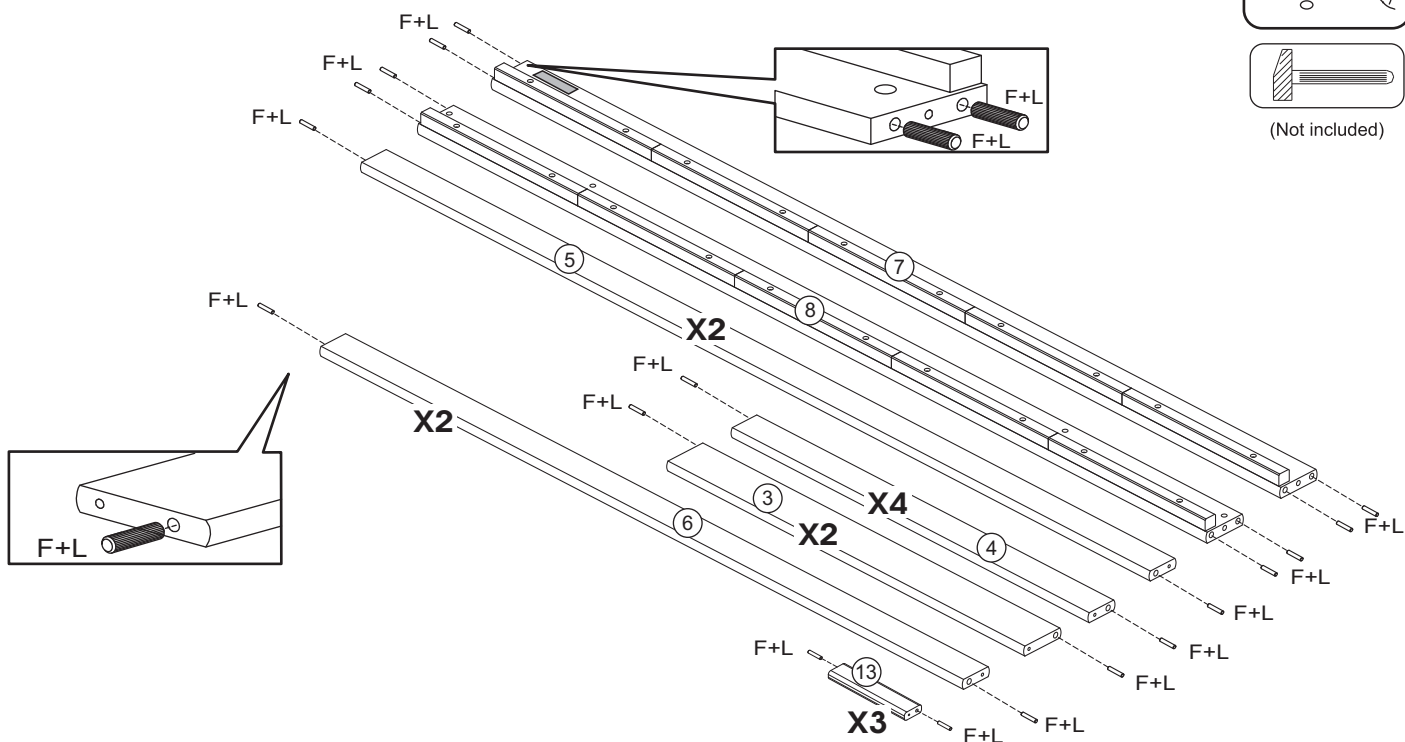

02


B




7 x 90 x 17mm

12

I



01

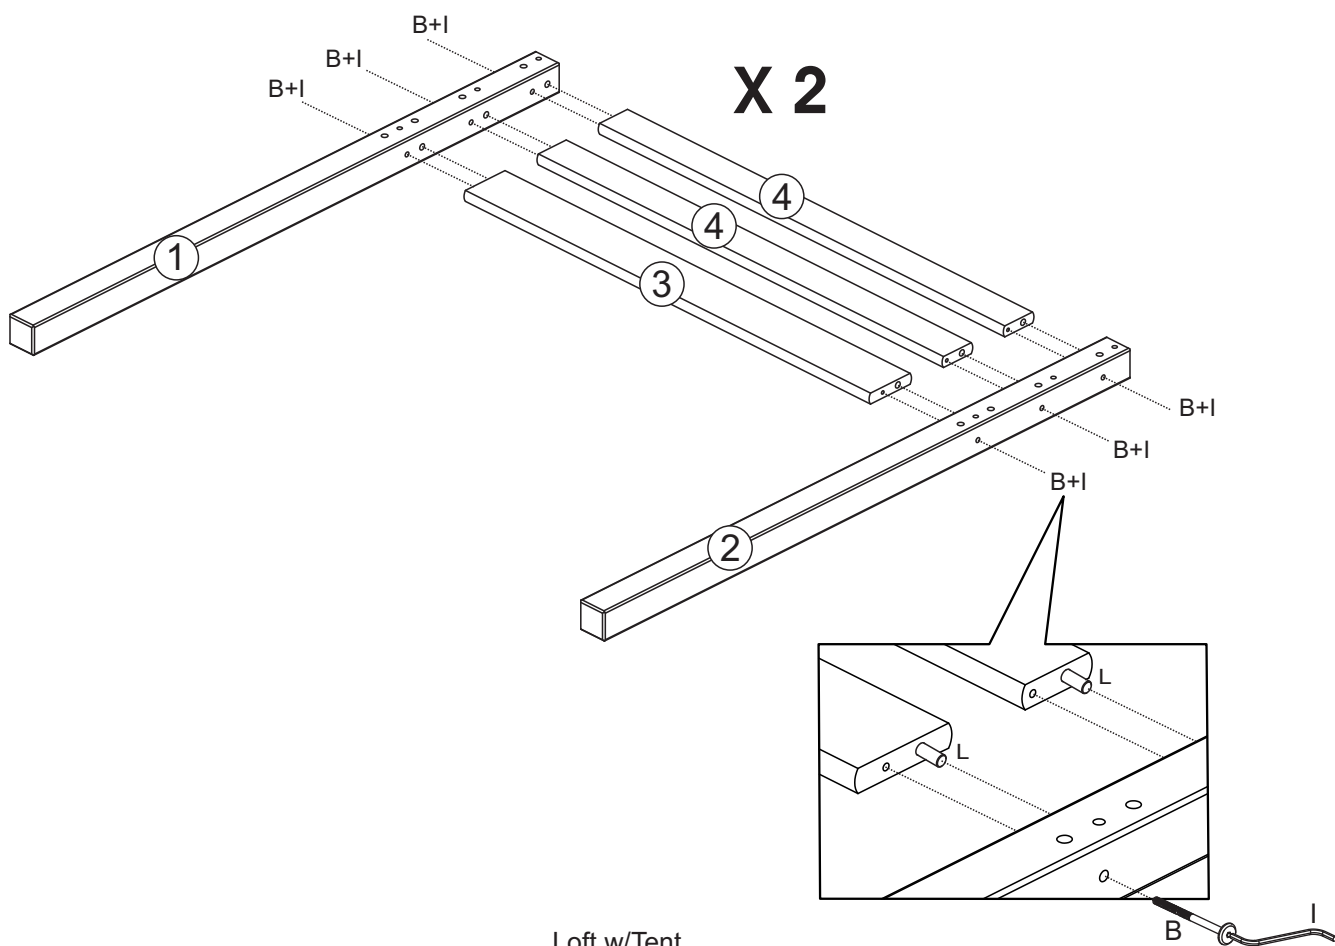


Loft w/Tent





03

A  **04**
1/4 x 100 x 17mm

B  **04**
7 x 90 x 17mm

E  **04**
1/4


I  **01**

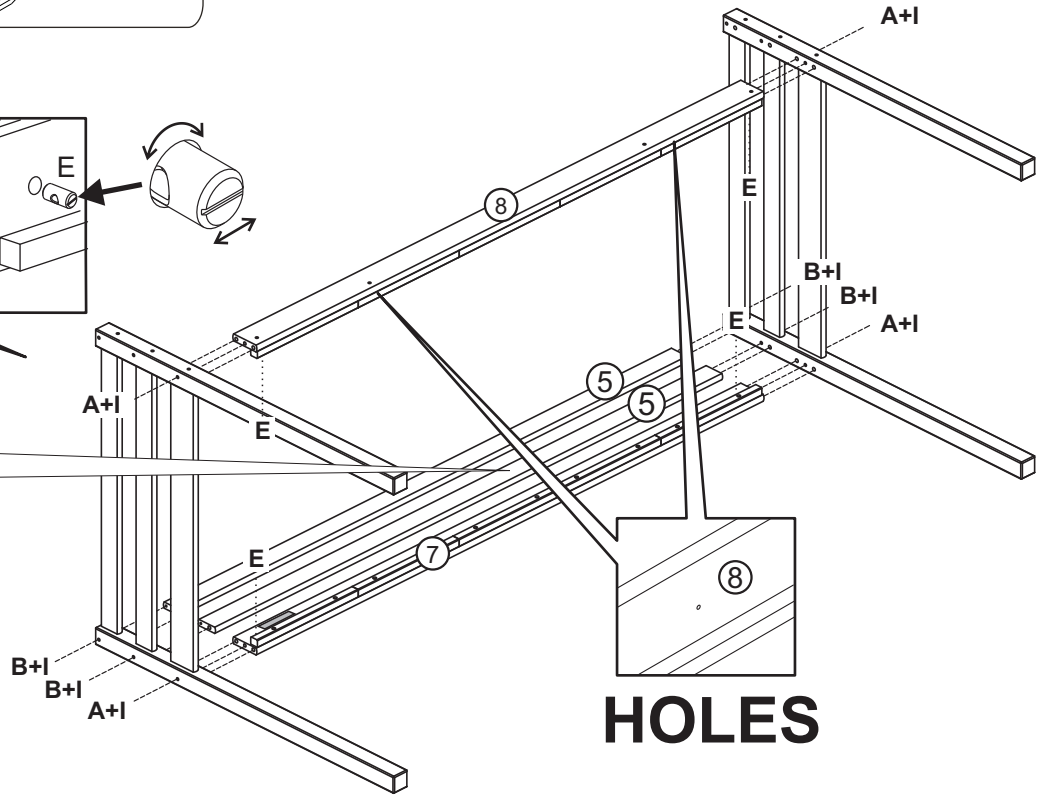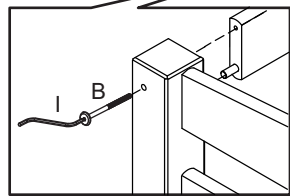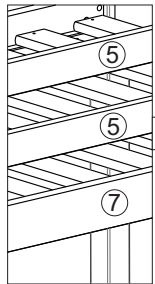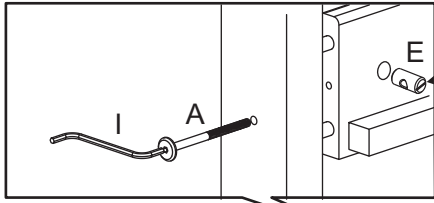


HOLES

04

D  **06**
7 x 60 x 17mm


I  **01**

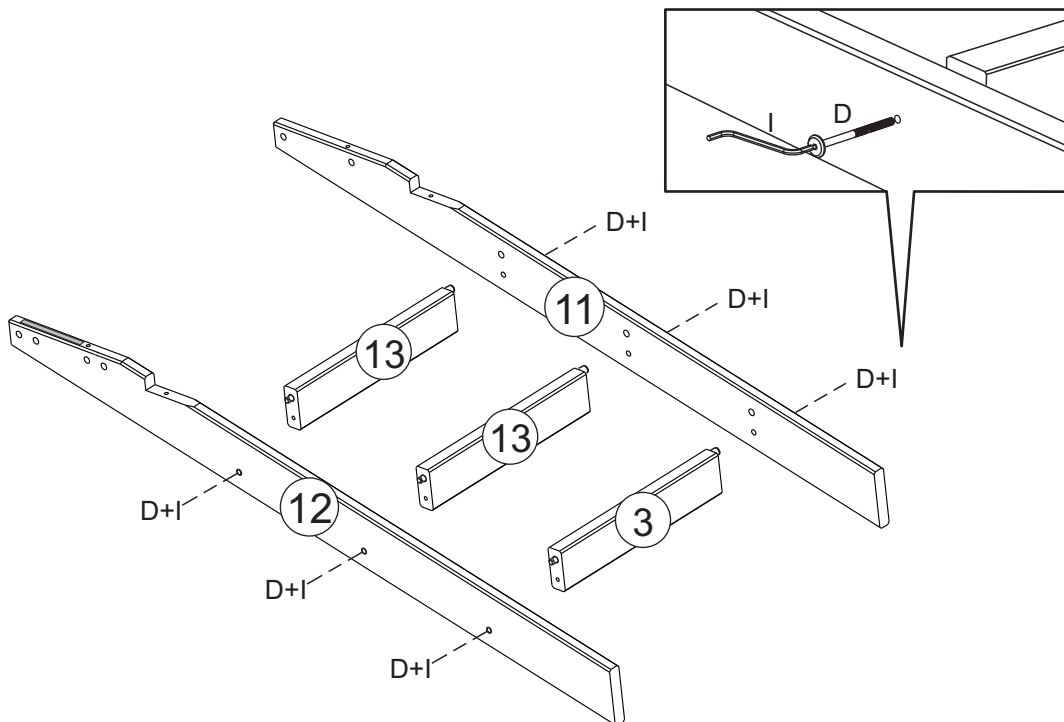

Loft w/Tent



05

K




3,5 x 16

06

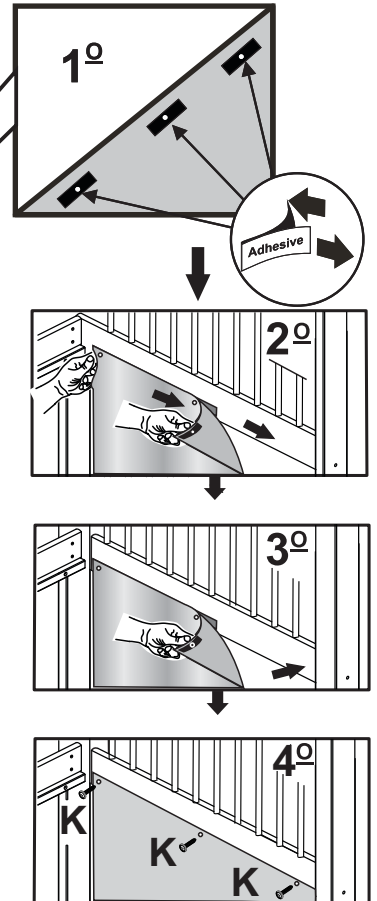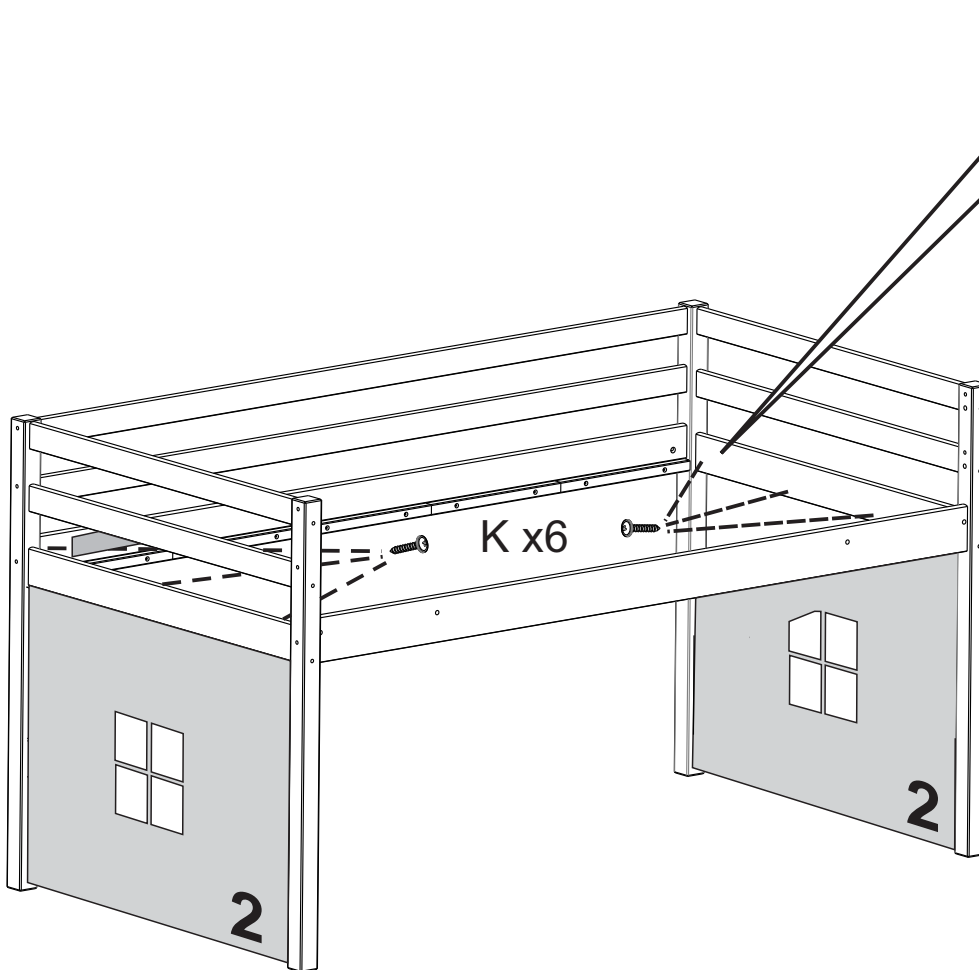


ATTENTION

Please remove the fine paper glued (Adhesived) on the velcro applied on the **Tent**. After this step, hold tight the **Tent** on both ends to fix on the crossbars on instructions.





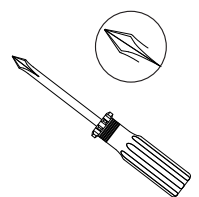


06

K




05

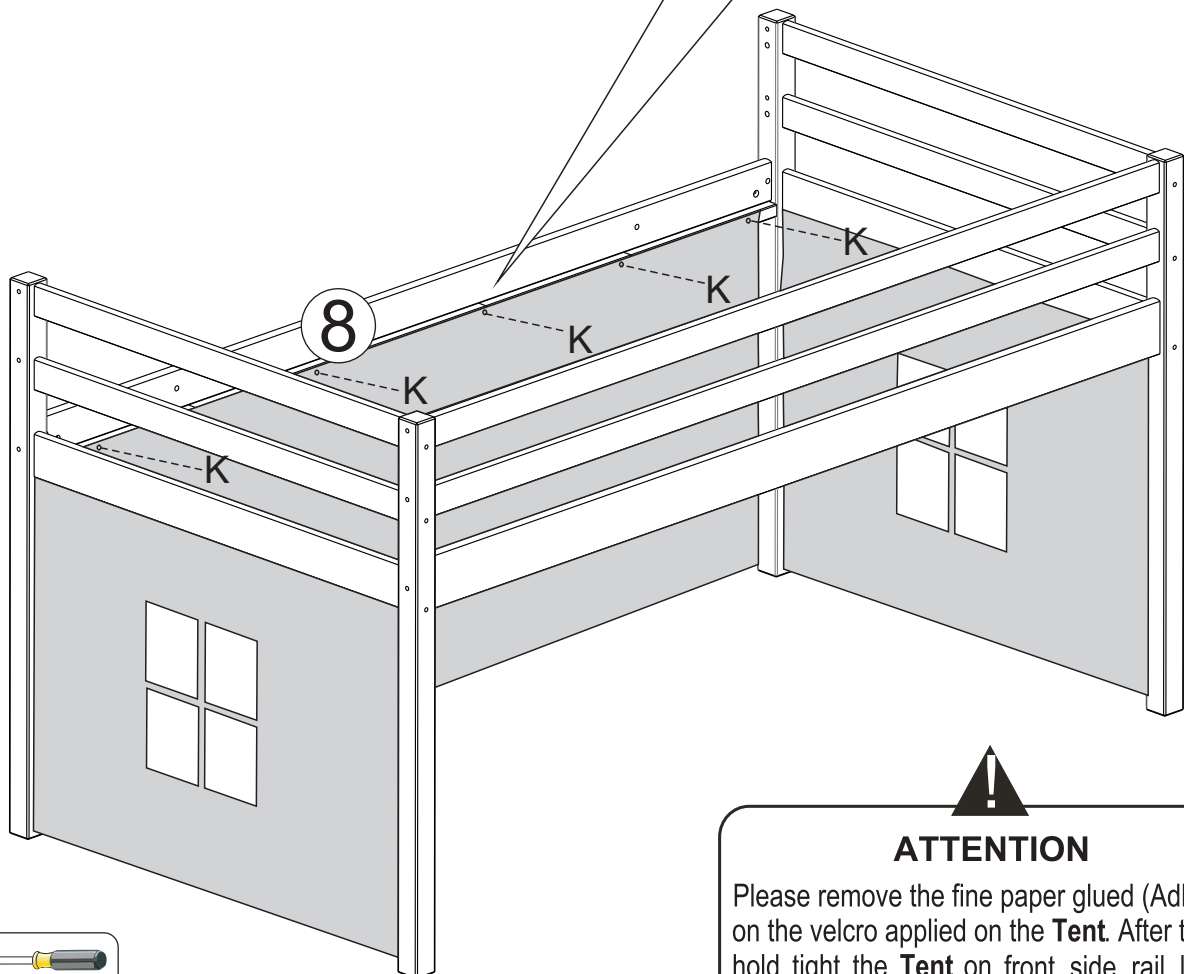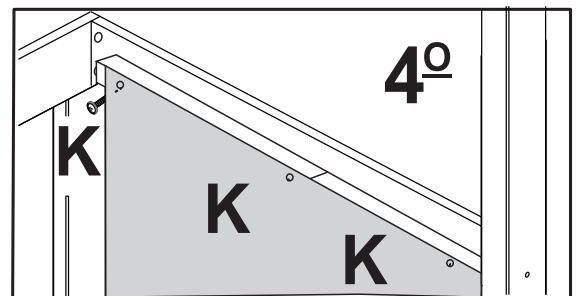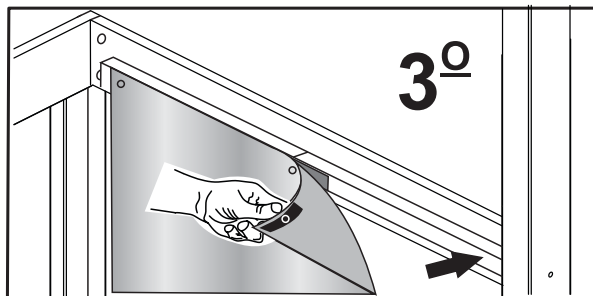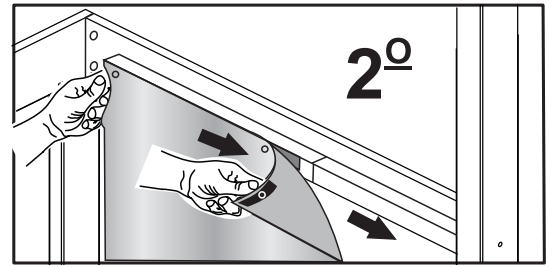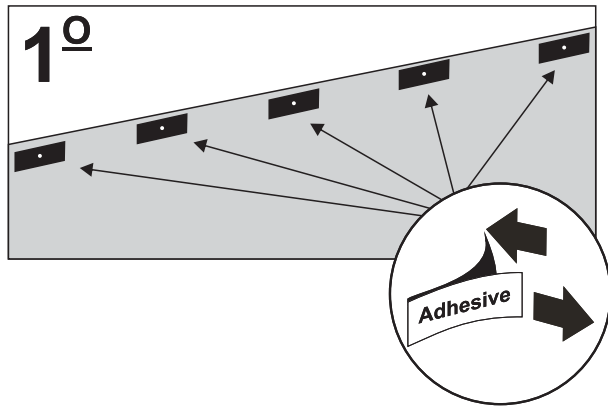

ATTENTION

Please remove the fine paper glued (Adhesived) on the velcro applied on the **Tent**. After this step, hold tight the **Tent** on front side rail like showing on instructions.



07


B






02

7 x 90 x 17mm

I




01

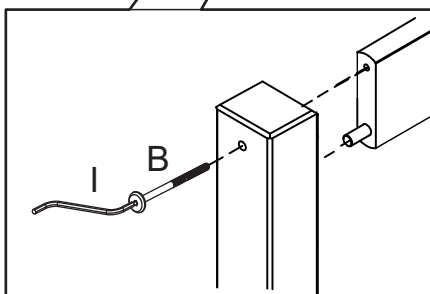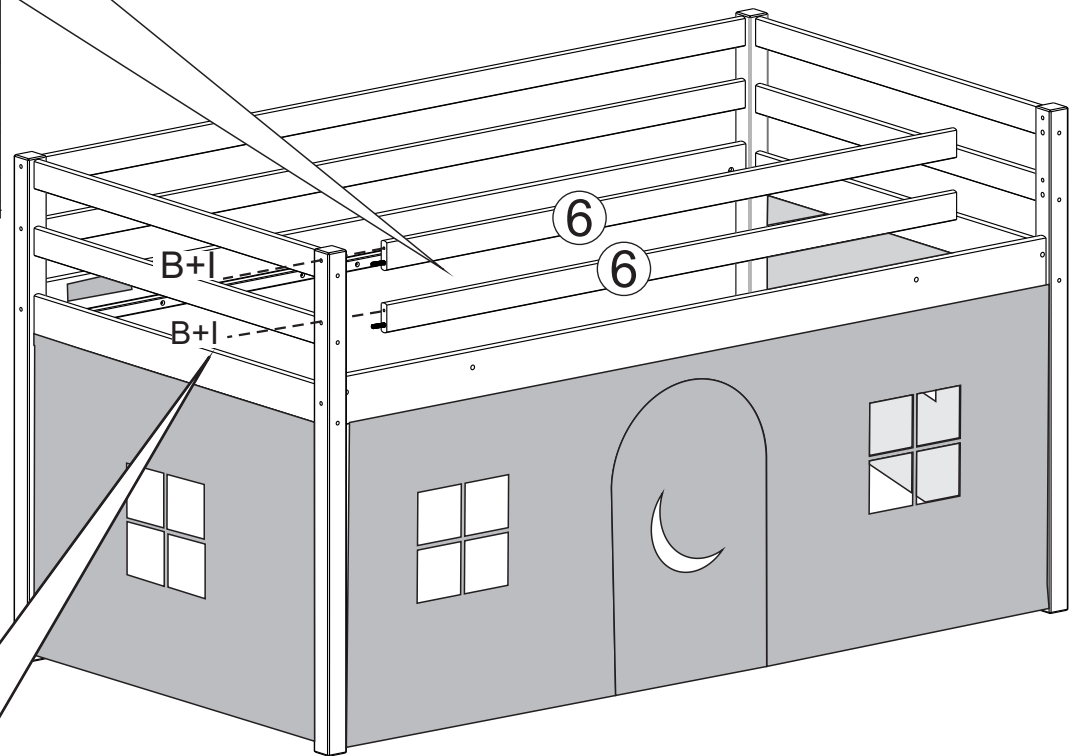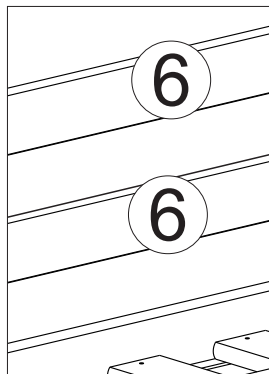

OPTION 1



OPTION 2

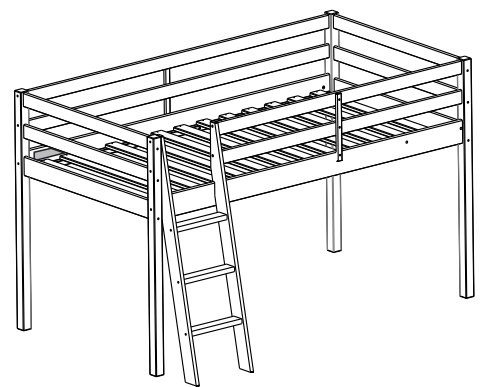

Loft w/Tent



08

D  04
7 x 60 x 17mm




G  02

I  02

1°

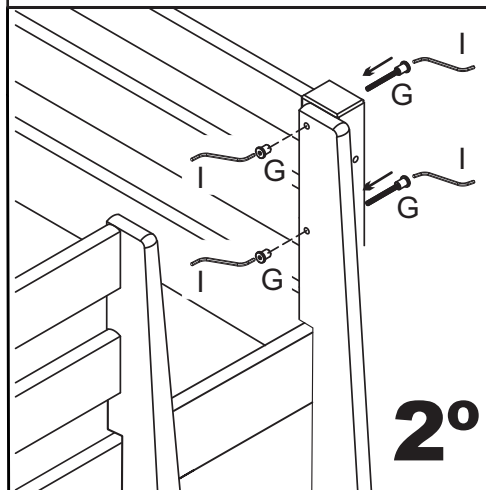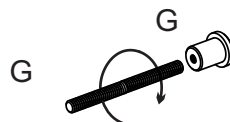


2°

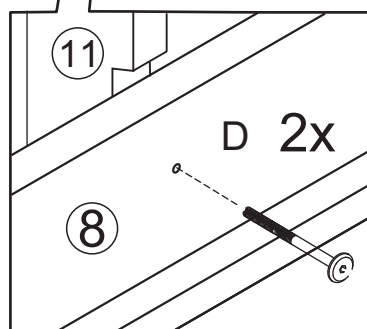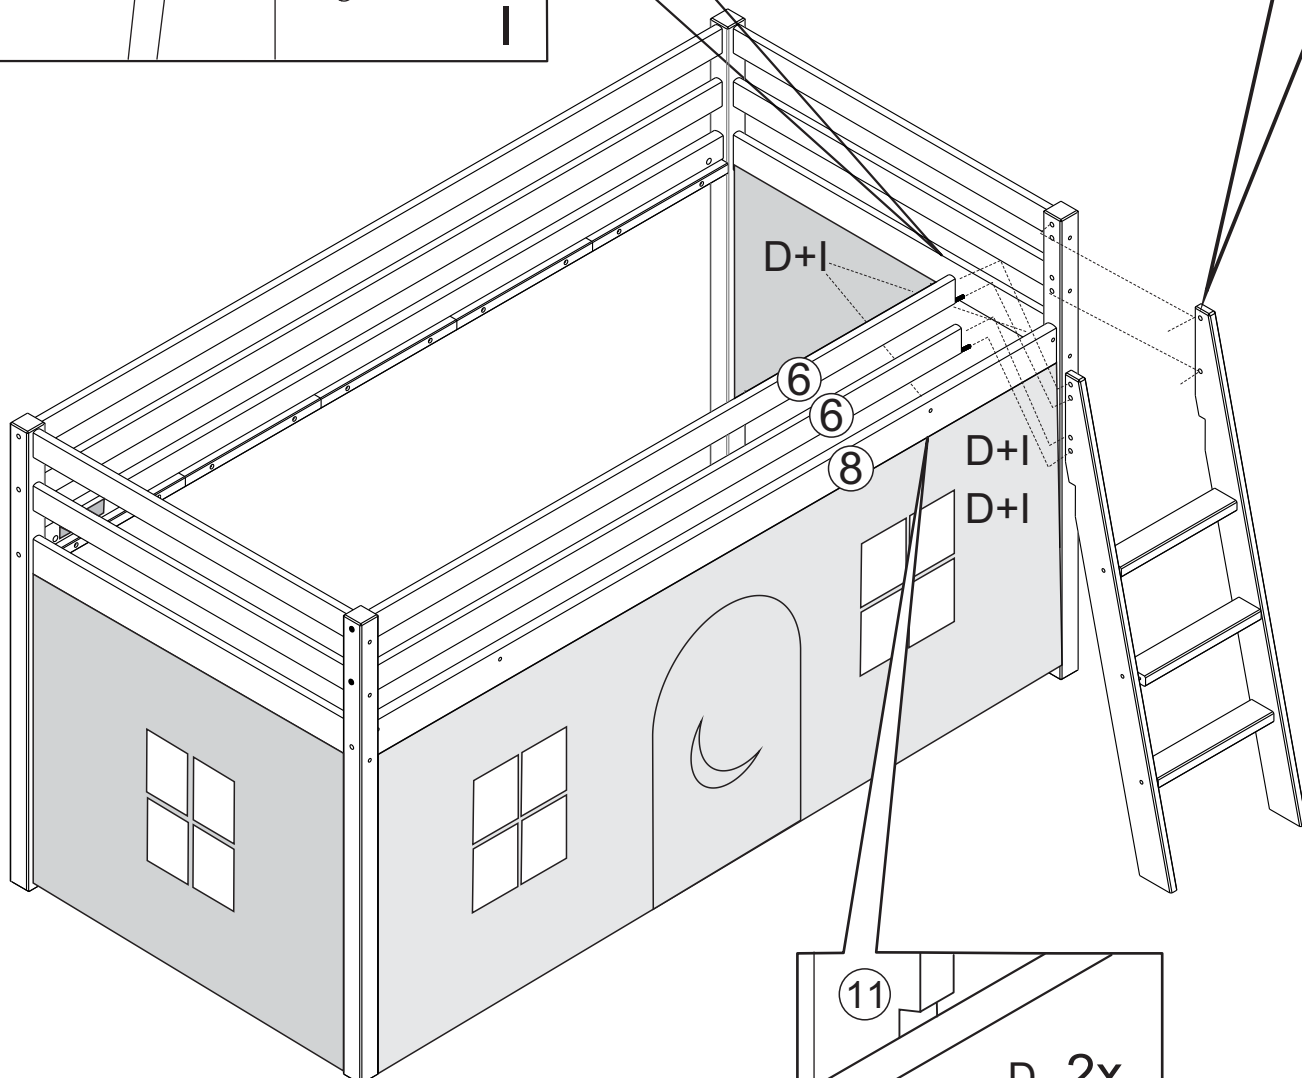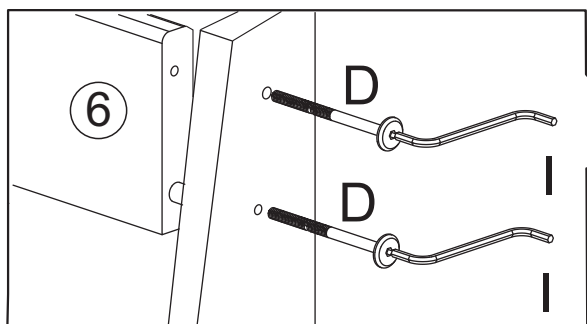



Loft w/Tent

09

C



06

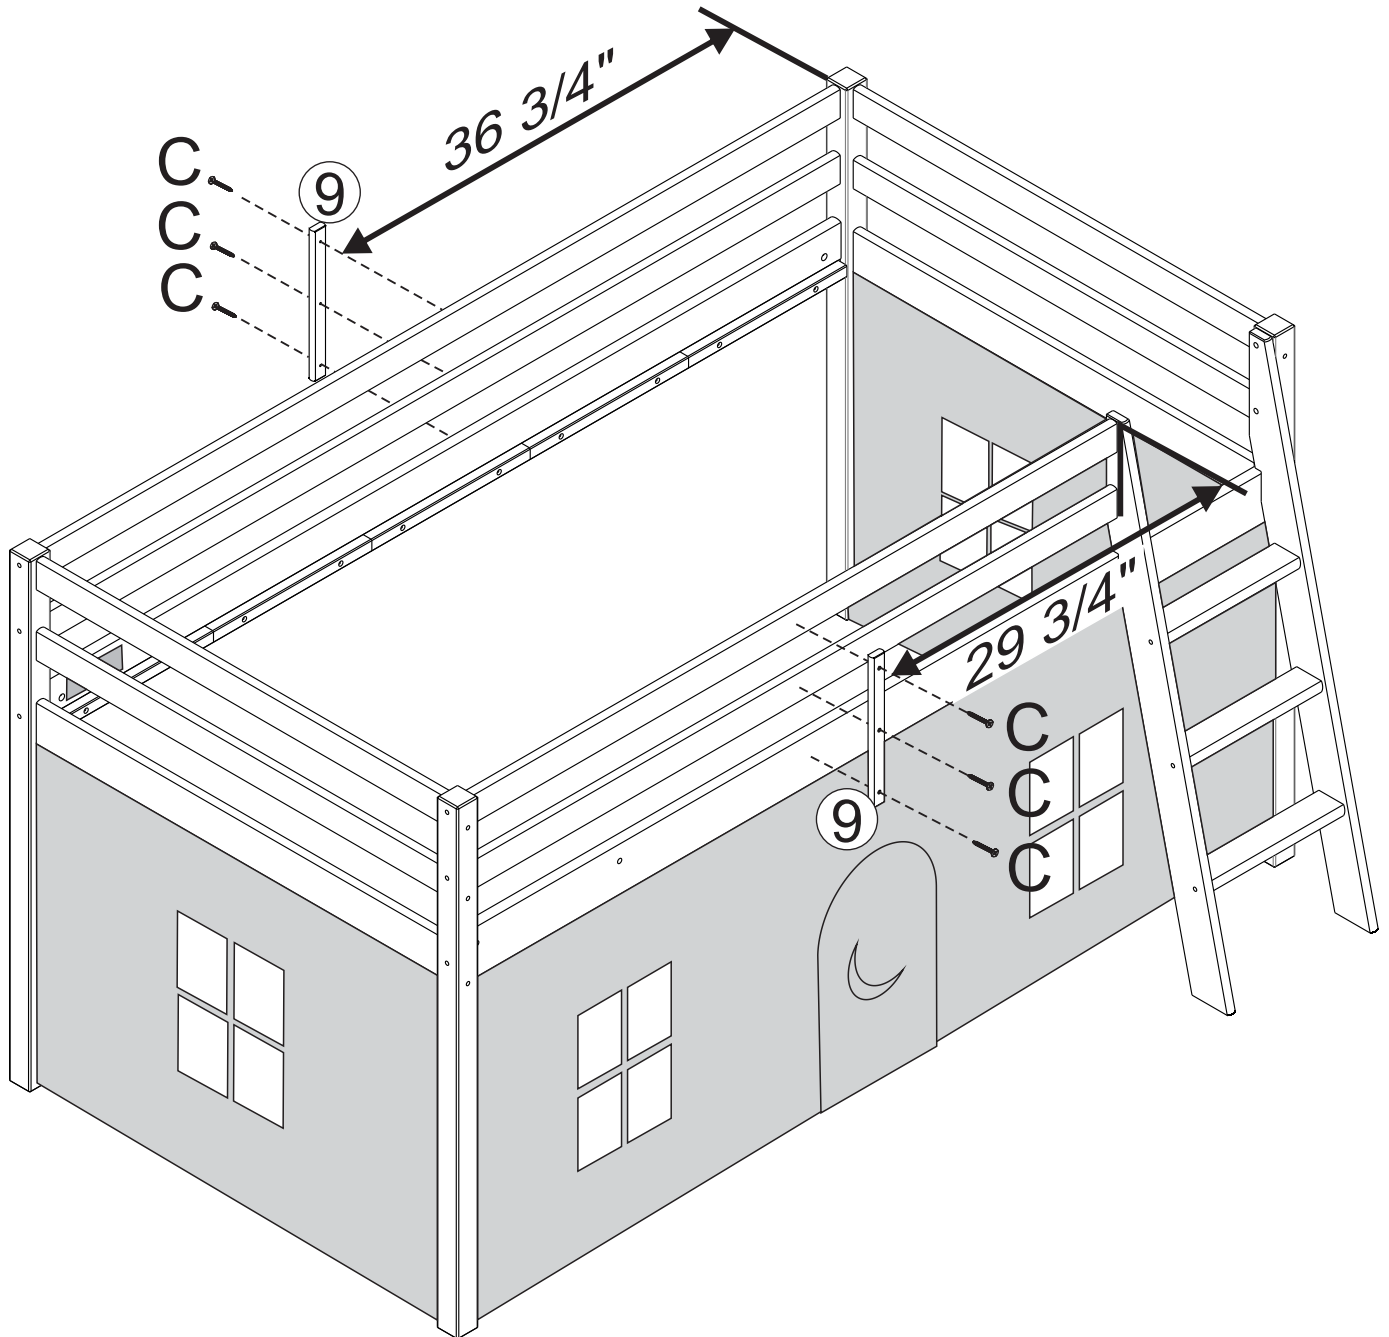

10

H





4,0 x 35

26



**The first slat must be fixed here
at 2 1/4" from each headboard end.**

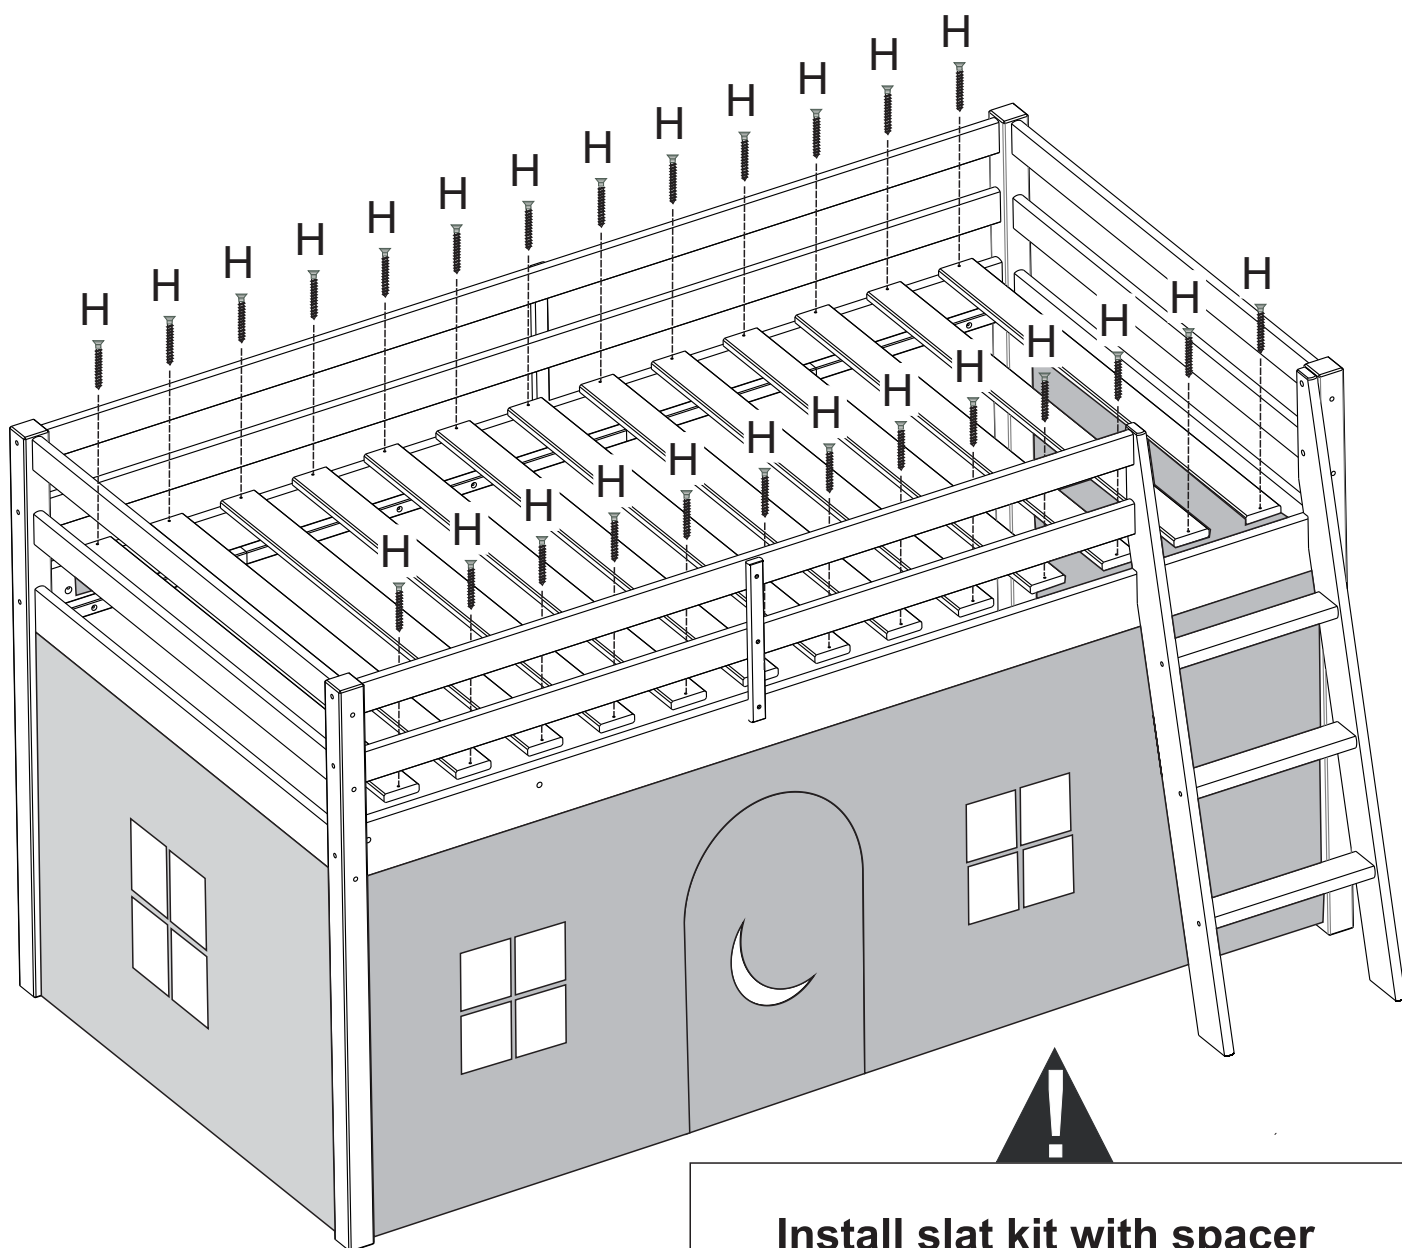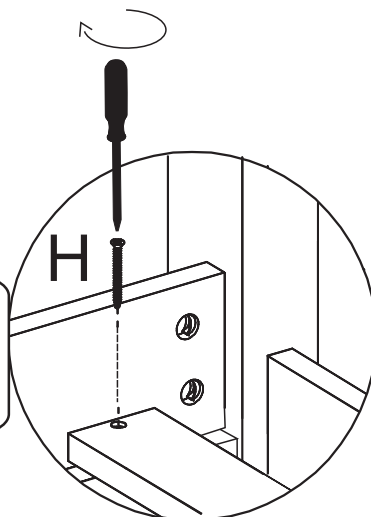

**Install slat kit with spacer
tape on top (Facing up).**

Loft w/Tent

10 Of 10