
ASSEMBLY INSTRUCTION FOR

Combo Floor Lamp

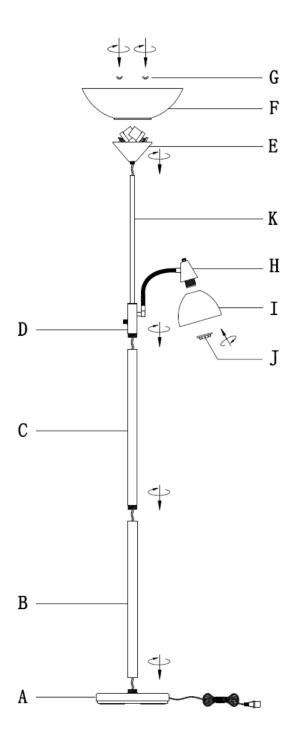

- 1. Screw the pole (B) onto the base (A) clockwise and screw poles (B), (C) and (D) together until tight. You may need to pull any excess cord gently through the poles so that these two parts fit.
- 2. Screw shade holder (E) into the pole (K).
- 3. Unscrew the wing nuts (G) counter-clockwise from shade holder (E).
- 4. Place shade (F) onto shade holder (E) and screw it with 2 wing nuts (G) clockwise to tighten and secure shade.
- 5. Unscrew the pre-assembled socket ring(J) from lamp $\operatorname{cup}(H)$
- 6.. Place smaller shade (I) into lamp cup (H) and turn the socket ring (J) clockwise to tighten.

GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only



IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug as a feature to reduce the risk of electric shock (one blade is larger than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.Do not use with an extension cord unless the plug can be fully inserted. DO NOT ALTER THE PLUG.

BULB TYPE: Use only with maximum of 2*150 watt incandescent bulbs on upward lamp and 1*60 watt incandescent bulb on the reading lamp.

PARTS DIAGRAM

(2) wing nuts (G)

(1) socket ring (J)