
ASSEMBLY INSTRUCTIONS:


- 1- PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING ASSEMBLY;
- 2- THE ASSEMBLY MUST BE EXECUTED ON A FLAT AND CLEAN SURFACE;
- 3- FOR CLEANING PLEASE USE A WATER SEMI WET CLEAN CLOTH FOLLOWING BY A DRY CLEAN CLOTH;
- 4- DO NOT USE ABRASIVES SOLUTIONS;

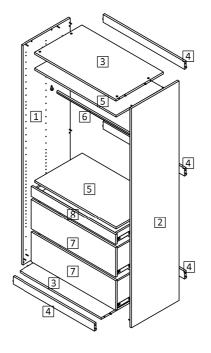

CABINET ASSEMBLY

ASSEMBLY INSTRUCTIONSBOX 02


PART LIST				
PART NUMBER	Qty	DESCRIPTION:		
1	1	LEFT SIDE PANEL		
2	1	RIGHT SIDE PANEL		
3	2	BOTTOM/TOP PANEL		
4	4	FRAME		
5	2	SHELVES		
6	1	RODS		
7	2	LARGE DRAWER		
8	1	SMALL DRAWER		

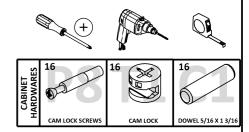



STEP 01PREPARATION OF THE SIDE PANELS




STEP 02 PREPARATION OF BOTTON/TOP PANELS

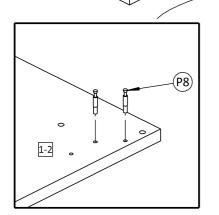

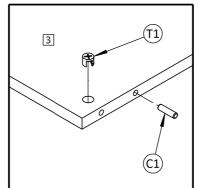


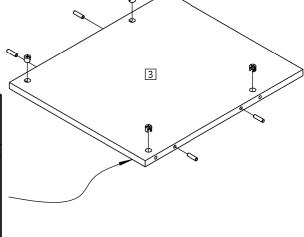


ASSEMBLY INSTRUCTIONS STEP 03 BOX 02 PREPARATION OF THE FRAMES (T1) 4 **4**X **STEP 04** LEFT, TOP, BOTTOM PANELS AND FRAMES ASSEMBLY 3 4 3 3 4 (C1)

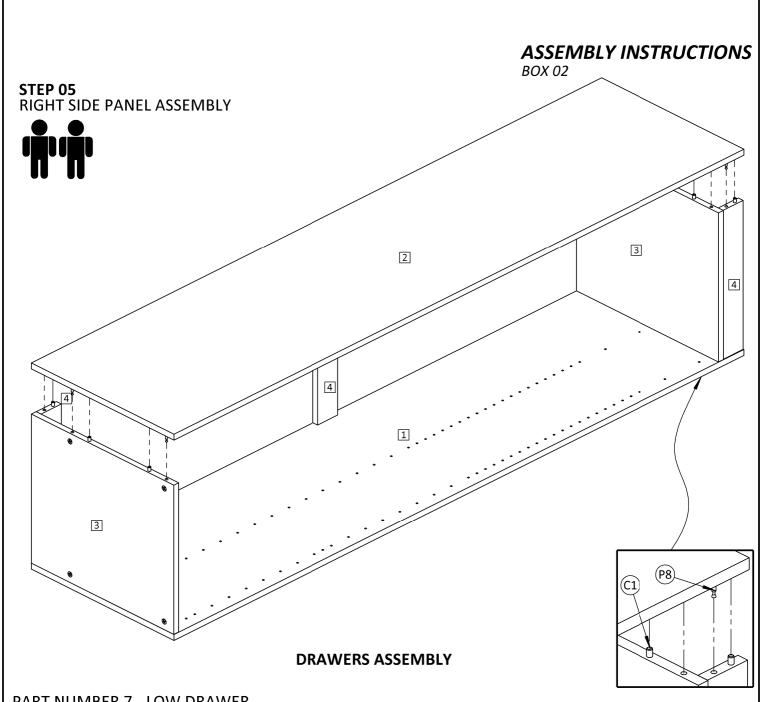


PART NUMBER 7 - LOW DRAWER

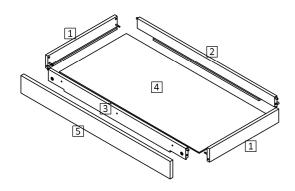


PART LIST				
PART NUMBER	QTY	DESCRIPTION:		
1	2	DRAWER SIDE PANEL		
2	1	DRAWER BACK PANEL		
3	1	DRAWER INSIDE FRONT		
4	1	DRAWER BOTTOM PANEL		
5	1	DRAWER FRONT		




STEP 06 PREPARATION OF DRAWER SIDE PANNELS

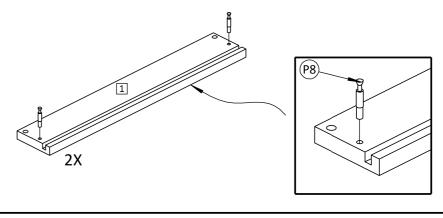

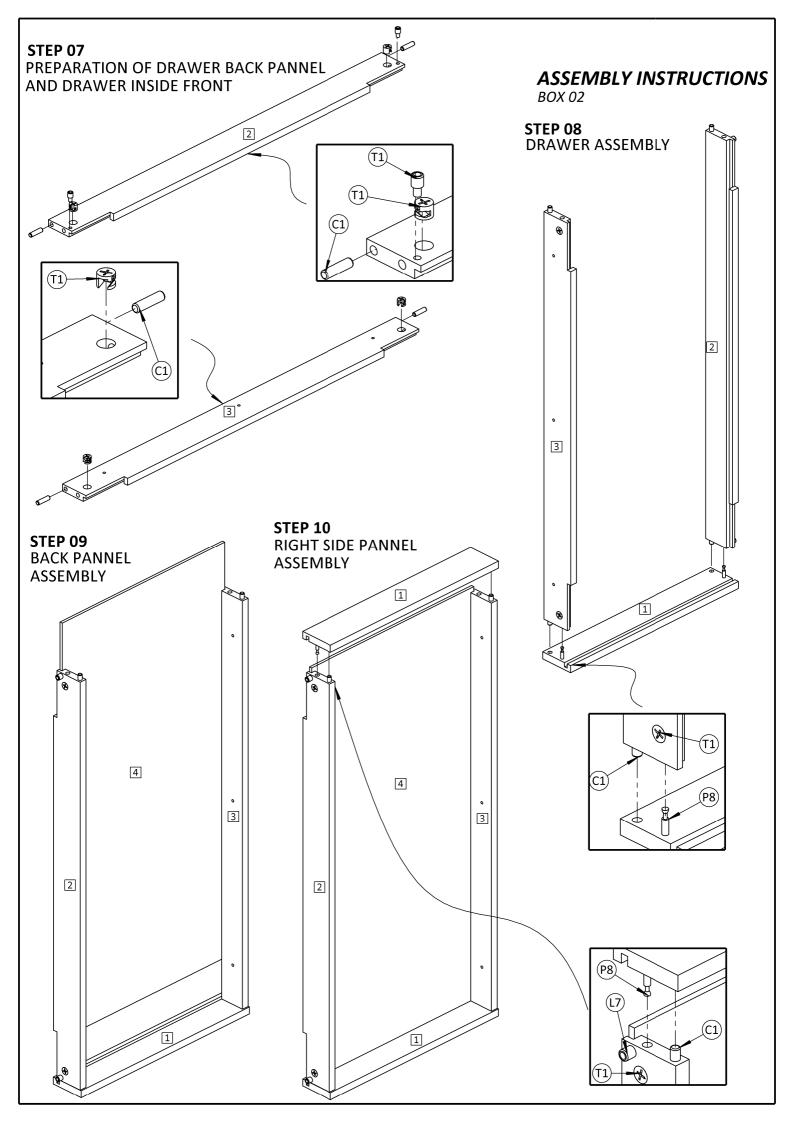


STEP 11 ASSEMBLING FRONT POSITION DRAWER BACK VIEW

ASSEMBLY INSTRUCTIONSBOX 02

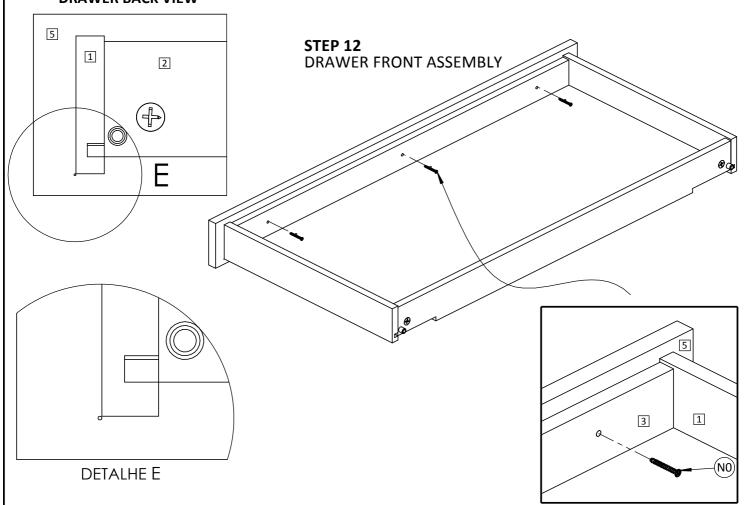



PART NUMBER 8 - LARGE DRAWER

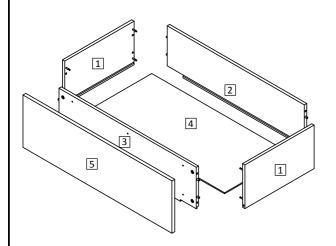

PART LIST					
PART NUMBER	QTY	DESCRIPTION:			
1	2	DRAWER SIDE PANEL			
2	1	DRAWER BACK PANEL			
3	1	DRAWER INSIDE FRONT			
4	1	DRAWER BOTTOM PANEL			
5	1	DRAWER FRONT			


STEP 13PREPARATION OF DRAWER SIDE PANELS

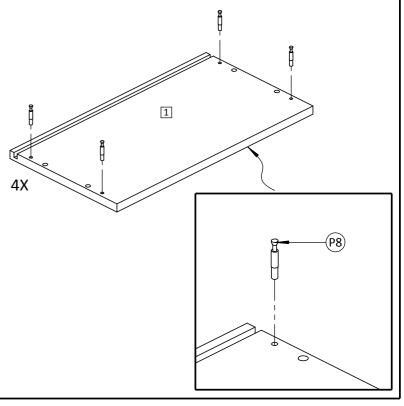

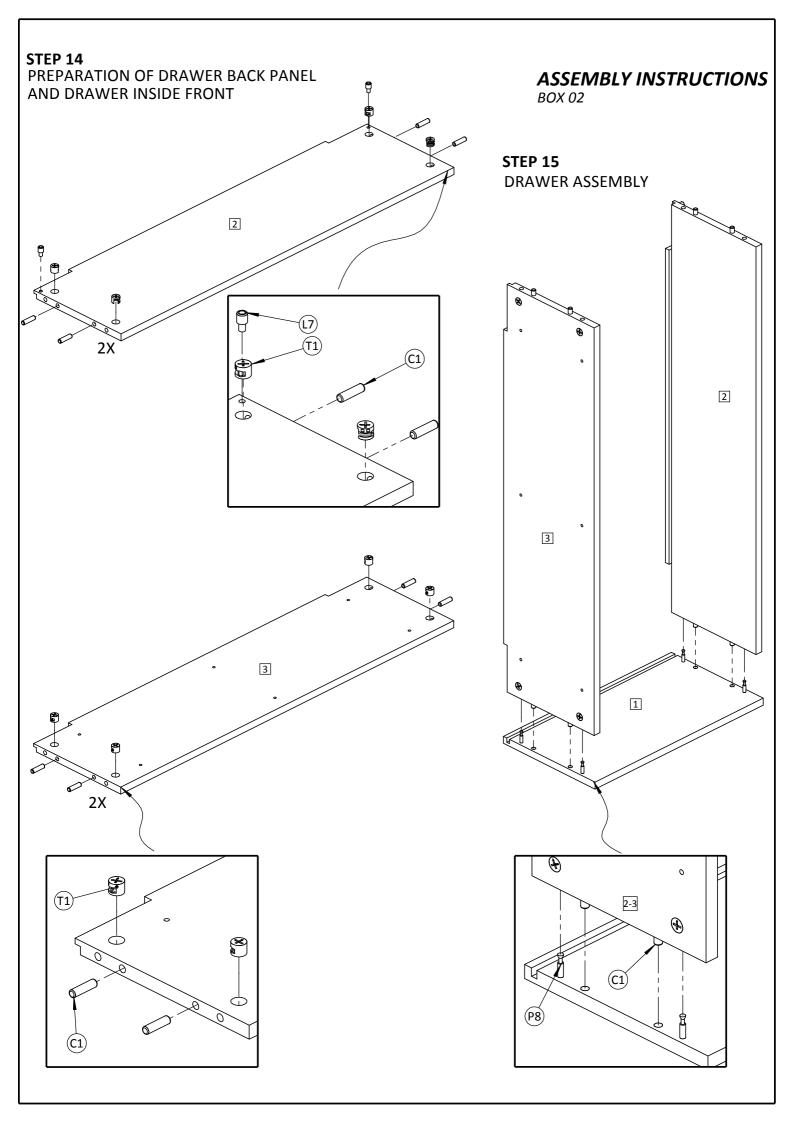


STEP 16 ASSEMBLY INSTRUCTIONS BACK PANEL ASSEMBLY BOX 02 **STEP 17 RIGHT SIDE PANEL ASSEMBLY** 4 1 2 3 2 4 1 3 1 1 8 (C1) 2-3


STEP 18
ASSEMBLING FRONT POSITION
DRAWER BACK VIEW

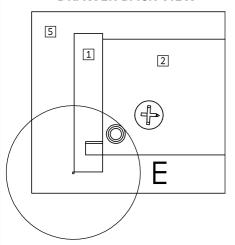

ASSEMBLY INSTRUCTIONSBOX 02

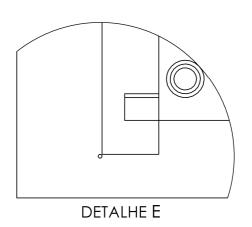

STEP 19DRAWER FRONT ASSEMBLY

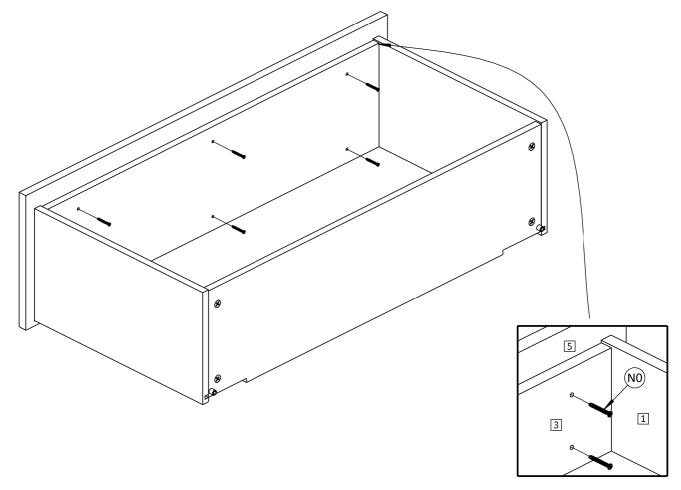

FIXING THE CABINET STEP 20 FIXING THE CABINET ON THE WALL **DRILL THE WALL ASSEMBLY INSTRUCTIONS USING A DRILLER** BOX 02 IN ORDER TO **INSERT THE PLUG** IT IS REQUIRED TO FIX THE CABINETS ON THE WALL **RISK OF FALL!** PLASTIC PLUG **BRICK DRY WAL** (00)(B1) (00)4 4 (Q7)

4


(Q7)

SCREW IN THE CENTER

OF THE FRAME

THE CABINET MUST ALWAYS BE

SUPPORTED ON THE GROUND

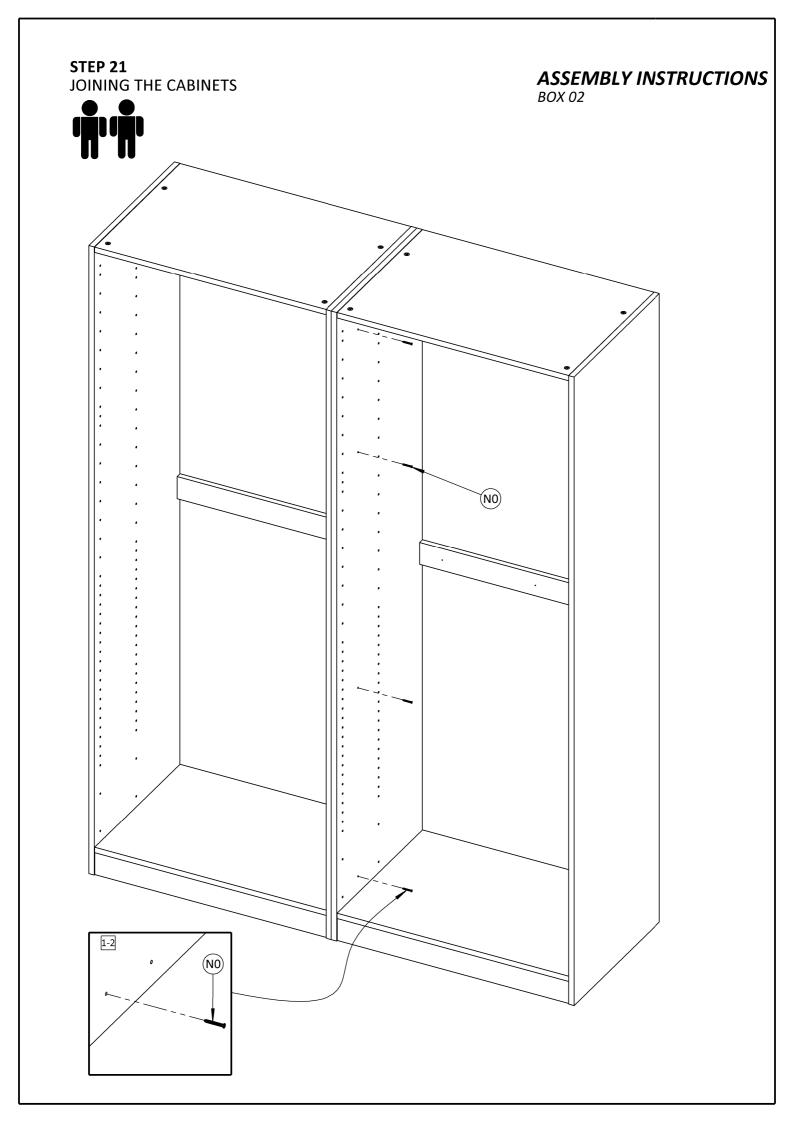

FIXING THE SHELVES INSIDE THE CABINET

ASSEMBLY INSTRUCTIONSBOX 02

STEP 22
FIX THE SUPPORT ON THE SIDE PANNELS CLOSET

SUPPORT

SCREW 15/64 X 33/6

1-2

0 57

STEP 23 FIT THE SHELF ON THE CLOSET

