


ASSEMBLY INSTRUCTION

MODEL : TWIN TRUNDLE BED

Before you begin, please read Assembly Instruction carefully and recognized the part and hardware. Then follow them step by step.


Page : 1 OF 1

STEP 1.

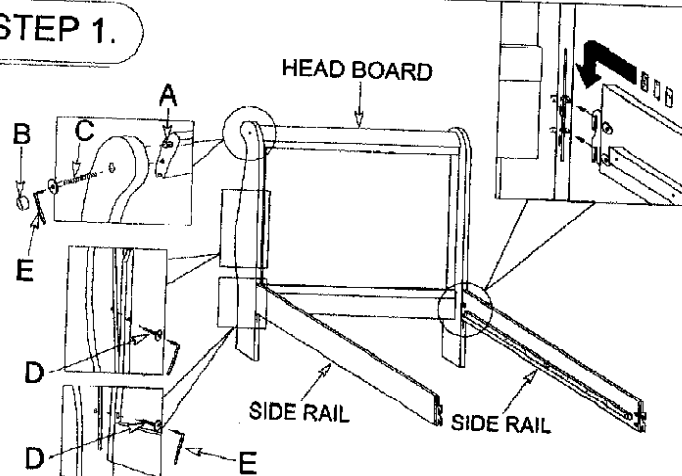

TIPS : Insert the Side Rail into the hole of Headboard.

STEP 2.

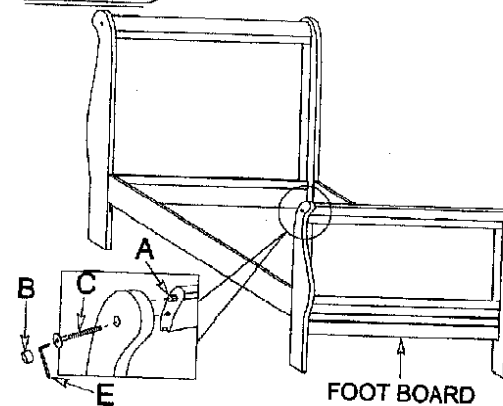

TIPS : Insert the Side Rail into the hole of Footboard.

HARDWARE PART 1

NO	HARDWARE DESCRIPTION	QTY
A.	Wood Dowel M12 x 50mm	4PCS
B.	Wood Botton M15 x 9mm	4PCS
C.	JCBC Bolt M6 x 50mm	4PCS
D.	JCBC Bolt M6 x 35mm	8PCS
E.	Allen Key	1PC


Screw Driver Not Provide !!!

HARDWARE PART 2

NO	HARDWARE DESCRIPTION	QTY
F.	Chipboard Screw M4 x 32mm	28PCS


Screw Driver Not Provide !!!

STEP 3.

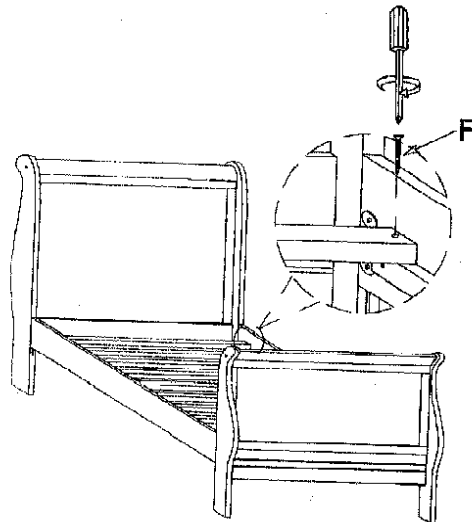

TIPS : Attach the Bed Slat to the Side Rail. Fasten the Bed Slat by tighten with Screw M4 x 32mm through the pre-drilled hole of Bed Slat

COMPLETE SET

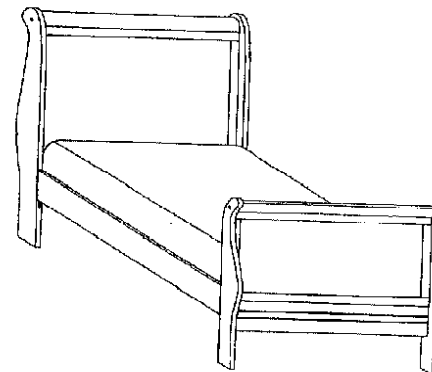

* TOTAL SLAT : 14PCS

