STANDARD BED ASSEMBLY

UPHOLSTERED SIDE RAILS HARDWARE



(6) 1" x 5/16" bolts



(6) 11/4" washers

You will need:

- phillips screwdriver
- flat head screwdriver
- pliers

*Open all hardware packets in both packages before starting assembly.

Wingbacks come with two additional bolts/washers which are listed in the chart in Step 5.

BED COMPONENTS



(4) corner brackets for all sizes




(1) upholstered foot rail for all sizes



(2) upholstered side rails for all sizes

BED HARDWARE

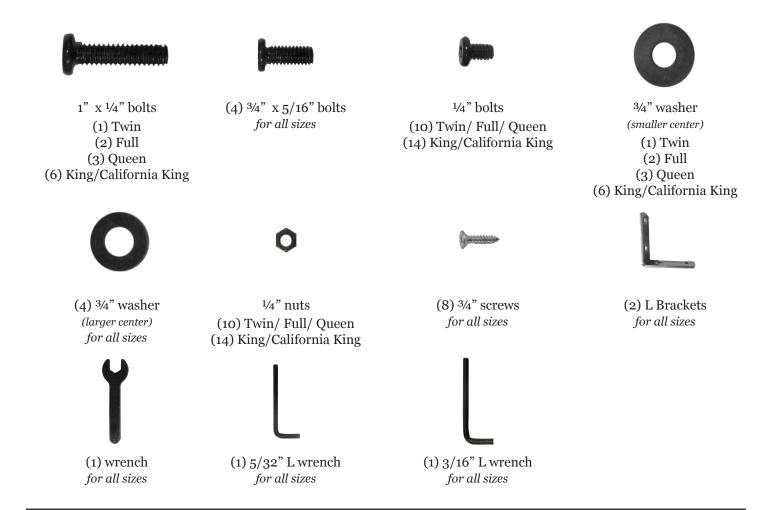


LIMITED WARRANTY


We guarantee our upholstered furniture against defects in construction for a period of one (1) year. When a structural defect is brought to our attention, we will repair or replace it at our option at no charge to the customer (includes parts and labor, not transportation costs). Fabric wearability for upholstered furniture is not covered by the warranty. Vacuum for regular cleaning.

PLEASE DISPOSE OF PLASTIC BAG (S) AND CARTON (S) RESPONSIBLY.

STEP I

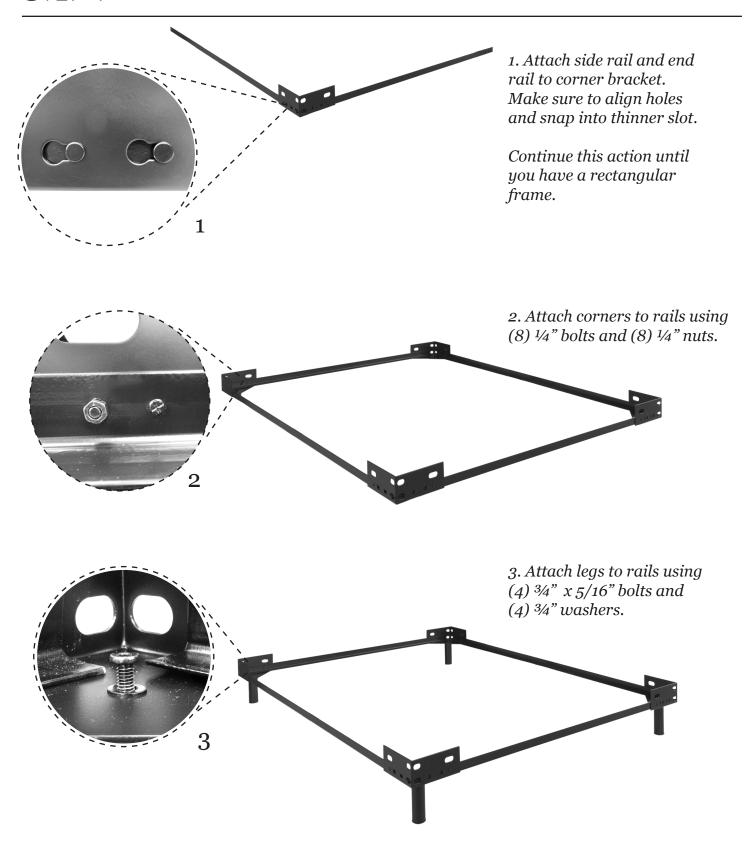


STEP 2

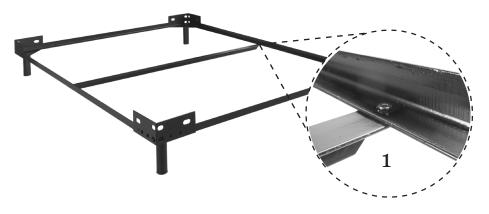

1. Attach each support bar using (2) ¼" bolts and (2) ¼" nuts. Make sure to attach the support bar underneath the bed frame.

Note:

Twin/ Full/ Queen = 1 support bar King/California King = 3 support bars

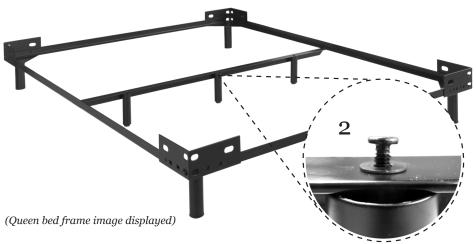

2. Attach each support leg to the bar using (1) 1" $x \frac{1}{4}$ " bolts and (1) $\frac{3}{4}$ " washer.

Note:

Twin = 1 support leg
Full = 2 support legs
Queen = 3 support legs
King/California King = 6 support legs.


(2 legs for each support bar)

STEP 3

- 1. Use (6) 1" x 5/16" bolts, (6) 1 1/4" washers to attach rails to bed frame loosely. Screw in side rails before attaching the foot rail.
- 2. Push side rails towards foot rail, so that there is no gap.




STEP 4

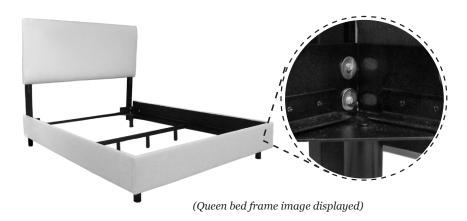

Connect assembled bed frame and rails to your headboard. Attach pieces using (4) 1" x ½" bolts, (8) 1¼" washers*, and (4) ¼" nuts. Proceed to Step 5 for Wingback beds, otherwise continue onto Step 6.

* Use a washer on each side of the metal legs when attaching headboard to the bed frame.

STEP 5

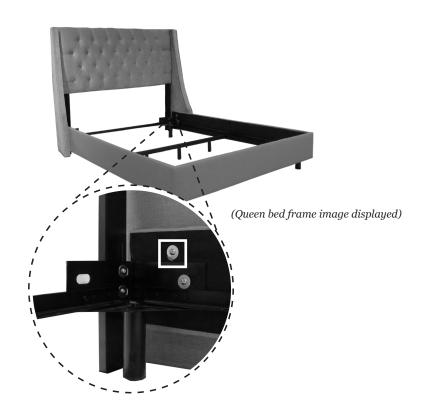


Only for Wingback beds:

Refer to chart to use assigned bolts and (2) 1 ¼" washers for the top hole (see image). Bolts are enclosed with headboard hardware. You might have to loosen the bolt/washer below it to align both holes properly.

Wingback Side Rail Bolt Chart
Bolt Size
2" x 5/16"
2½" x 5/16"
3" x 5/16"
No bolt needed

STEP 6

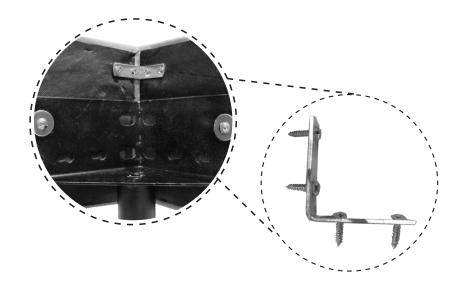

With a phillips screwdriver, attach (2) L brackets and (8) 3/4" self-tapping screws in the corners of the foot rail. This is needed to increase stability of upholstered rails.