# ASSEMBLY INSTRUCTIONS DINING CHAIR

ASSEMBLY REQUIREMENTS1-Person AssemblyAssembly Time Per Chair (Approximate)30 MINUTESDefinition of the purchasing our product:Please refer and use this assembly instruction to assemble the<br/>product.Contact our customer service department in case there are any<br/>missing or damage parts or hardware. Replacement parts are<br/>normally shipped within 2 or 3 days.We appreciate your business!

### ASSEMBLY PREPARATION

- 1. Remove all packaging materials, staples and packing straps from the carton.
- 2. Refer to Part List and Hardware List, and ensure parts and hardware are complete before you start assembling. Contact customer service for missing parts.
- 3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

### SAFETY PRECAUTION:

- 1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
- 2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

#### TIPS FOR ASSEMBLY:

- 1. Allow ample room for assembly and in close proximity to where product will be placed.
- 2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
- 3. Check all of the parts and quantities are included before assembly.
- 4. Identify all of the parts, hardware and quantities required for each step.
- 5. During assembly, do not over-tighten any fittings as this may cause damage.
- 6. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
- 7. Always place the product on a flat, level surface.
- 8. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

## CARE AND MAINTENANCE

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.


# ASSEMBLY INSTRUCTIONS DINING CHAIR

## PART LIST (FOR 2 COMPLETE CHAIRS)

NO.	COMPONENT	QTY.	
P1	CHAIR BACKREST	2 PCS.	
P2	CUSHION SEAT BOX	2 PCS.	
P3	FRONT CHAIR LEG	4 PCS.	

## HARDWARE LIST (FOR 2 COMPLETE CHAIRS)

NO.	DESCRIPTION		QTY.
H1	JCBC BOLT M6 x 35 MM	<u>() 10000</u>	6 PCS.
H2	JCBC BOLT M6 x 60 MM	() ()	8 PCS.
H3	JCBC BOLT M6 x 80 MM	<u>()</u>	8 PCS.
H4	1/4" SPRING WASHER	Ø	22 PCS.
H5	1/4" FLAT WASHER	$\odot$	22 PCS.
H6	ALLEN KEY		1 PC.

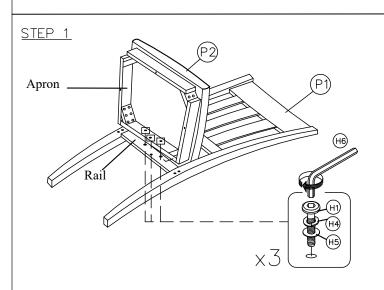


- a) Lay Chair Backrest (P1) flat down on a material that does not scratch or damage the part.
- b) Place Cushion Seat Box (P2) on (P1) as shown and align the 3 screw holes on rear apron of (P2) to the 3 screw holes on bottom rail of (A).
- c) Insert JCBC Bolt (H1) fitted with Spring Washer (H4) and Flat Washer (H5) into the screw holes. Use Allen Key (H6) to drive (H1) to fasten (P2) onto (P1). Do not tighten (H1) completely at this time.

STEP 3

Tips: Consider placing the seat (P2) bootom-side up on an elevated surface (e.g. table top) to install Front Legs (P3).

- a) Place Front Leg (P3) to align the screw holes on (P3) to the screw holes on front corner block of (P2).
- b) Insert JCBC Bolt (H2) fitted with Spring Washer (H4) and Flat Washer (H5) into each of the screw hole on the corner block.
- c) Use Allen Key (H6) to drive (H2) to fasten (P3) to (P2). Do not tighten (E) completely until both screws are in place. Do not over-tighten the screws.
- d) Use the same procedures above to install the other Front Leg.
- e) Place the chair right-side up.

The assembly of the chair is complete.

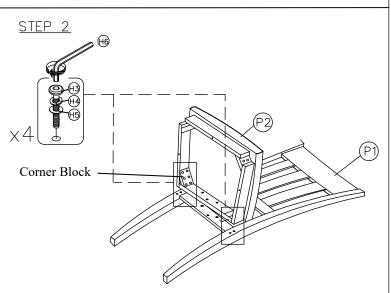

- a) At the rear, right corner of (P2), align the screw holes on the corner block to the screw holes on the right, rear leg.
- b) Insert JCBC Screw (H3) fitted with Spring Washer (H4) and Flat Washer (H5) into each of the screw hole. Use Allen Key (H6) to drive (H3) into the rear, right leg. Do not tighten (H3) completely at this time.
- c) Use the assembly procedures above to fasten the rear, left corner of (P2) to the left, rear leg.
- d) Tighten all the Bolts (H1 & H3) completely at this time do not over-tighten the screws.

