


# King Headboard

## IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

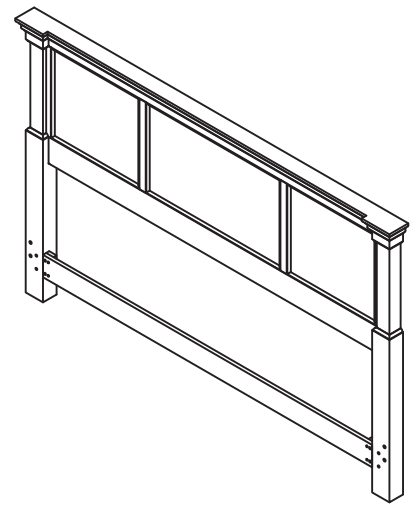

## Part List

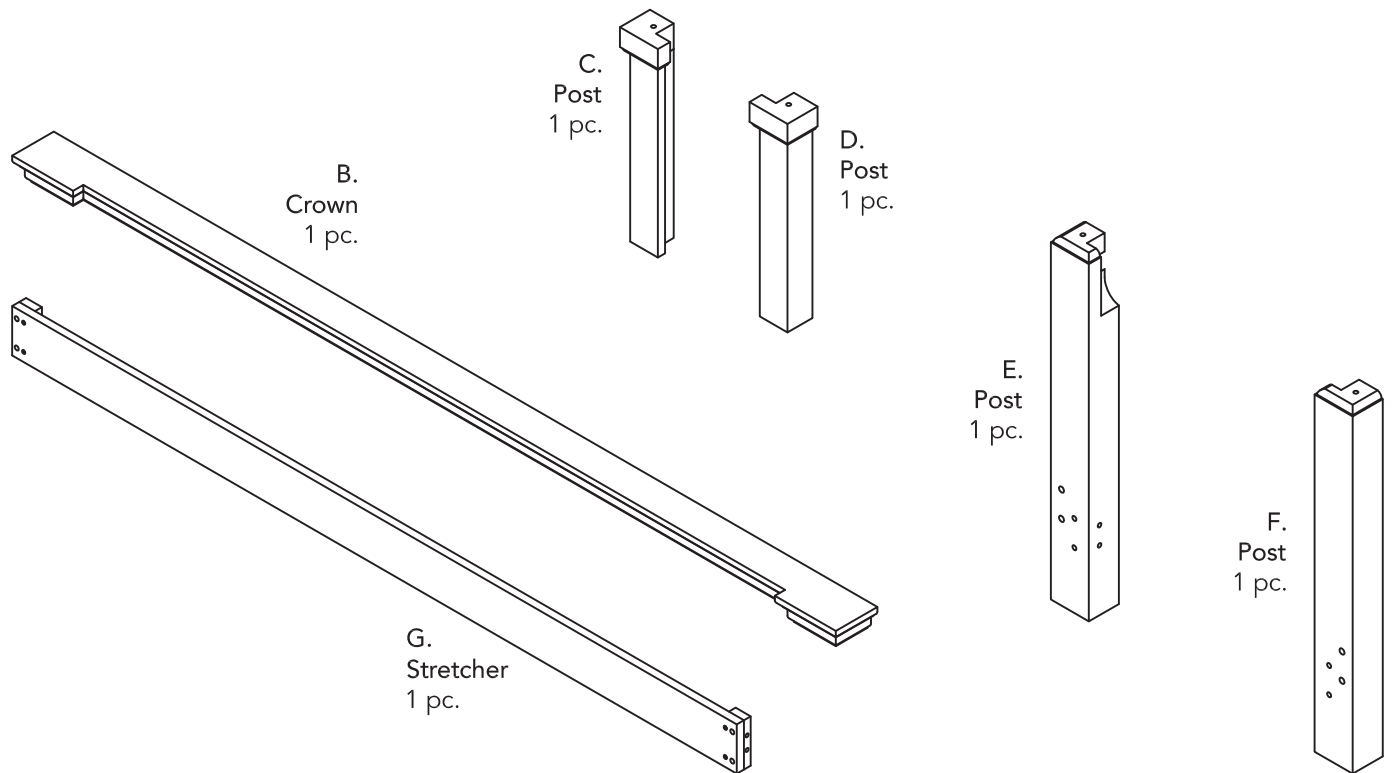

## Hardware List



Tool(s) required for assembly: Phillips screwdriver


## Assembly Instructions 2/3

### IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten up all the bolts until each part is properly assembled.
- Keep Hex Wrench as the bolts may need to be tightened in the future.



### STEP 1

Insert Cam Lock Screws into pre-drilled holes in Crown (B), then tighten.

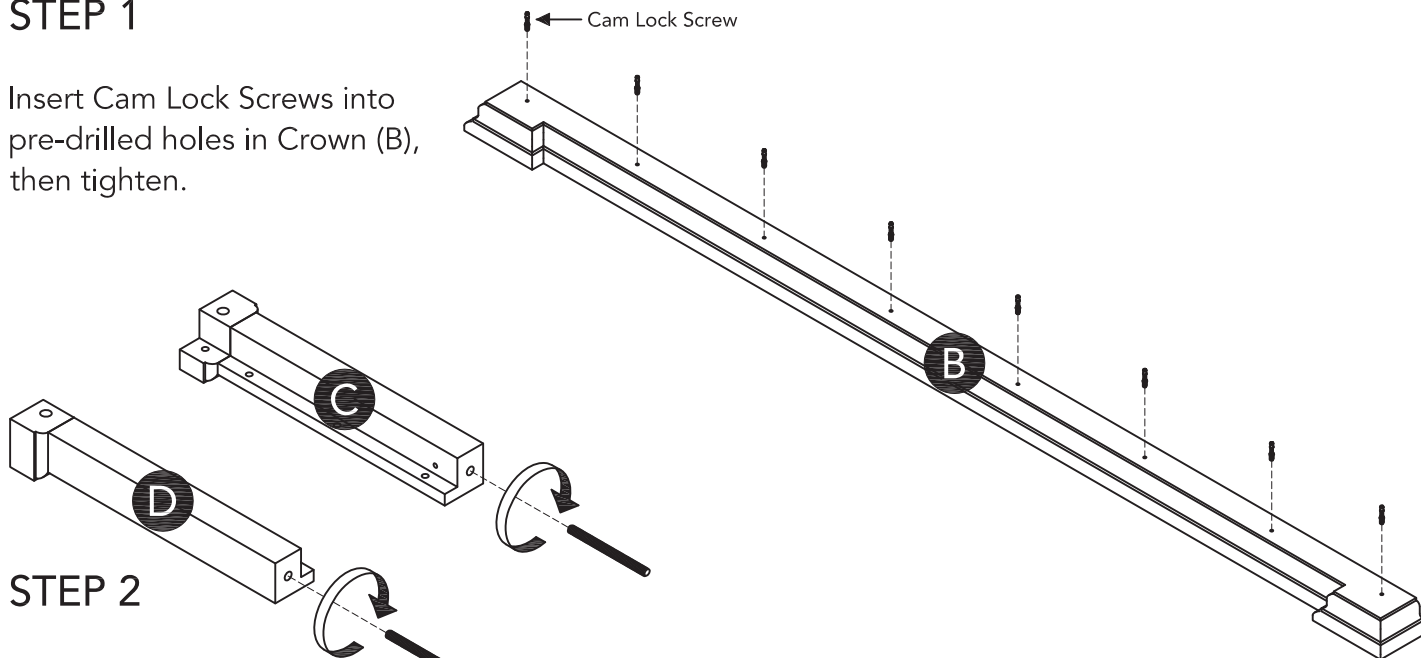

### STEP 2

Insert Bolts into pre-drilled holes in Posts (C) and (D), then tighten.

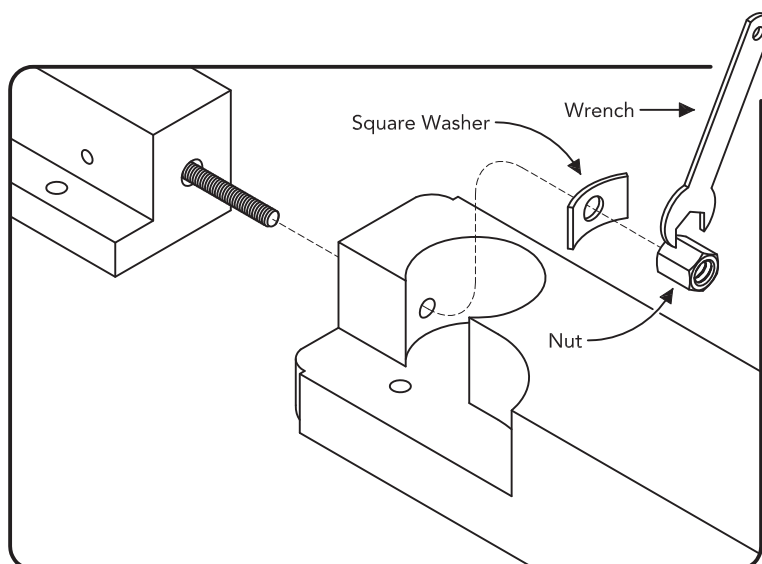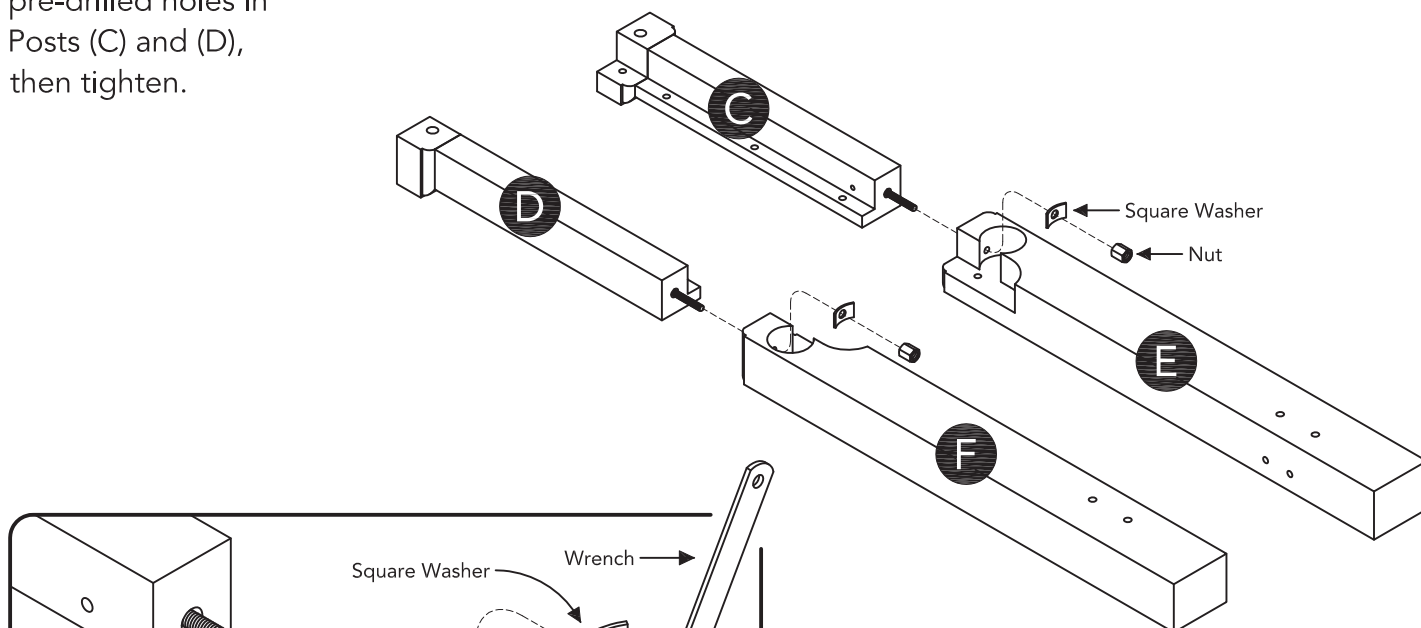

### STEP 3

Attach Post (C) to Post (E) and Post (D) to Post (F) with Square Washers and Nuts.

Tighten all Bolts with Wrench.  
(See Figure 1)

Figure 1

## Assembly Instructions 3/3

### STEP 4

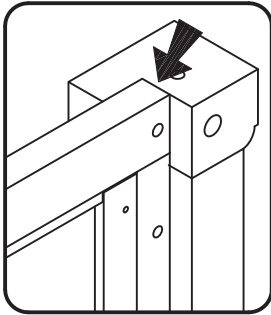


Figure 2


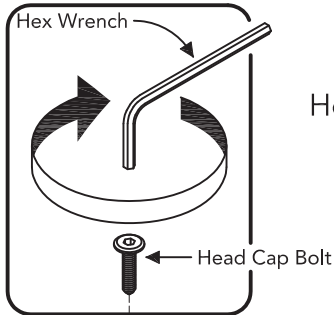


Figure 3

Holding top of Headboard (A) flush with top of posts, attach Headboard (A) to posts with Head Cap Bolts (short).  
(See Figure 2)

Attach Stretcher (G) to unit with Head Cap Bolts (long).

Starting with upper most Head Cap Bolts first and then proceeding down unit, tighten all Head Cap Bolts using Hex Wrench.  
(See Figure 3)

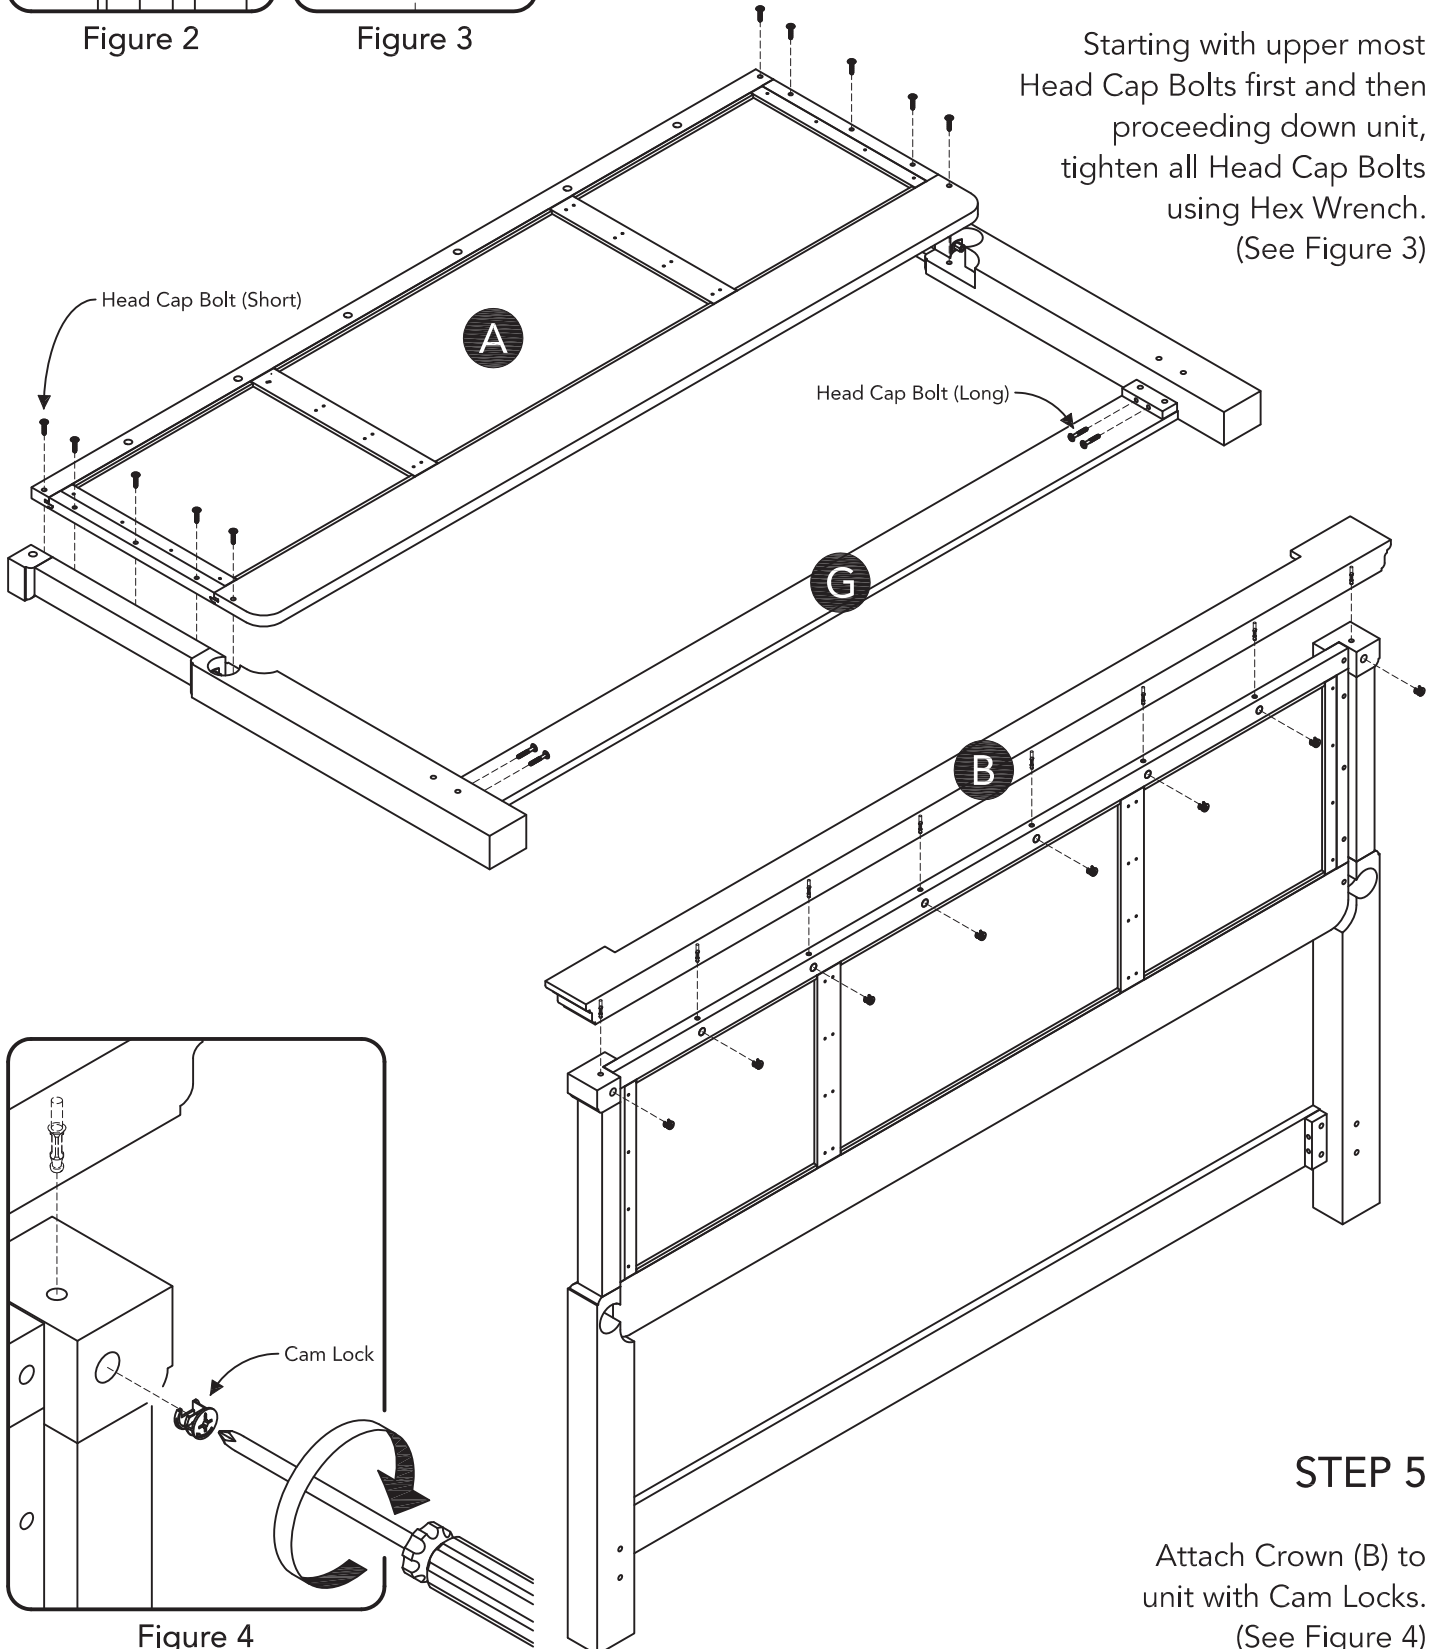

### STEP 5

Attach Crown (B) to unit with Cam Locks.  
(See Figure 4)

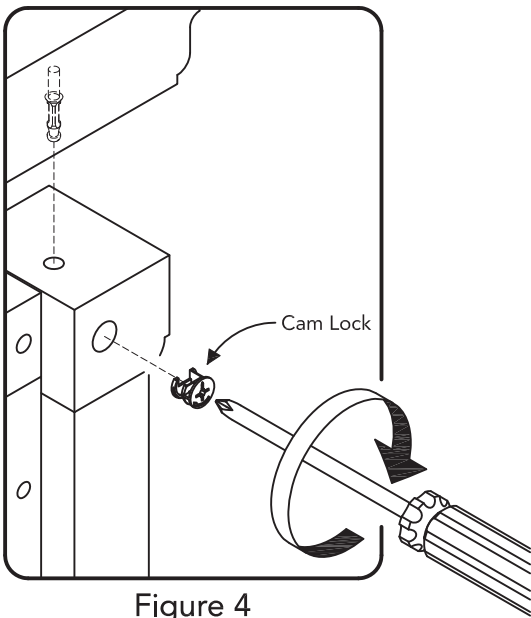


Figure 4

# CARE INSTRUCTIONS

## NEVER

allow liquids to remain on furniture.  
Absorption causes parts to warp  
and split and finishes to delaminate.

## NEVER

use glass cleaners on  
finished furniture. Ammonia  
chemically attacks the finish.



Do not use power tools  
above 8 volts to assemble.

**PREVENT  
CRACKING**



Do not place  
in direct sunlight.

**PREVENT  
FADING**



Do not write  
directly on surface.

**PREVENT  
MARKING**



Do not place hot  
objects on surface.

**PREVENT  
FINISH DAMAGE**



Do not use rubber  
based placemats.

**PREVENT  
DISCOLORING**



Do not use commercial  
waxes and polishes.

**PREVENT  
YELLOWING**

## CLEAN

with a soft cloth moistened  
in lukewarm soap and water.  
Buff with a dry clean cloth.

