



ASSEMBLY INSTRUCTIONS:


- 1- PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING ASSEMBLY;
- 2- THE ASSEMBLY MUST BE EXECUTED ON A FLAT AND CLEAN SURFACE;
- 3- FOR CLEANING PLEASE USE A WATER SEMI WET CLEAN CLOTH FOLLOWING BY A DRY CLEAN CLOTH;
- 4- DO NOT USE ABRASIVES SOLUTIONS;

ASSEMBLY INSTRUCTIONS

BOX 06


PART LIST		
PART NUMBER	Qty	DESCRIPTION:
1	1	LEFT SIDE PANEL
2	1	RIGHT SIDE PANEL
3	2	BOTTOM/TOP PANEL
4	4	FRAME
5	5	SHELVES

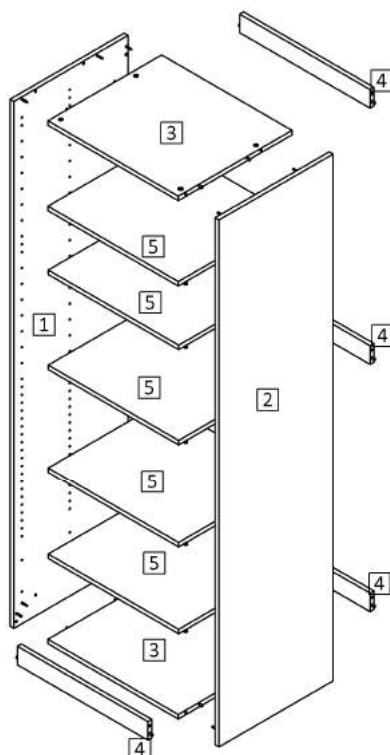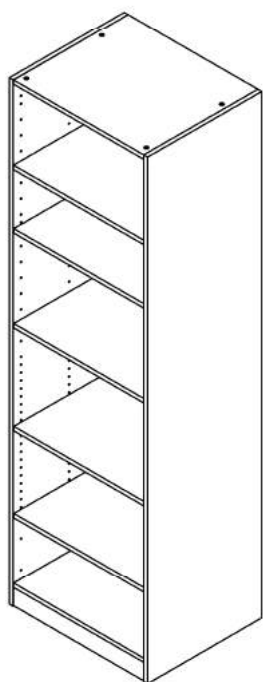




CABINET HARDWARES	16	16	16
	 CAM LOCK SCREWS	 CAM LOCK	 DOWEL 5/16 X 1 3/16

CABINET ASSEMBLY

STEP 01 PREPARATION OF THE SIDE PANELS

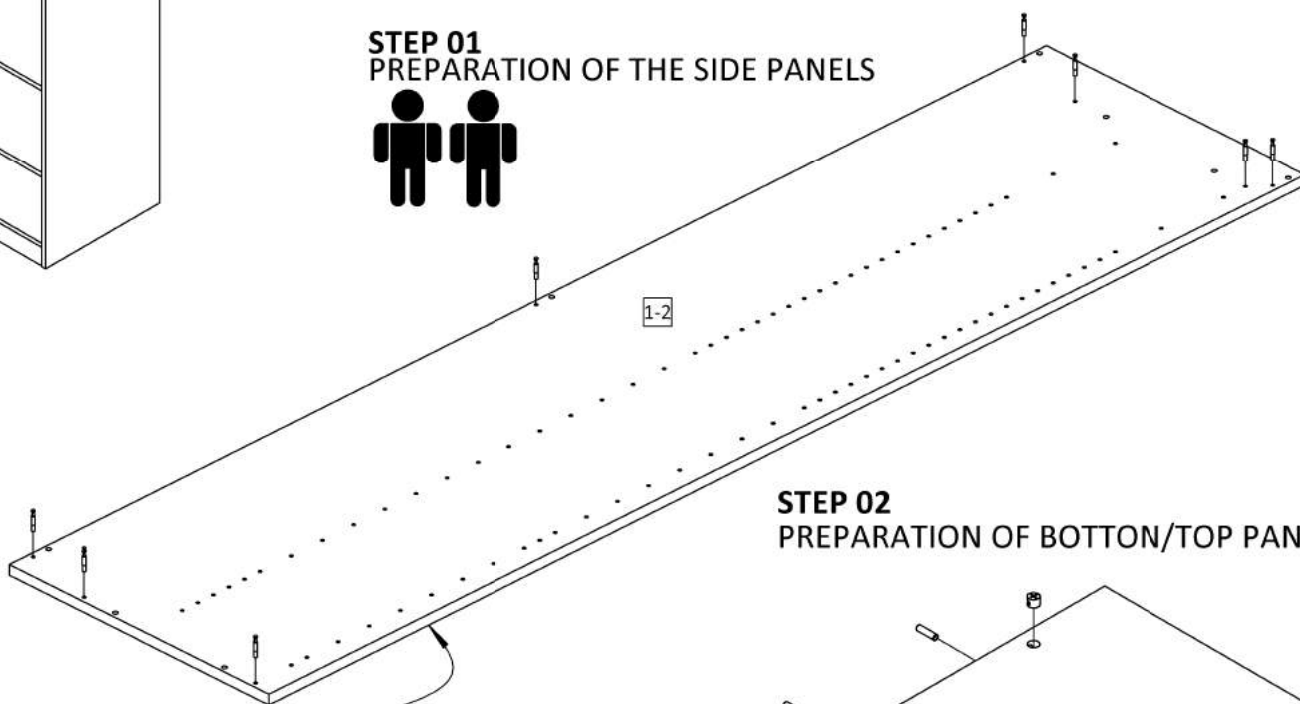


STEP 02 PREPARATION OF BOTTOM/TOP PANELS

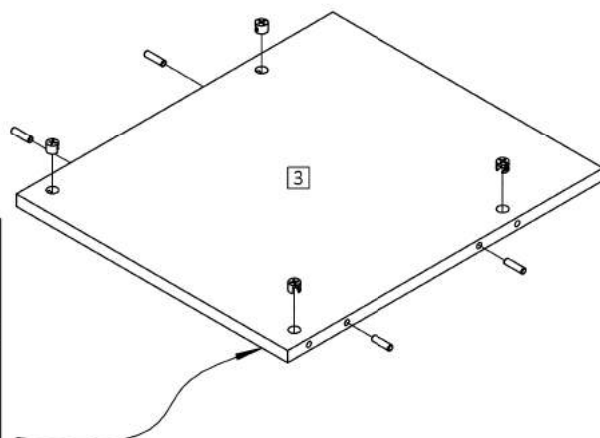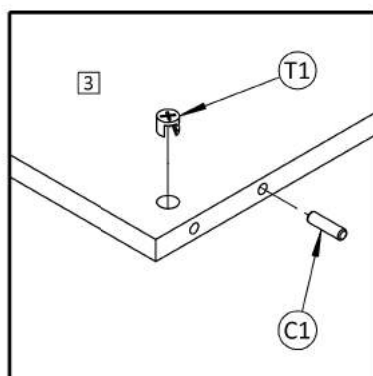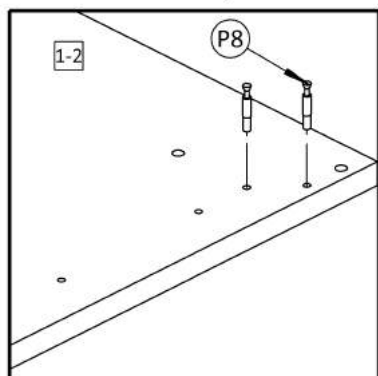


STEP 03
PREPARATION OF THE FRAMES

ASSEMBLY INSTRUCTIONS
BOX 06

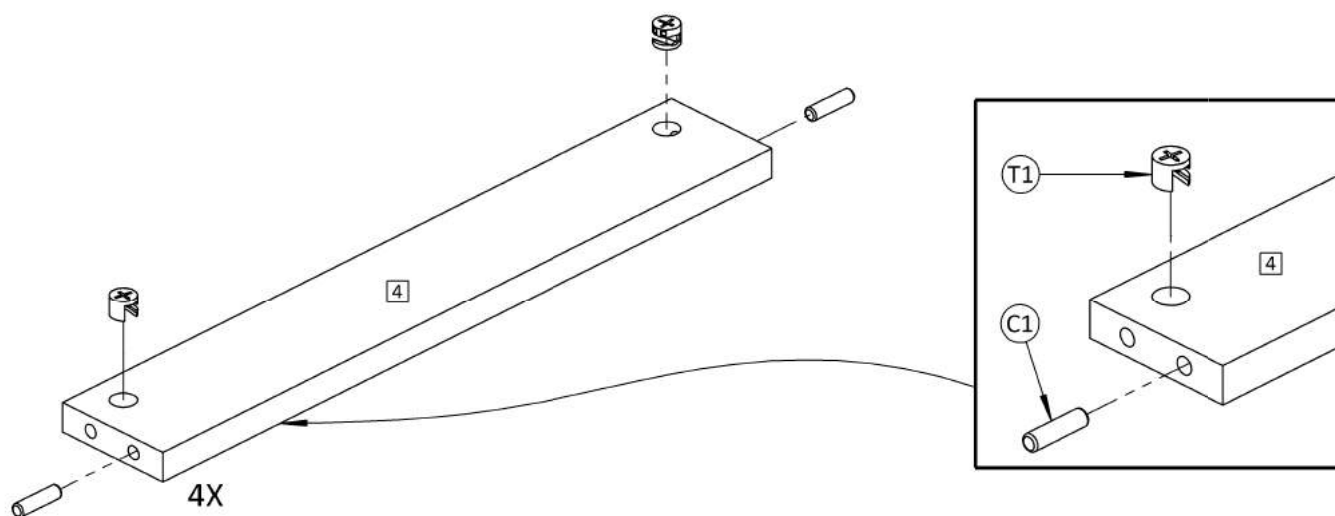


STEP 04
LEFT, TOP, BOTTOM PANELS AND FRAMES ASSEMBLY

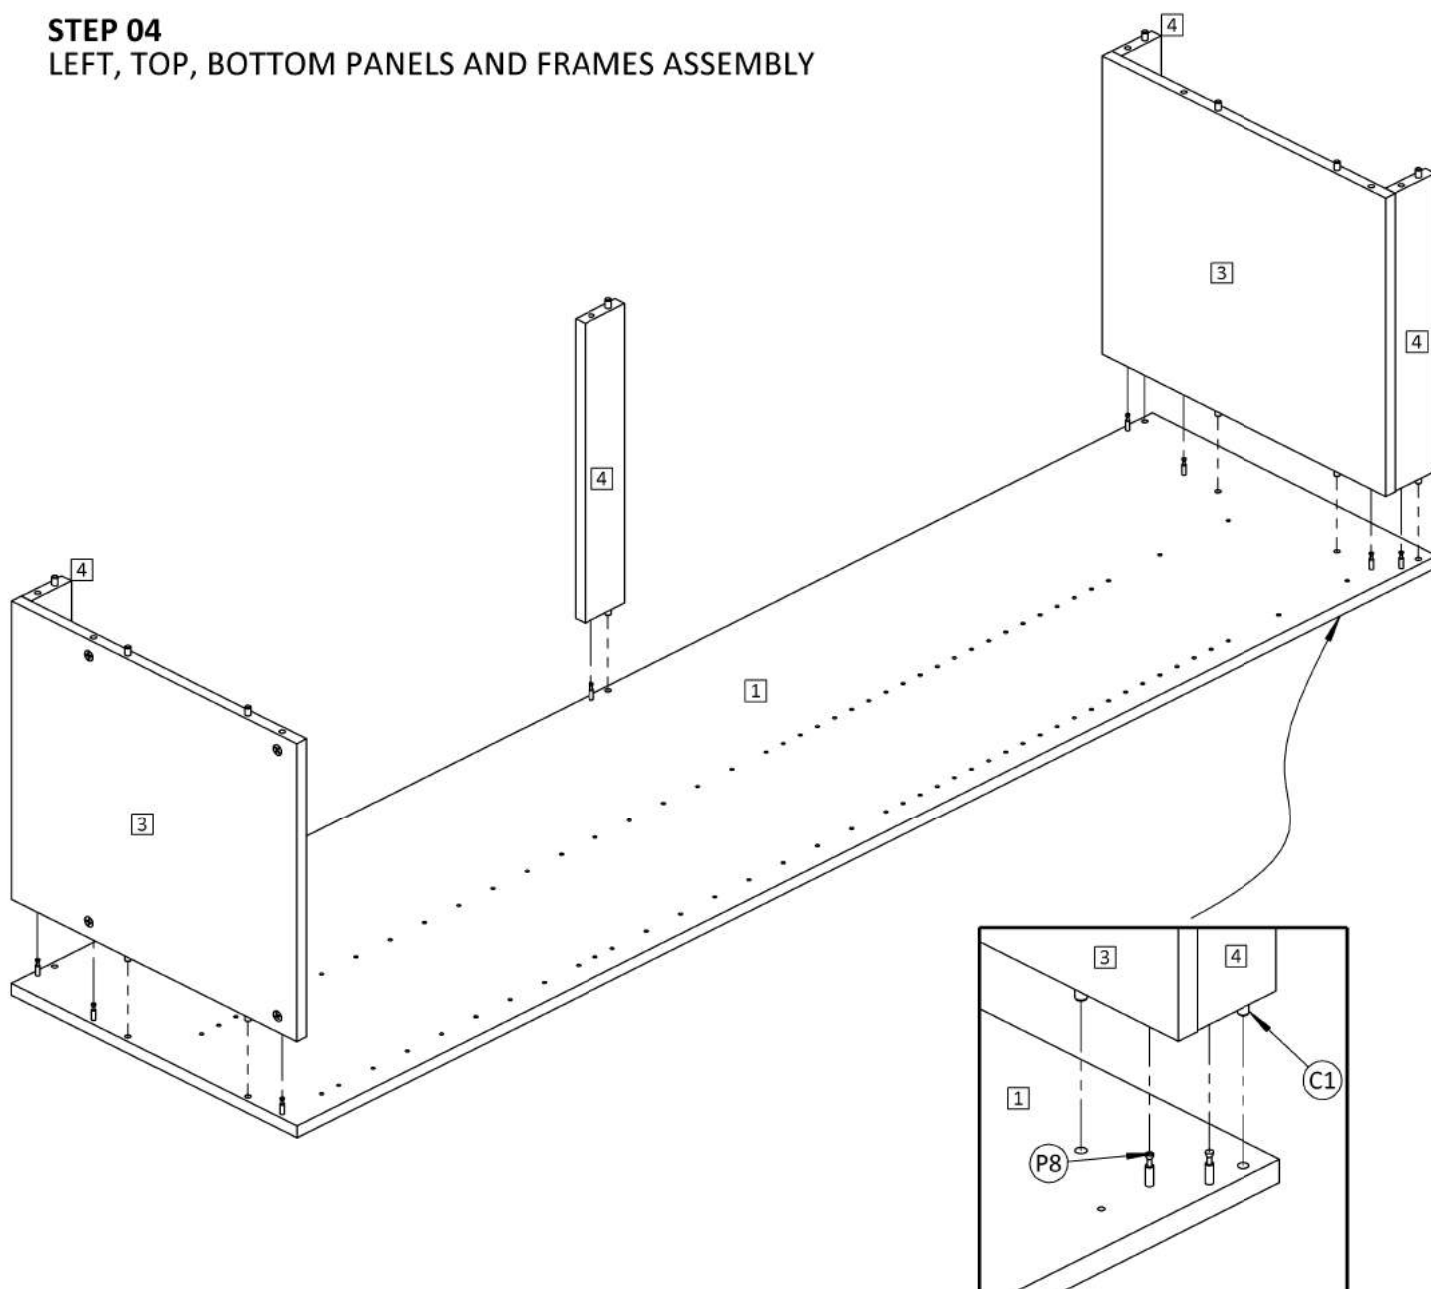

ASSEMBLY INSTRUCTIONS

BOX 06

STEP 05 RIGHT SIDE PANEL ASSEMBLY

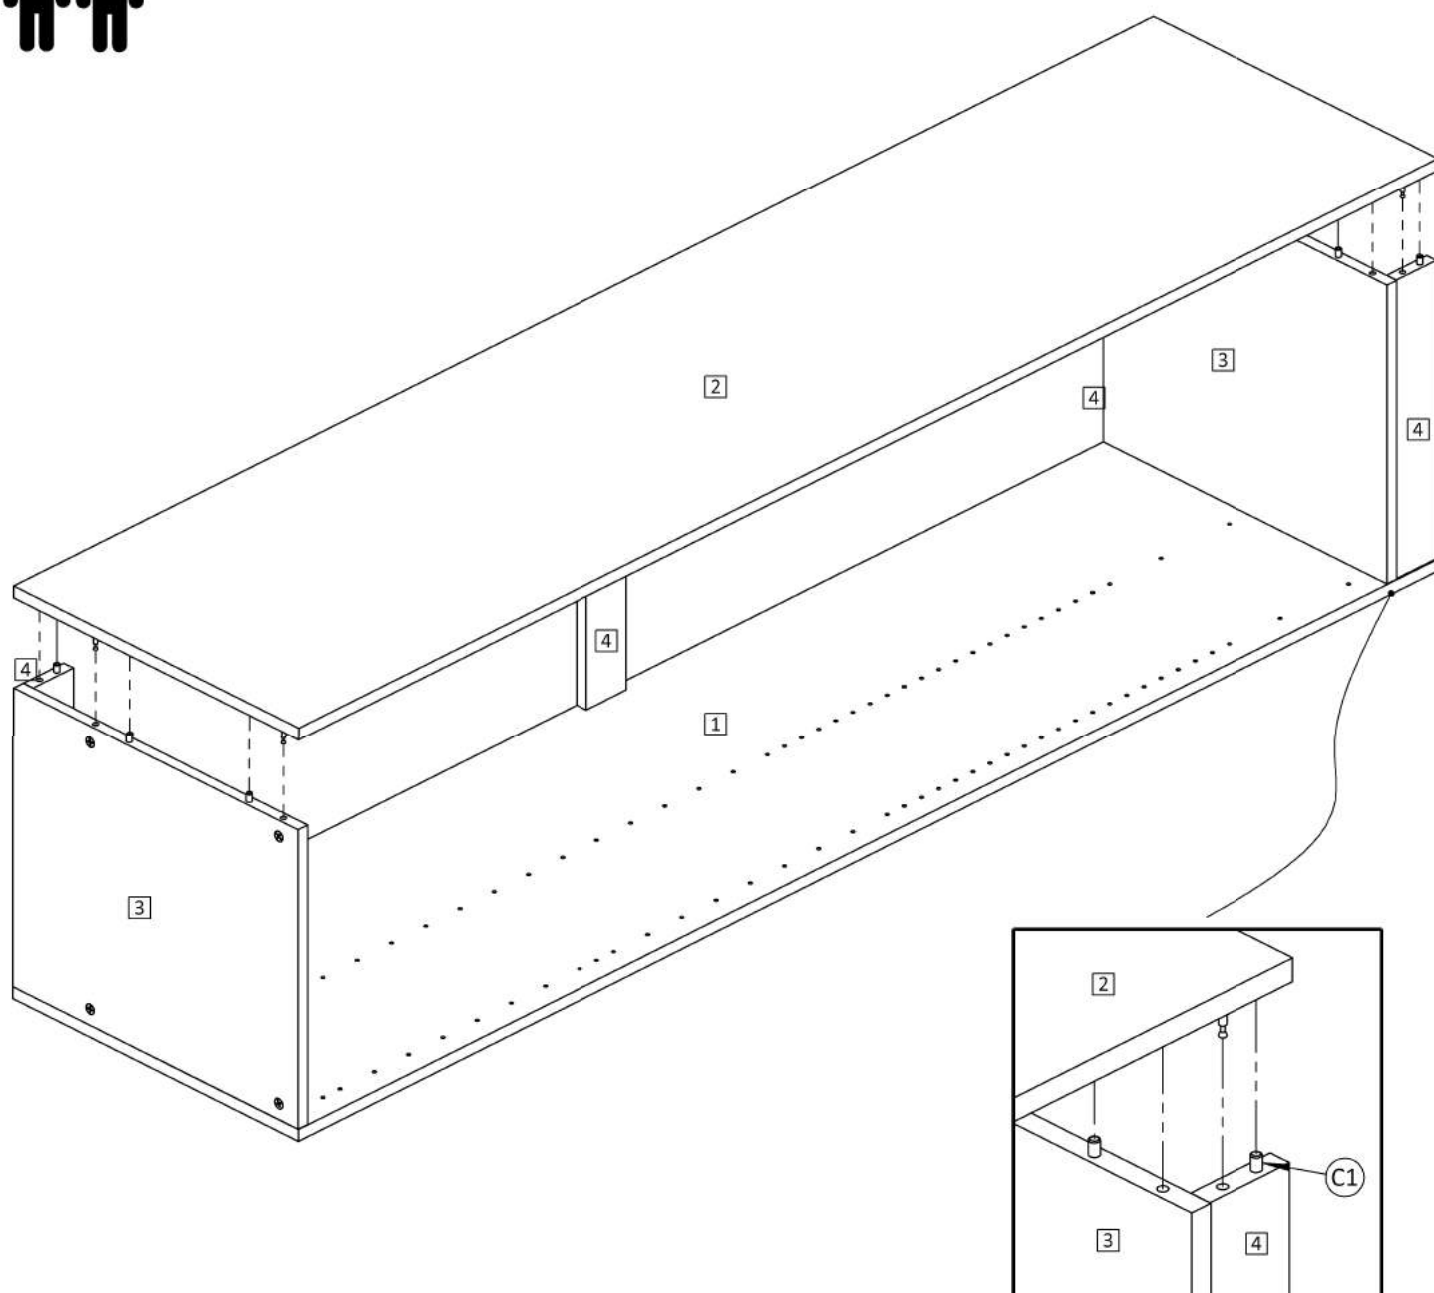

STEP 06

FIXING THE CABINET ON THE WALL



FIXING THE CABINET

DRILL THE WALL
USING A DRILLER
IN ORDER TO
INSERT THE PLUG

ASSEMBLY INSTRUCTIONS



BOX 06




IT IS REQUIRED TO FIX
THE CABINETS ON THE WALL
RISK OF FALL!



FIXING HARDWARES	06	06	06	08
	SCREW 5/32 X 2 3/4	SCREW 1/4 X 2 3/4	PLASTIC PLUG	SCREW 9/64 X 1 1/4

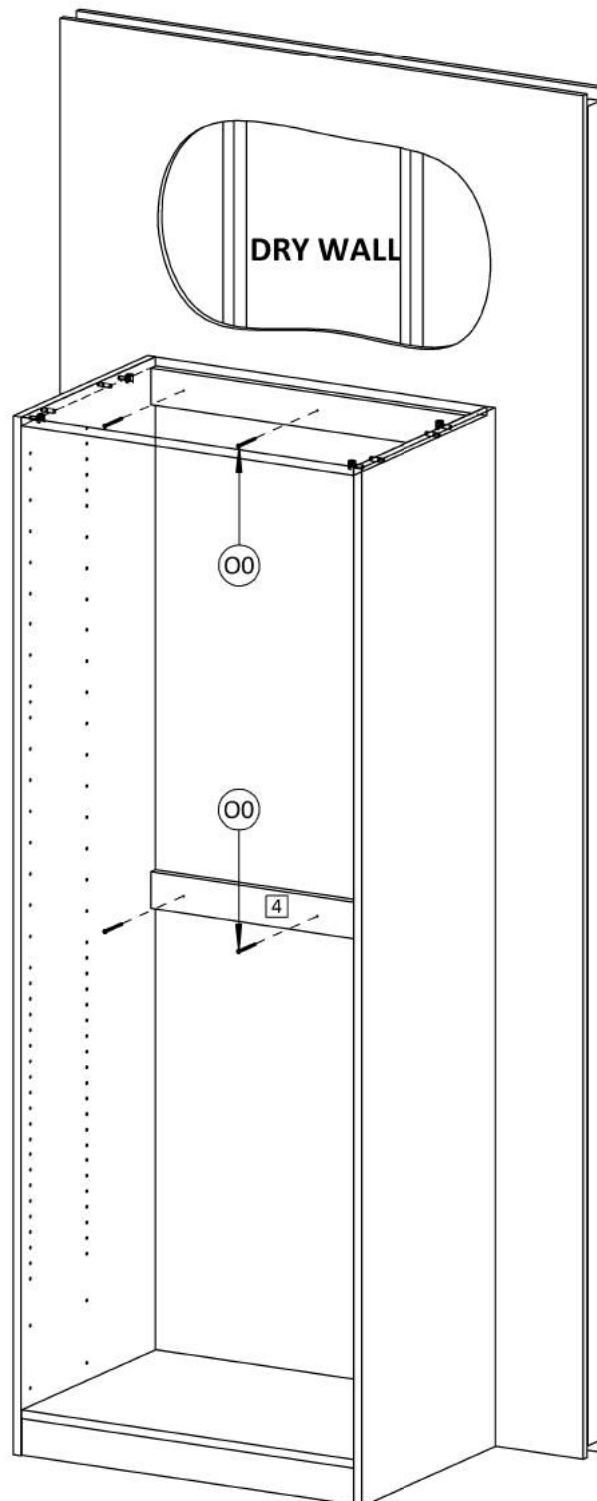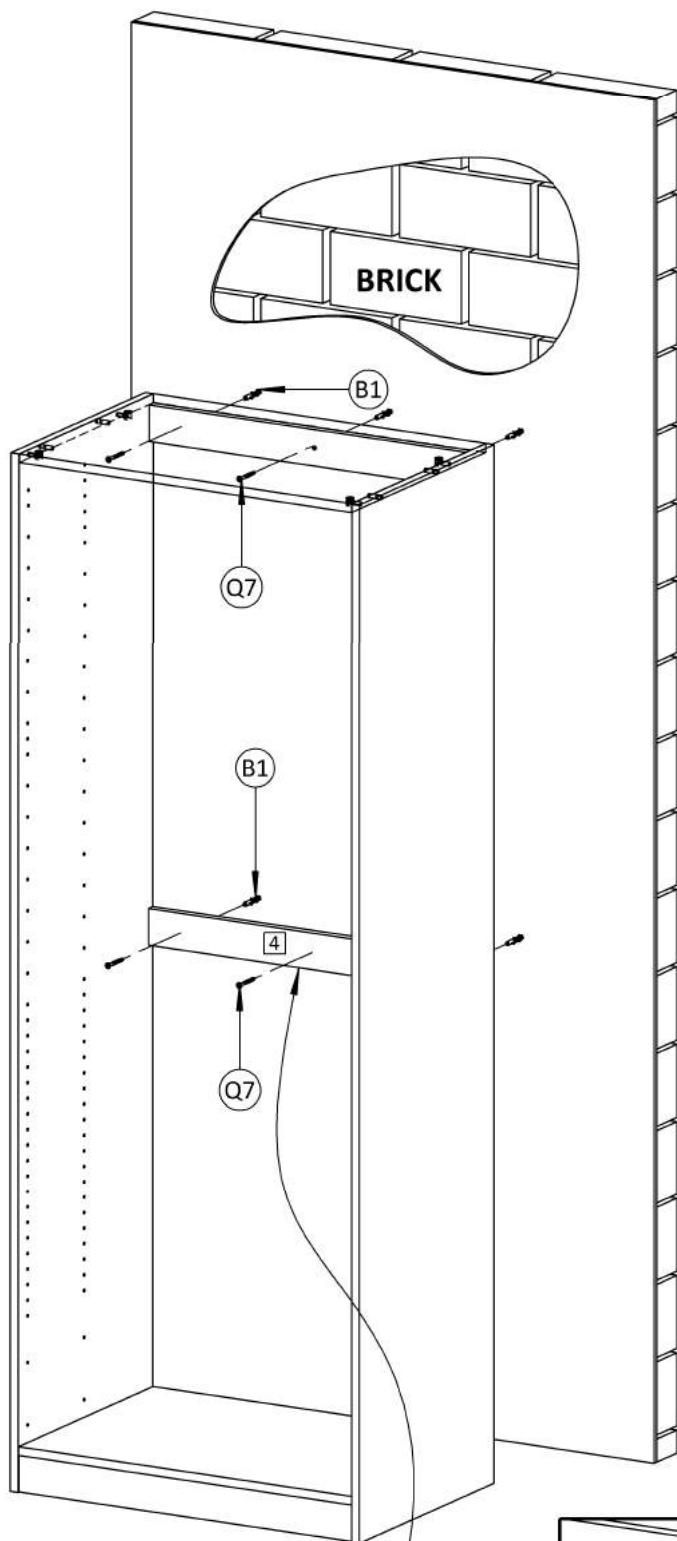



SCREW IN THE CENTER
OF THE FRAME

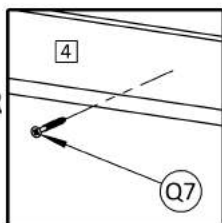

THE CABINET MUST ALWAYS BE
SUPPORTED ON THE GROUND

STEP 07
JOINING THE CABINETS

ASSEMBLY INSTRUCTIONS
BOX 06

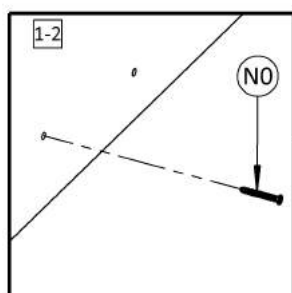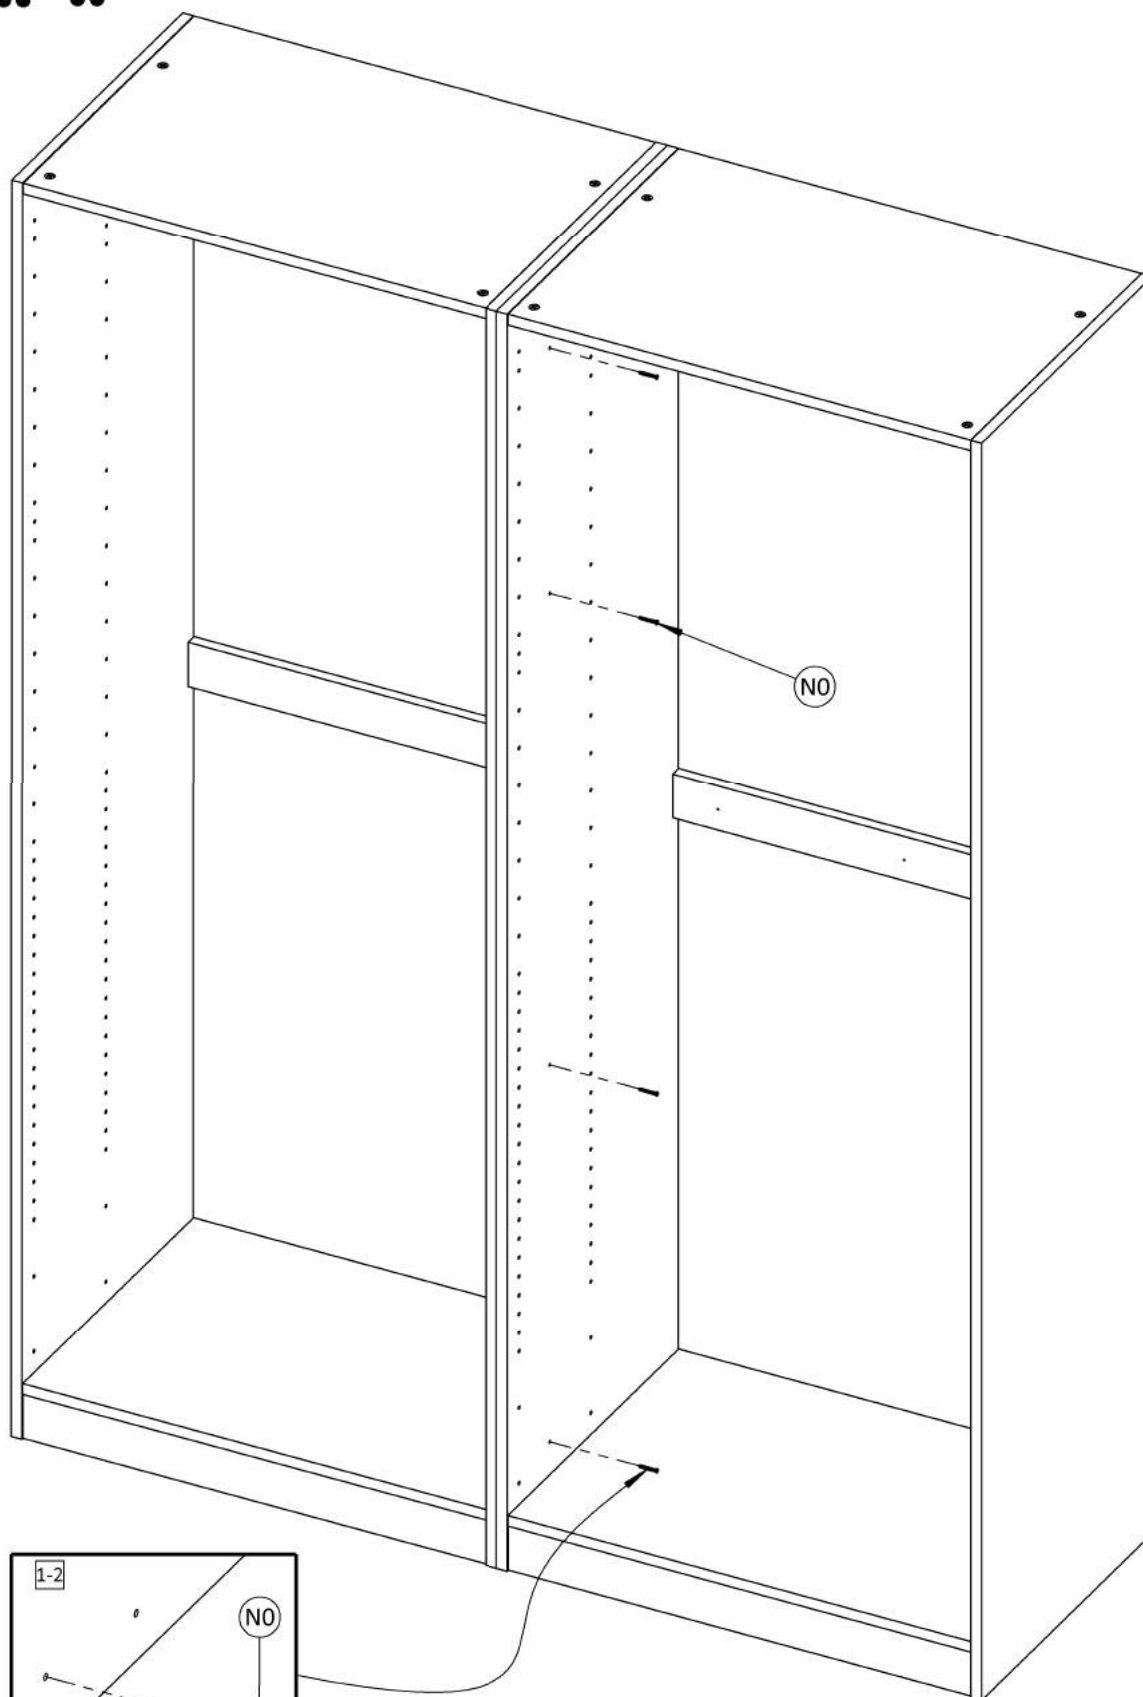



FIXING THE SHELVES INSIDE THE CABINET

ASSEMBLY INSTRUCTIONS

BOX 06

STEP 08

FIX THE SUPPORT ON THE SIDE PANNELS CLOSET

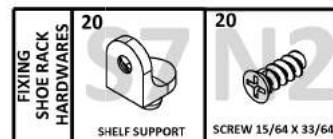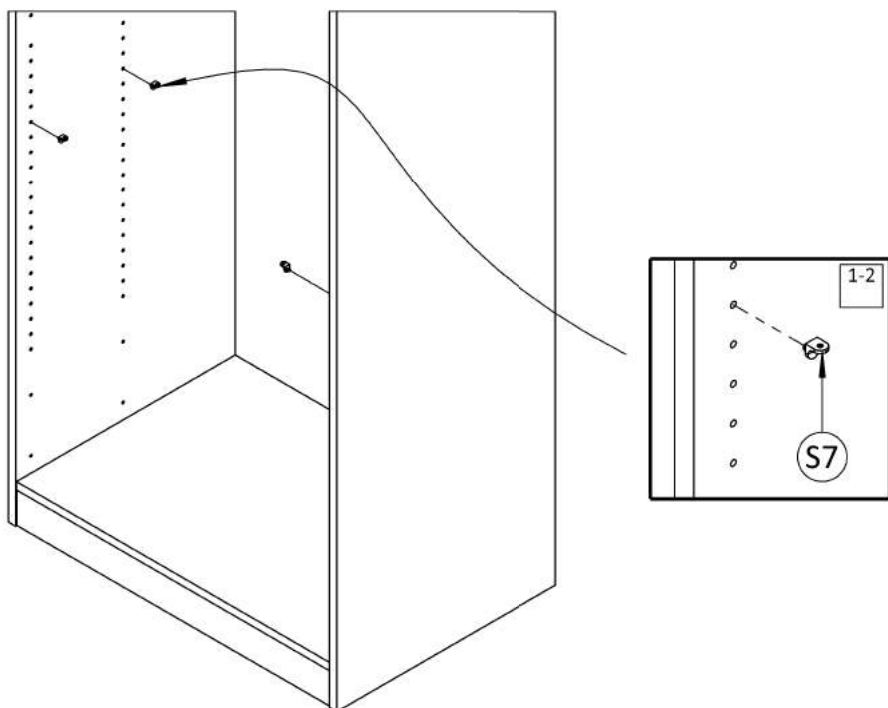

STEP 09

FIT THE SHELF ON THE CLOSET

SCREW THE SHELF
ON THE SUPPORT

