


HARDWARE PARTS:

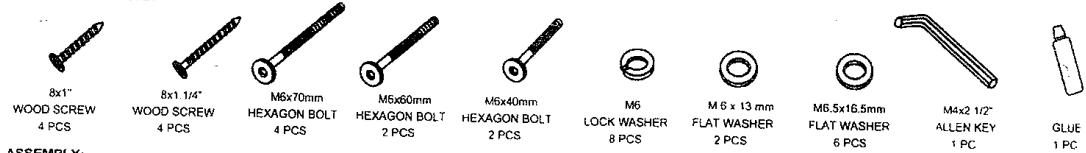

ASSEMBLY:

- 1 POSITION THE CHAIR BACK ON A SOFT SURFACE SUCH AS A CARPET. PLACE THE CHAIR APRON FRAME ON TO THE MIDDLE RAIL OF THE CHAIR BACK WITH THE DOWEL FULLY INSERTED INTO THE PRE-DRILLED HOLES. MAKE SURE THAT THE SCREW HOLES ON THE APRON FRAME ARE FACING DOWN.
- 1.1 INSERT 60mm HEXAGON BOLT THROUGH A LOCK WASHER AND A FLAT WASHER (13mm) INTO THE PRE-DRILLED HOLES ON THE APRON FRAME AT REAR CORNERS. TIGHTEN WITH THE ALLEN KEY PROVIDED.
- 1.2 INSERT THE 40mm HEXAGON BOLT THROUGH A LOCK WASHER AND A FLAT WASHER (16.5mm) INTO THE PRE-DRILLED HOLES OF THE APRON FRAME AT REAR RAIL. TIGHTEN WITH THE ALLEN KEY PROVIDED.
- 2 APPLY GLUE TO ALL THE PRE-DRILLED HOLES BEFORE PROCEEDING THE ASSEMBLY PROCESS. INSERT EACH SIDE STRETCHER INTO PRE-DRILLED HOLES ON BOTH OF THE REAR LEGS. MAKE SURE SCREW HOLE ON THE STRETCHER ARE FACING DOWN. PLACE THE LEFT LEG TO THE LEFT CORNER. AND INSERT THE STRETCHER INTO THE LEG. REPEAT THE SAME FOR THE RIGHT LEG.
- 2.1 INSERT THE 70mm HEXAGON BOLT THROUGH A LOCK WASHER, A FLAT WASHER (16.5mm) AND THE PRE-DRILLED HOLES OF CORNER BLOCK INTO THE PRE-DRILLED HOLES ON THE FRONT LEG. TIGHTEN THE HEXAGON BOLT WITH ALLEN KEY PROVIDED.
- 2.2 INSERT 1.1/4" WOOD SCREW INTO SIDE STRETCHER THROUGH THE PRE-DRILLED HOLES. TIGHTEN WITH SCREW-DRIVER

FIG. 1

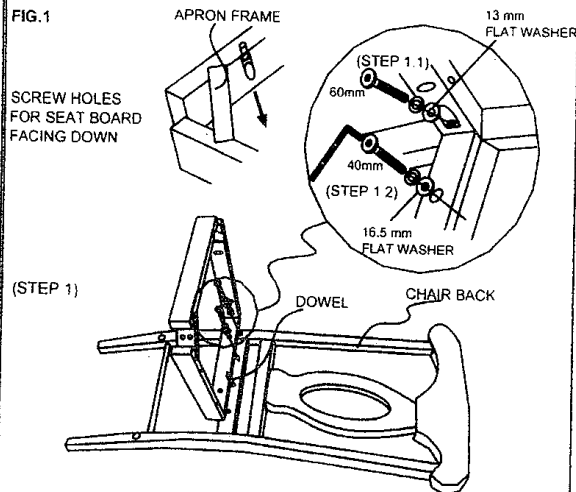


FIG. 2

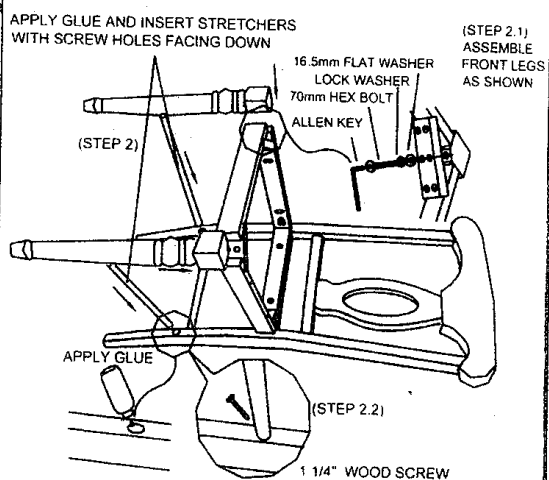


FIG. 3

- 3 FLIP CHAIR UPSIDE DOWN AND SECURE THE SEAT BOARD WITH THE 1" WOOD SCREW THROUGH THE PRE-DRILLED HOLES ON THE APRON FRAME

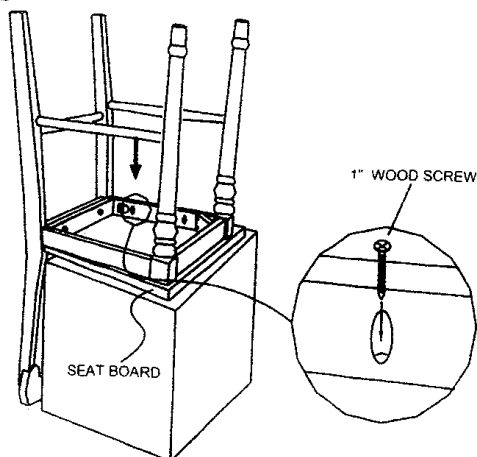


FIG. 4

- 4 TURN THE CHAIR TO STANDING POSITION

