
















Queen Assembly Instructions


Hardware List includes factory installed bolts and washers for side rails attachment.

B	D	E	F	G	I	J	M	N	O	P	Q	W	Z
 φ8*30MM	 φ6MM	 φ8MM	 H=120MM	 φ8MM	 φ8MM		 φ6*40MM				 φ8MM	 φ8*30MM	 φ8MM
0PC	3PCS	0PC	4PCS	4PCS	1PC	3PCS	3PCS	13PCS	1PC	26PCS	2PCS	4PCS	4PCS


①

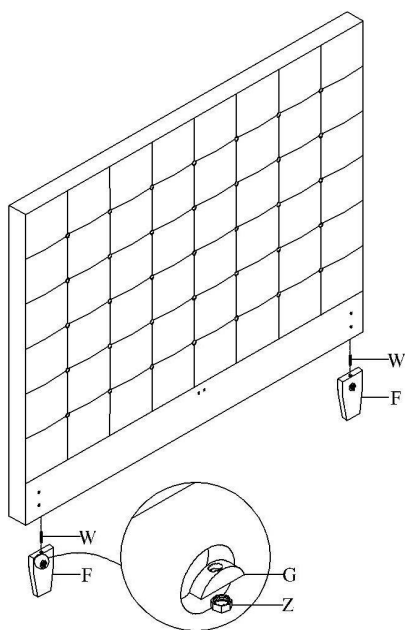

②

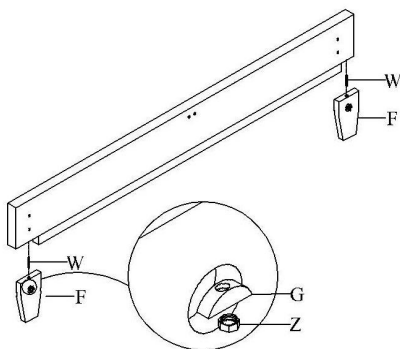

③

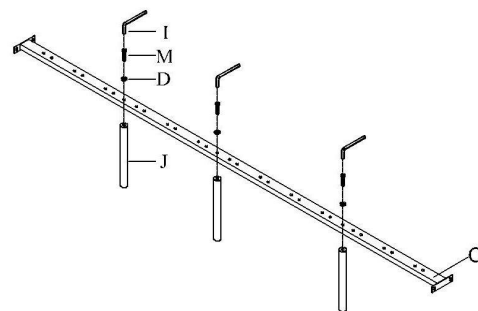

Step#1

Retrieve feet from behind HB. Attach bed feet (F) to the headboard using Bolt (W), Hardware (G) and Nut (Z).

Step#2

Attach bed feet (F) to the footboard using Bolt (W), Hardware (G) and Nut (Z).

Step#3















Attach steel center support legs (J) to the center support rail (O) using Wrench (I), Bolt (M) and Washer (D).

CONGRATULATIONS ON YOUR NEW BED PURCHASE


~Warning:do not move bed after final assembly as it may result in damages to floor and/or bed.~

Queen Assembly Instructions


Hardware List includes factory installed bolts and washers for side rails attachment.

B	D	E	F	G	I	J	M	N	O	P	Q	W	Z
 φ8*30MM	 φ6MM	 φ8MM	 H=120MM		 φ8MM		 φ6*40MM						
0PC	3PCS	0PC	4PCS	4PCS	1PC	3PCS	3PCS	13PCS	1PC	26PCS	2PCS	4PCS	4PCS

④

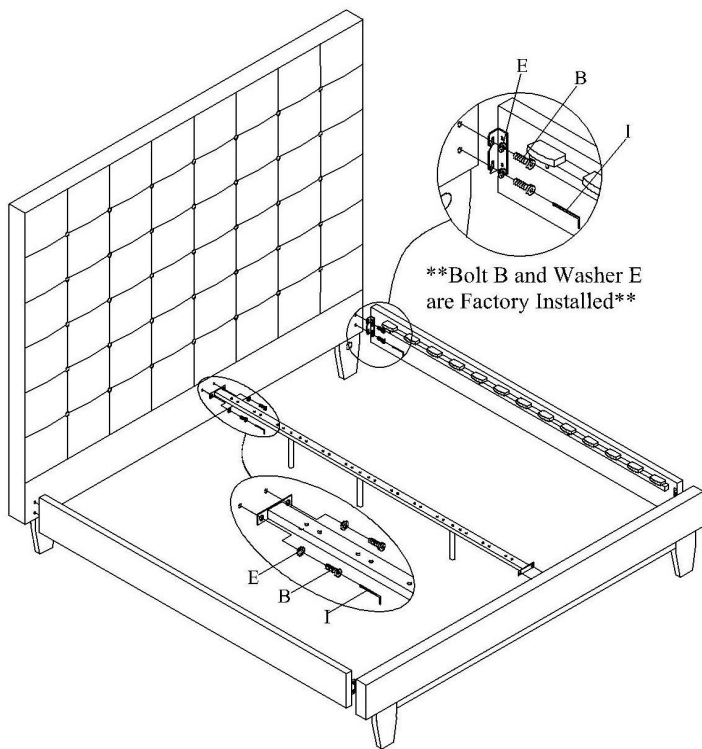

⑤

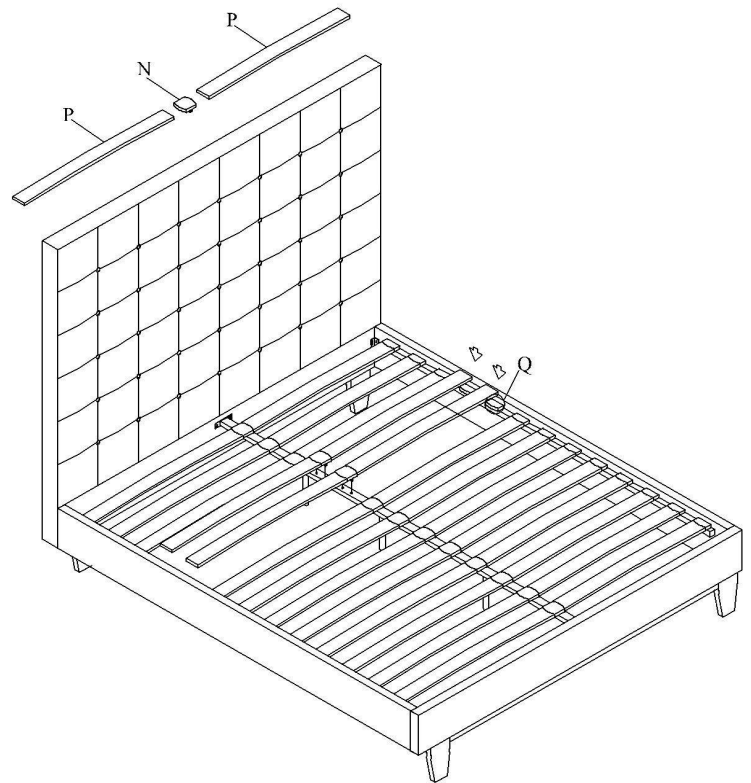

Step#4

Attach side rails to headboard and footboard using factory installed Bolt (B) and Washer (E).
Attach steel center support rail to the headboard and footboard using factory installed Bolt (B) and Washer (E).

Step#5 (IMPORTANT: Make sure slats are inserted into center clip BEFORE snapping into place)

Verify Euro Slat System Tension Slats are installed curved upwards per diagram.
Insert tension slats into Center Clip (N) and factory installed End Clip (Q) before snapping into place.

CONGRATULATIONS ON YOUR NEW BED PURCHASE

~Warning: do not move bed after final assembly as it may result in damages to floor and/or bed.~