

Assembly Instructions

ACCENT CHAIR

Location of legs:

Two front legs and two rear legs can be found inside the zippered compartment located on the underside of the accent chair.

Installation of legs:

Remove the legs from the zipper compartment.

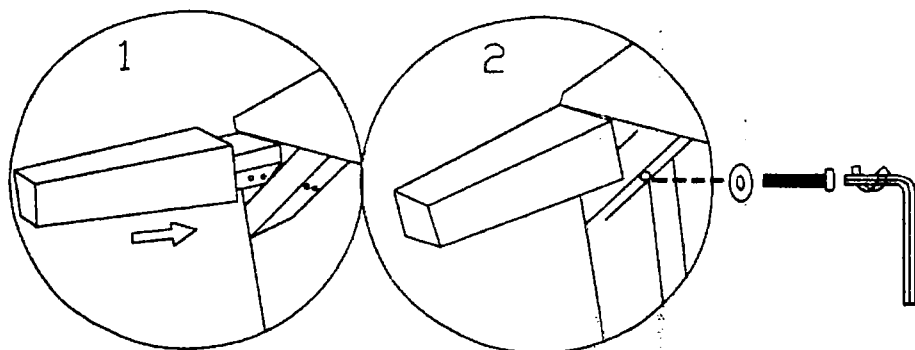
Each leg should have two bolts and two metal washers.






Locate the threaded inserts on the bottom of the frame marked for leg placement.

Tighten the leg completely into the threaded inserts of the frame.

Once the four legs have been secured to the frame, it will be ready for use.

Assembly complete.



PART LIST				
Bolt		8 PCS	Metal Washer	 8PCS
Allen Wrench		1 PC		
Front Leg		2 PCS	Rear Leg	 2PCS