

8 PC SECTIONAL ASSEMBLY INSTRUCTIONS

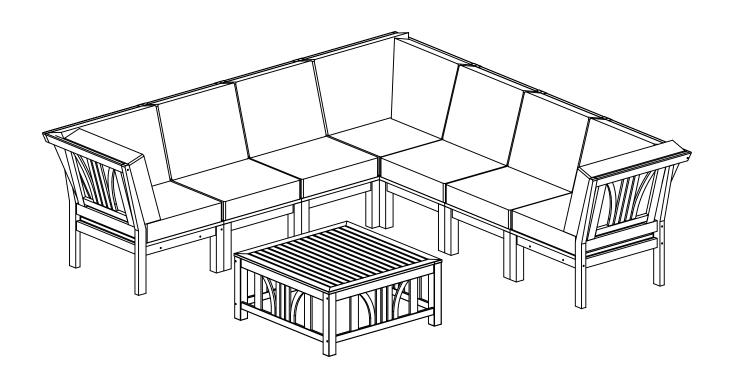

THIS INSTRUCTION BOOKLET CONTAINS <u>IMPORTANT</u> SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

- * ASSEMBLE YOUR UNIT IN AN AREA FREE FROM ANY OBJECTS THAT MIGHT SCRATCH THE SURFACE OF YOUR UNIT.
- * EXAMINE ALL PACKING MATERIAL BEFORE DISCARDING, SHORTAGES MAY OCCUR FROM PARTS LEFT IN THE PACKING MATERIAL.
- * PLEASE READ THE INSTRUCTIONS CAREFULLY, AND VERIFY ALL PARTS ARE INCLUDED.
- * ALL BOLTS ARE NEED TO BE TIGHTENED FROM TIME TO TIME TO AVOID DAMAGE.

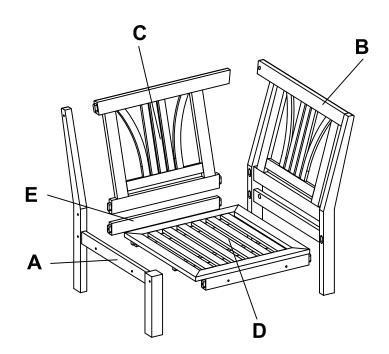

LIST OF WOODEN PARTS		
NO.	DESCRIPTION	Q'TY
A	Side frame	1 Pc
В	Side frame w/ support	1 Pc
C	Back support	1 Pc
D	Seat	1 Pc
Е	Apron	1 Pc


LIST OF HARDWARE PARTS

TOOL REQUIRED

For proper assembly use this tool (not included)

8" Phillips screwdriver


- for tightening all bolts.



CARE CUSHION

- * To clean, hand wash with mild detergent, wipe with damp cloth, or use sponge.
- * It is very important to air dry cushions when wet as mildew may growth on dirt and other substances that are not removed from fabric.
- * To extend life of your cushions, keep them in storage during rainy seasons or use furniture cover.
- * Please be notified that cushions with mildew problem are not under warranty.


STEP 1

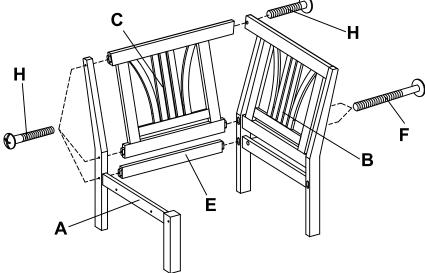


Attach side frame (A) and side frame with support (C) into back support (B) and apron (E). Secure using 1 1/2" bolts (H) into side frame (A) and 2 1/4" bolts (F) into side frame with support (B) as shown.

** DO NOT TIGHTEN BOLTS YET.

STEP 2

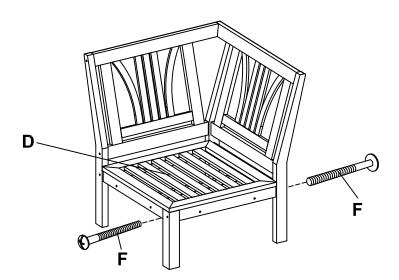

Next, attach the seat (D) into pre-assembled of side frames and secure using 2 1/4" bolts (F). Make sure all parts are correctly connected and tighten all bolts completely. Repeat step 1 and 2 procedure to secure other corner chairs.

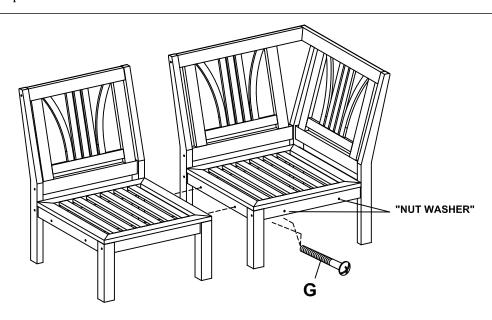

Next, joint the corner chair with other chair and secure using 2" bolts (G) from underneath of seat.