



# HEADBOARD

## ASSEMBLY INSTRUCTIONS

Before assembling your Headboard, please read through these instructions carefully, familiarize yourself with the different parts.

Instructions apply for all sizes of bed

### PARTS LIST

- 1 HEADBOARD PANEL 1 PC
- 2 LEFT LEG 1 PC
- 3 RIGHT LEG 1 PC

### HARDWARE

- a WOODEN DOWEL - 4 pcs  
Spare - 1 pc
- b JCB M6 X 35mm(1 3/8") - 4 pcs  
Spare - 1 pc
- c JCB M6 X 70mm(2 3/4") - 4 pcs  
Spare - 1 pc
- d Barrel Nut - 4 pcs  
Spare - 1 pc
- e Allen Wrench - 1pc  
Spare - 1pc


NOTE : WE INCLUDE SPARE HARDWARE IN CASE THE ALLEN WRENCH, JCB, WOODEN DOWEL, BARREL NUT OR SPLIT/FLAT WASHER ARE DAMAGED DURING ASSEMBLY.

### Step 1

Attach the legs (2)(3) to headboard panel (1), using wooden dowel (a), JCB (b). Tighten with the Allen wrench (e).




### Step 2

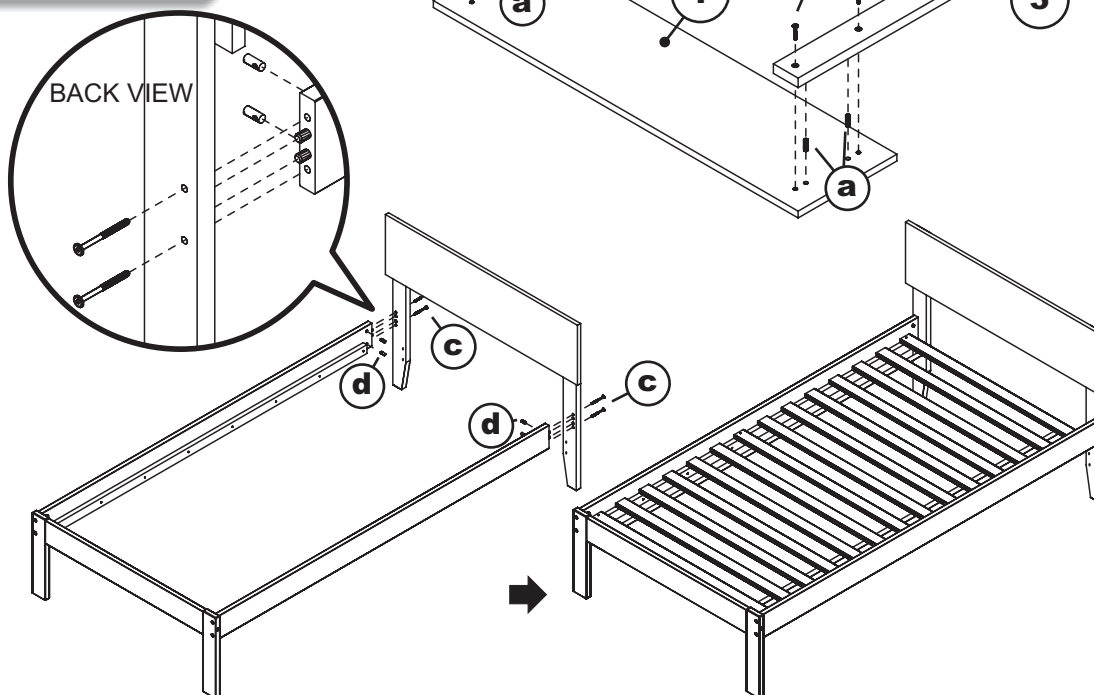

Attach bed frame assemblies to the headboard assemblies, using JCB M6 X 70mm (c) and barrel nut (d) as shown. Tighten with allen wrench (e). For Slat kit assembly, follow assembly instructions included with slat kit.

### Assemble Metal Frame

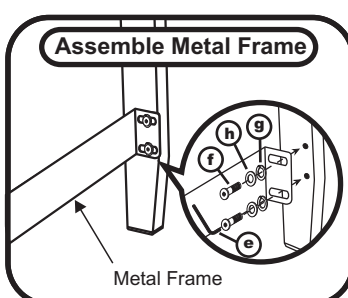

### HARDWARE

For Headboard to Metal Bed Frame

- f 3/4" Allen Bolts - 4 pcs Spare - 1 pc
- g Split Washer - 4 pcs Spare - 1 pc
- h Flat Washer - 4 pcs Spare - 1 pc