



# BED FRAME

## ASSEMBLY INSTRUCTIONS





Before assembling your Platform bed frame, please read through these instructions carefully, familiarize yourself with the different parts.

Instructions apply for all sizes of bed

### PARTS LIST

- |   |           |       |
|---|-----------|-------|
| 1 | MID RAIL  | 1 PC  |
| 2 | LEFT LEG  | 1 PC  |
| 3 | RIGHT LEG | 1 PC  |
| 4 | LONG RAIL | 2 PCS |

### HARDWARE

- |   |  |
|---|--|
|  <b>a</b> JCB M6 X 120mm(4 3/4") - 2 pcs<br>Spare - 1 pc |  <b>c</b> Barrel Nut - 6 pcs<br>Spare - 2 pcs |
|  <b>b</b> JCB M6 X 70mm(2 3/4") - 4 pcs<br>Spare - 1 pc  |  <b>d</b> Allen Wrench - 1pc<br>Spare - 1pc   |

NOTE: WE INCLUDE SPARE HARDWARE IN CASE THE ALLEN WRENCH, JCB, OR BARREL NUT ARE DAMAGED DURING ASSEMBLY.


### Step 1

Attach the legs (2)(3) to mid rail (1), using JCB M6 X 120mm (a) and barrel nut (c). Tighten with the Allen wrench (d).



Adult Assembly

### Step 2

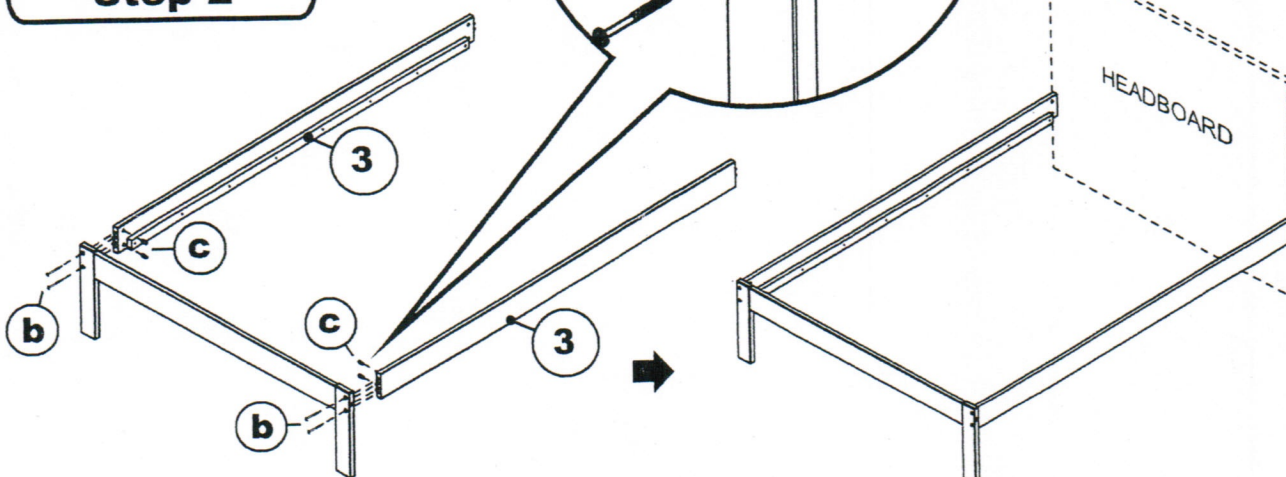

Attach long rail (3) to the mid rail assemblies, using JCB M6 X 70mm (b) and barrel nut (c) as shown. Tighten with allen wrench (d). For Headboard assembly, follow assembly instructions included with headboard.