

# ASSEMBLY INSTRUCTIONS

**Description:** Ottoman





## Important safety instructions:

- Please carefully read all instructions before assembling the ottoman.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.






## Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

## Parts List

Item	Description		QTY
P1	Top Cushion		1
P2	Storage		1
P3	Legs		4
P4	Shelf		1

## Hardware List

Item	Description		QTY
H1	Bolts Ø5/16"x1/2"L		16
H2	Lock Washers Ø5/16"		16
H3	Flat Washers Ø5/16"		16
H4	Allen Wrench Ø5/16"		1
H5	"L" Bracket		4

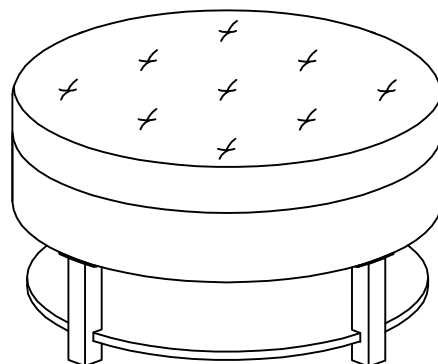

## Assembly Procedures:

**Step 1.** Assemble the ottoman on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach three legs (P3) to bottom of storage (P2) using bolts (H1), lock washers (H2) and flat washers (H3) as shown below.

(H1)x6 Bolts Ø5/16"x2-1/2"L




(H2)x6 lock Washers Ø5/16"




(H3)x6 Flat Washers Ø5/16"



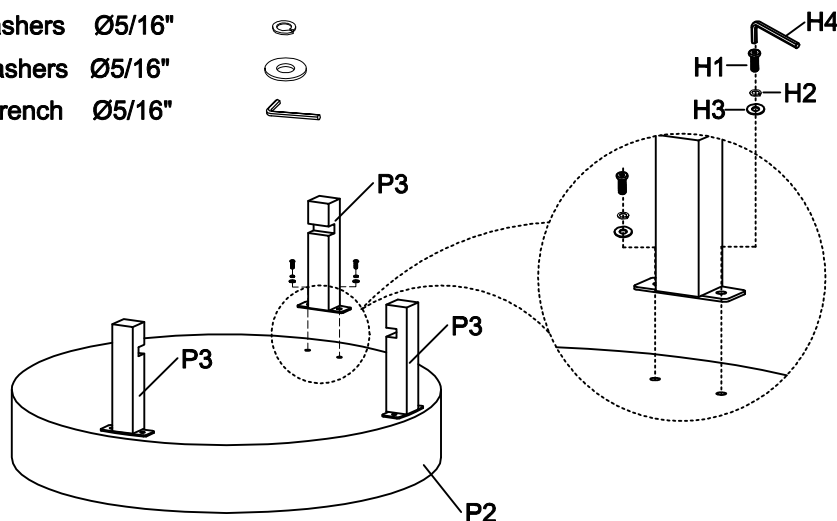


(H4)x1 Allen Wrench Ø5/16"

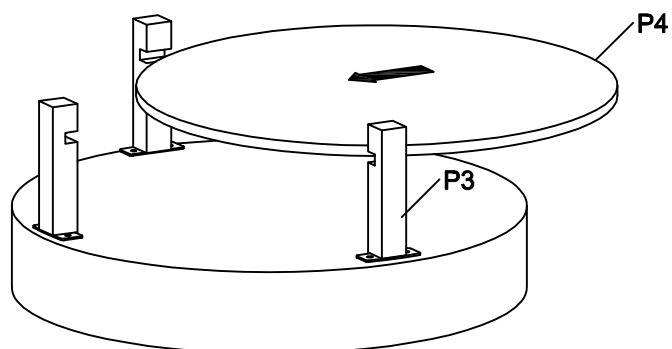


**Step 2. Attach the shelf (P4) to the assembled legs (P3) as shown below.**



**Step 3. Loosely attach last one leg (P3) to the assembled bottom of storage (P2) and shelf (P4) using bolts (H1), lock washers (H2) and flat washers (H3) as shown below.**

- |        |              |                |   |
|--------|--------------|----------------|---|
| (H1)x2 | Bolts        | Ø5/16"x2-1/2"L |  |
| (H2)x2 | lock Washers | Ø5/16"         |  |
| (H3)x2 | Flat Washers | Ø5/16"         |  |

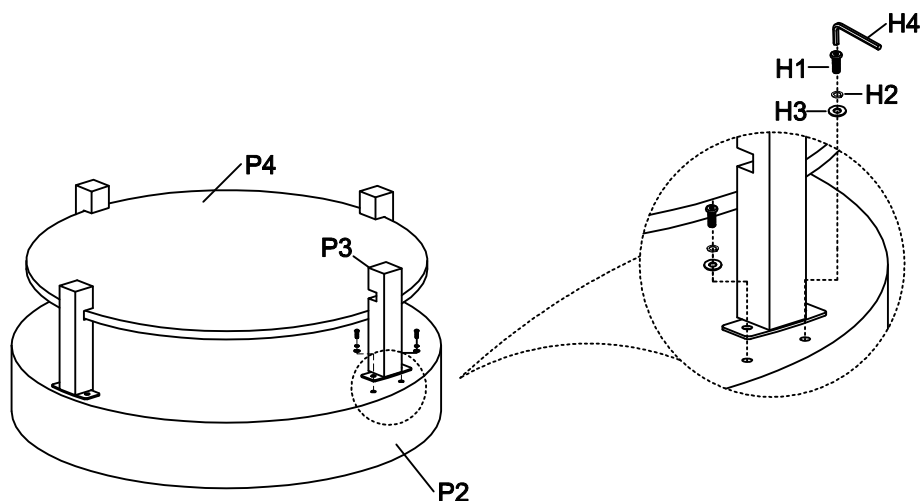

**Step 4. Attach "L" Bracket (H5) to the shelf (P4) and each leg (P3) using bolts (H1), lock washers (H2) and flat washers (H3) as shown below.**

(H1)x8 Bolts Ø5/16"x2-1/2"L




(H2)x8 lock Washers Ø5/16"



(H3)x8 Flat Washers Ø5/16"




(H5)x4 "L" Bracket

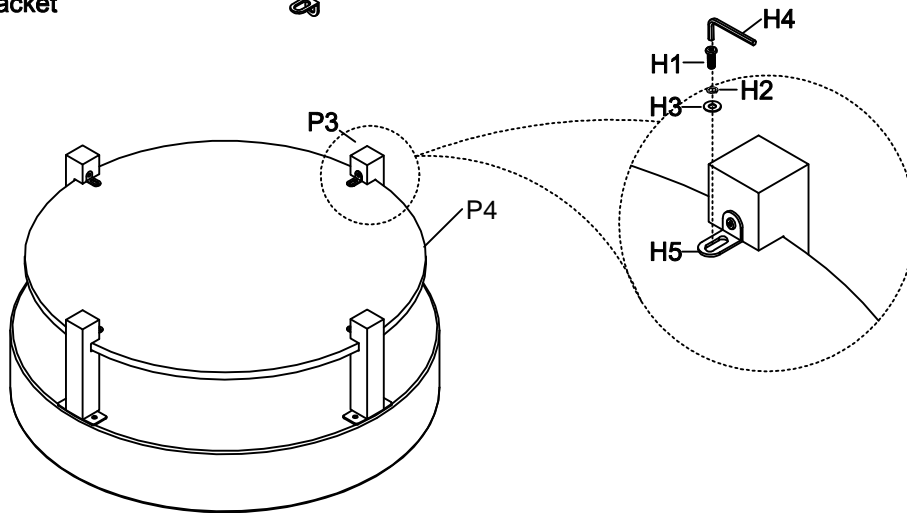

**Step 5.**

- 1) Turn the assembled ottoman to an upright position. Make sure the bottom is level and securely tighten all bolts with Allen wrench (H4).
- 2) Put the top cushion (P1) on the ottoman top.
- 3) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

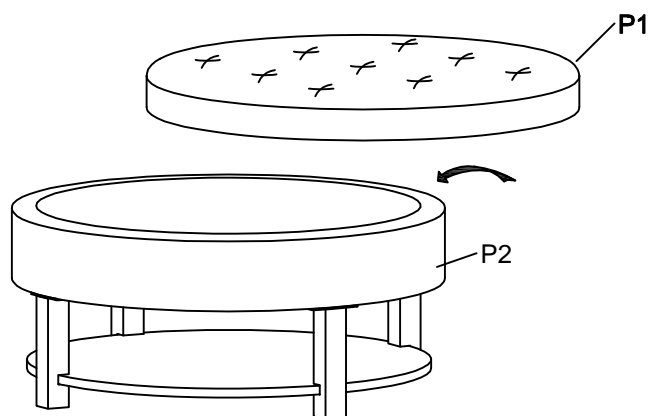

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

**Thank you for your purchase**