






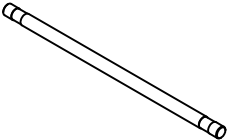
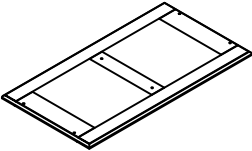


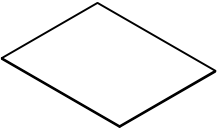
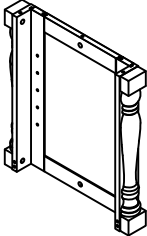



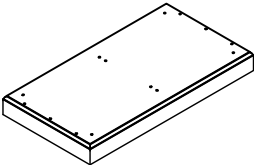












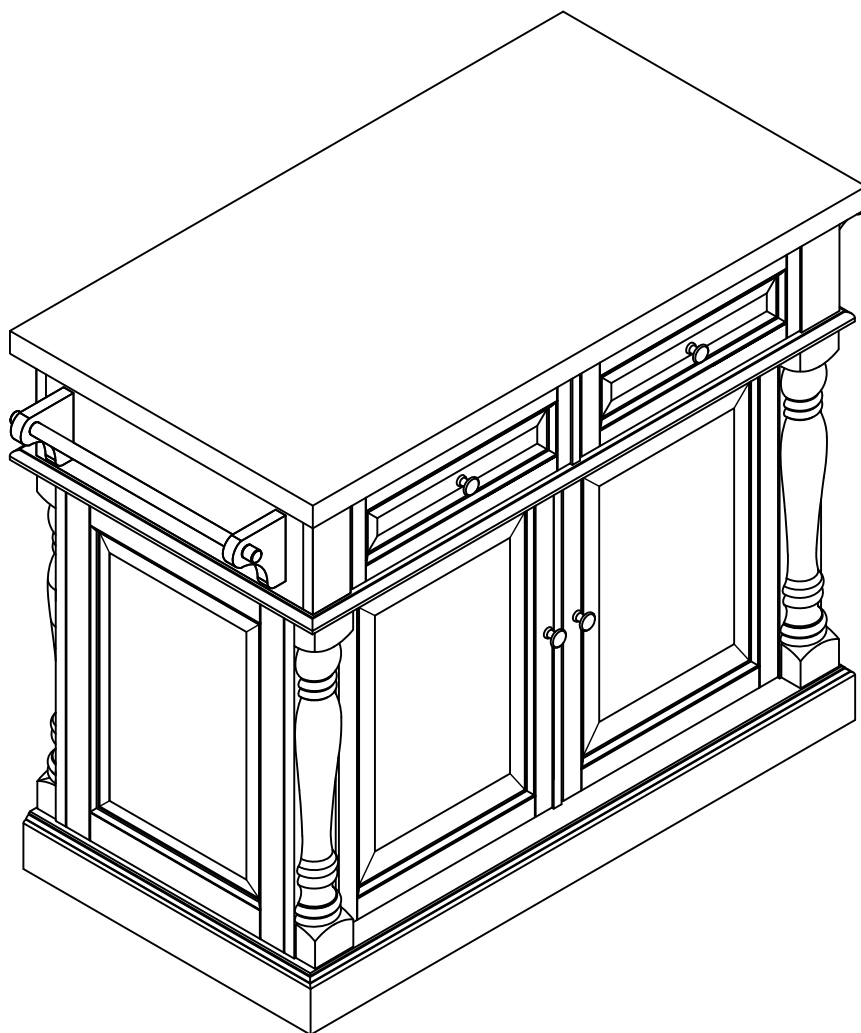
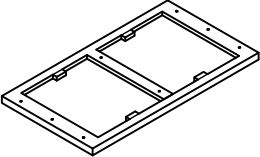
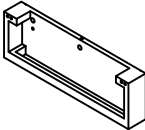

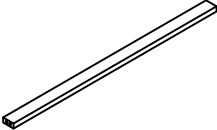



KITCHEN ISLAND WITH BUTCHER BLOCK TOP





PART LIST

A 	B 	C 	D 	E 
Top 1 PCS	Upper Side Frame 2 PCS	Adjustable Shelf 2 PCS	Top Rail 2 PCS	Upper Partition Panel 1PC
F 	G 	H 	I 	J 
Tower Bar Panel 4 PCS	Towel Bar 2 PCS	Middle Shelf Frame 1 PC	Drawer Front Panel 4 PCS	Drawer Side Panel 4 PCS
K 	L 	M 	N 	O 
Drawer Bottom Panel 2 PCS	Lower Side Frame 2 PCS	Left Door 2 PCS	Right Door 2 PCS	Lower Partition Panel 1 PC
Q 				
Base 1 PC				

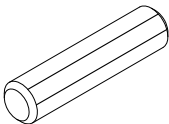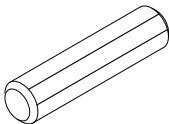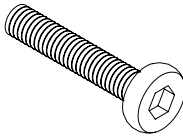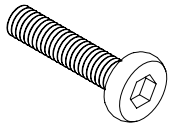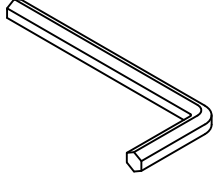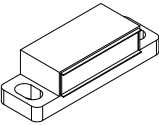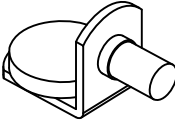

HARDWARE LIST



1	 ø8*30mm	2	 ø8*50mm	3	 ø10*60mm	4		5	
Short Wood Dowel 16 PCS		Long Wood Dowel 6 PCS		Wood Dowel 1 PC		Cam Bolt 20 PCS		Cam Lock 20 PCS	
6		7		8	 2"*ø1/4"*D11	9	 1-1/2"*ø1/4"*D11	10	
Round Head Bolt 8 PCS		Barrel Nut 8 PCS		Long Hex Socket Head Bolt 8 PCS		Short Hex Socket Head Bolt 4 PCS		Knob 8 PCS	
11		12		13		14	 12*ø3*D6mm	15	
Hex Key 1 PC		Magnet 4 PCS		Shelf Holder 8 PCS		Round Head Screw 8 PCS		Pin Hinge (Spare Part) 8 PCS	
16	 1"*ø4*D8	17	 1-1/4"*ø4*D8	18					
Short Flat Head Screw 16 PCS		Long Flat Head Screw 14 PCS		Flat Washer 8 PCS					


Tools needed: Allen Key (Part #11) (included)
Phillips Head Screw Driver (Not included)

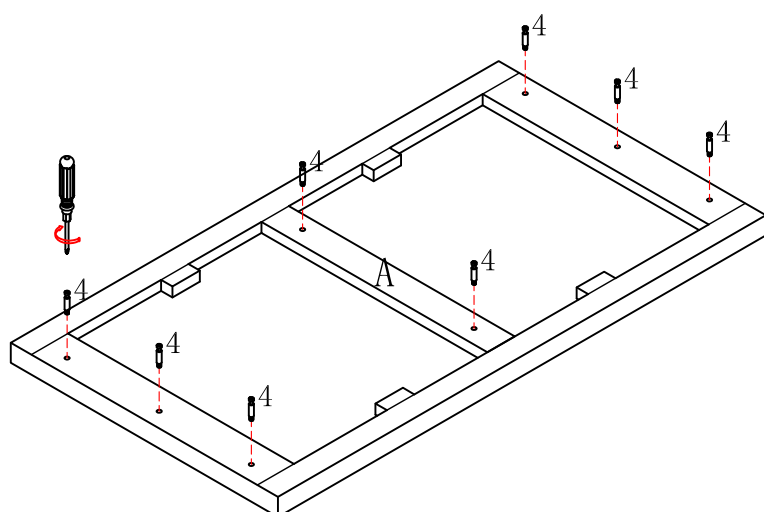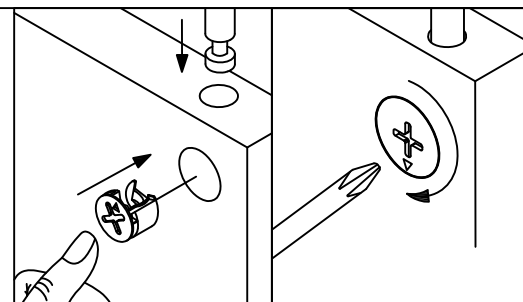

Step 1
 Insert Cam Bolts (Part #4) into
 pre-drilled holes of parts A, B & H
 using Phillips Head Screwdriver
 as shown.
DO NOT OVERTIGHTEN.

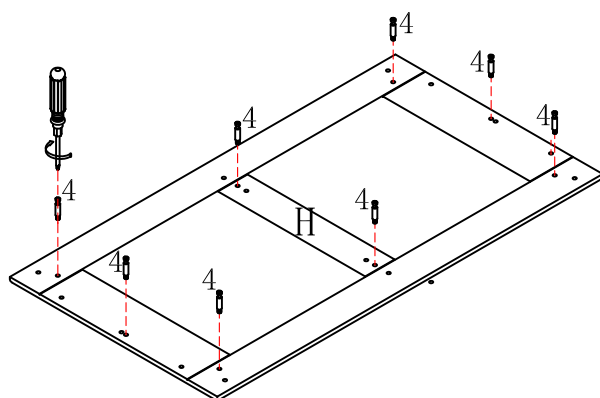
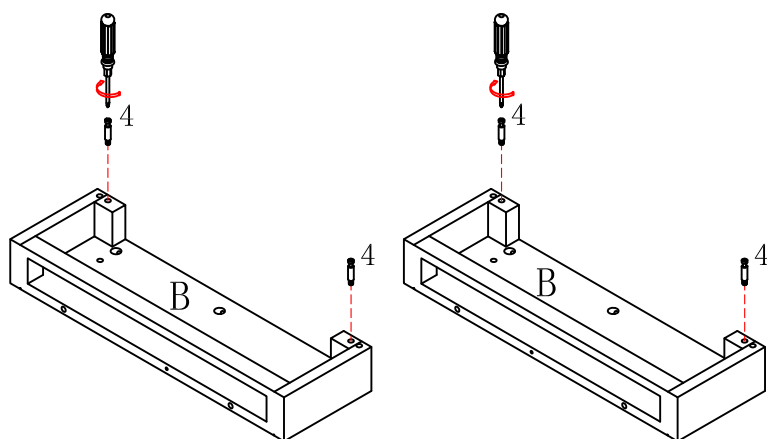


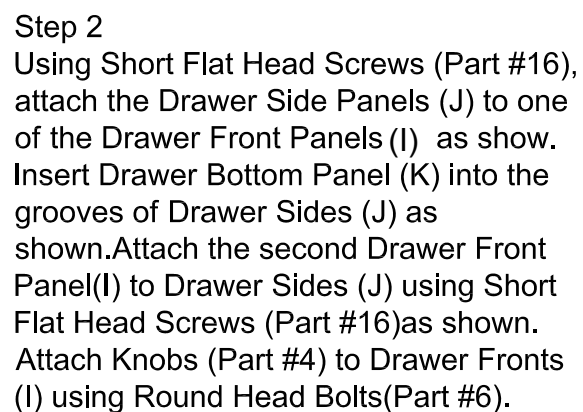

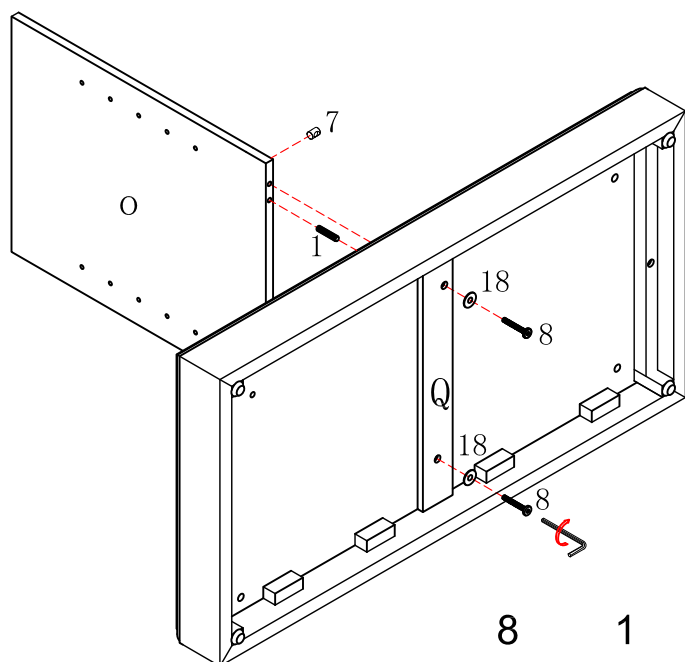


Step 3



With Base (Q) on its side, attach lower Partition Panel (O) using Short Wood Dowels (Part #1), Barrel Nuts (Part #7), Flat Washes (Part #18), and Long Hex Socket Head Bolts (Part #8) as shown.

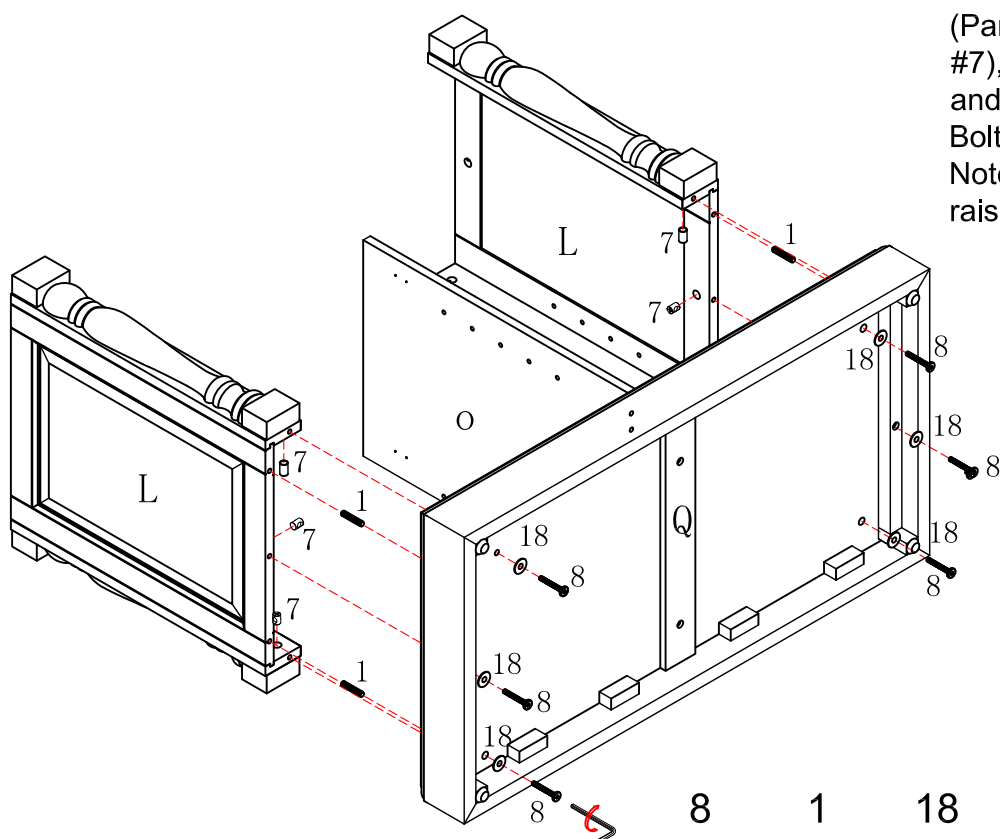

Step 4



Attach Lower Side Frames (L) using Short Wood Dowels (Part #1), Barrel Nuts (Part #7), Flat Washers (Part #18), and Long Hex Socket Head Bolts (Part #8) as shown. Note - Be sure that the finished raised panels are facing out.



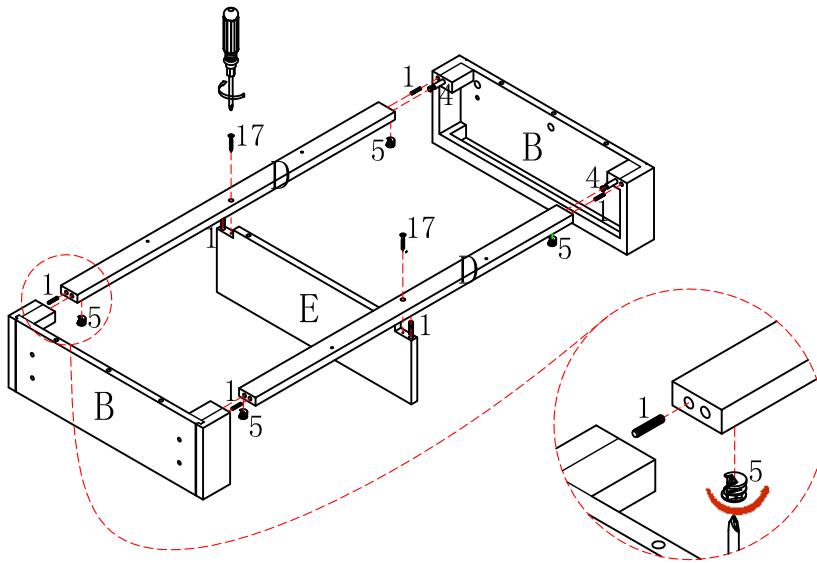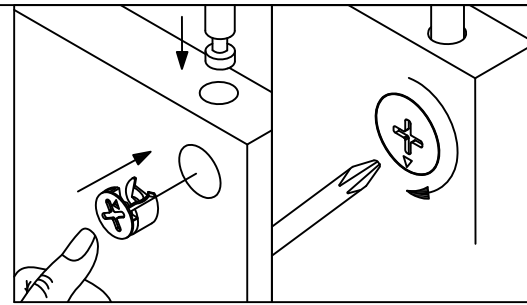

Step 5


Attach Upper Side Frame (B) to Top Rails (D) using Short Wood Dowels (Part #1), and Cam Locks (Part #5) as shown. Attach Upper Partition Panel (E) to Top Rails (D) using Short Wood Dowels (Part #1), and Long Flat Head Screws (Part #17) as shown.

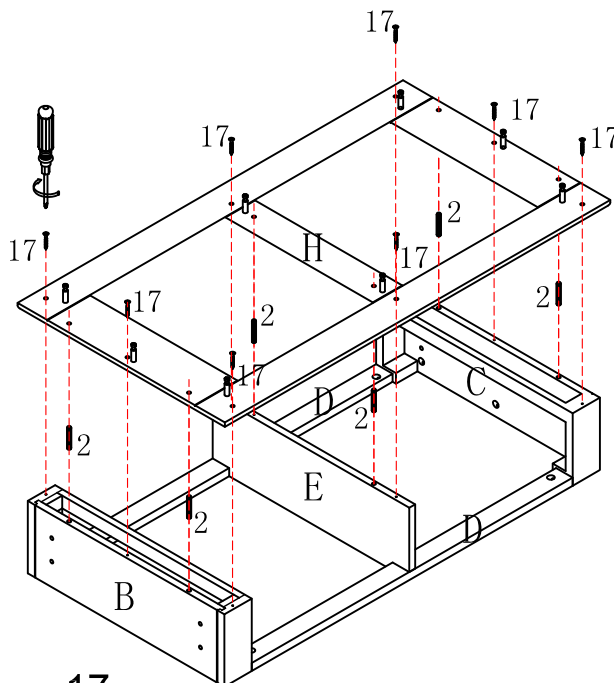

Step 6

Turn assembled parts B, D & E over with Top Rails (D) on a flat surface. Attach Middle Shelf Frame (H) using Long Flat Head Screws (Part #17), and Long Wood Dowels (Part #2) as shown.



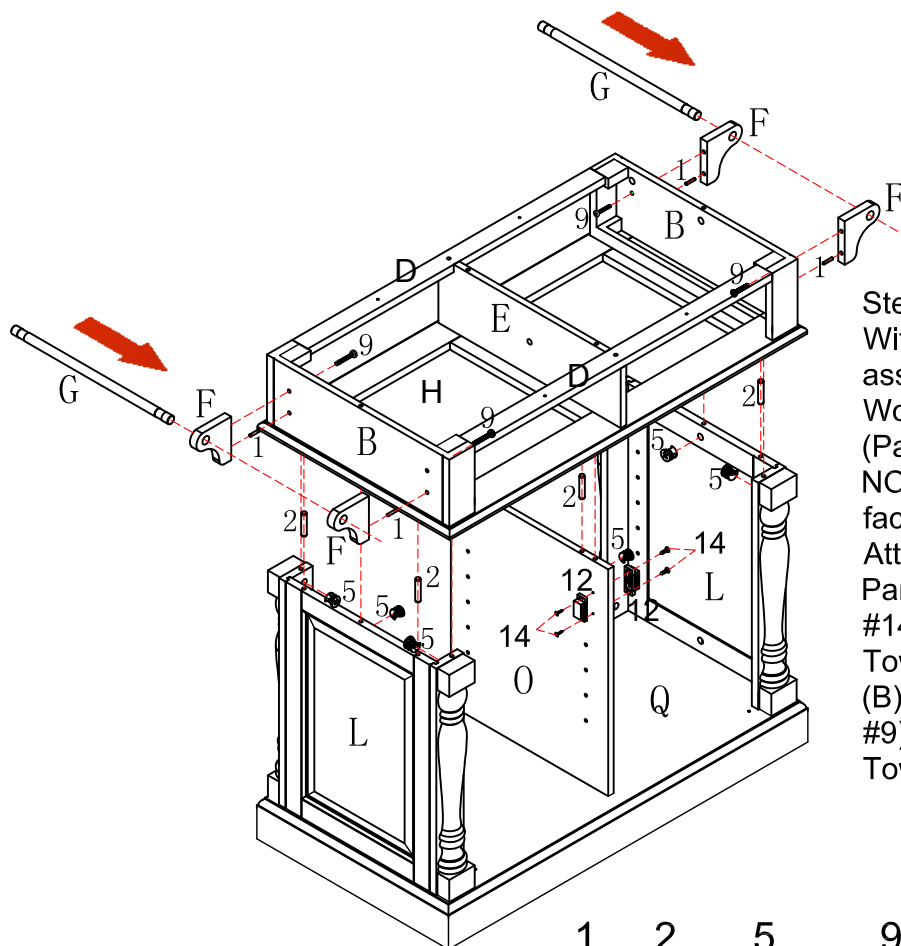


Step 7

With Base (Q) on a flat surface, attach assembled parts B, D, E, & H using Long Wood Dowels (Part #2) and Cam Locks (Part #5) as shown.

NOTE: Middle Shelf Frame (H) should be facing down.


Attach Magnets (Part #12) to Lower Partition Panel (O) using Round Head Screws (Part #14) into pre-drilled holes as shown. Attach Towel Bar Panels (F) to Upper Side Frames (B) using Short Hex Socket Head Bolts (Part #9) as shown. Insert Towel Bars (G) into Towel Bar Panels (F).

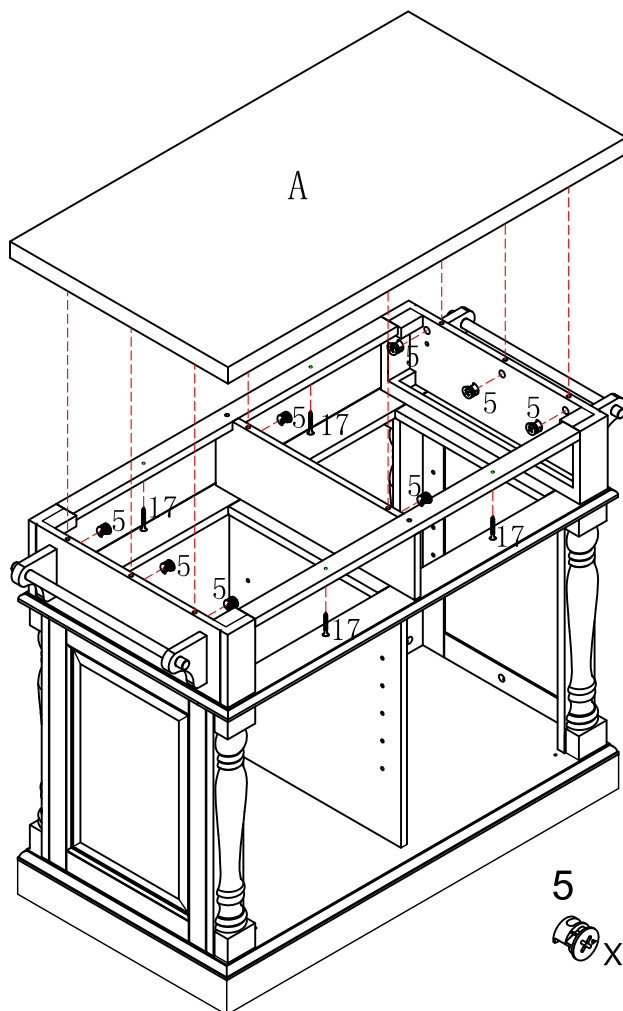

Step 8

Attach Top (A) to cabinet using Cam Locks (Part #5) & Long Flat Head Screws (Part #17) as shown.



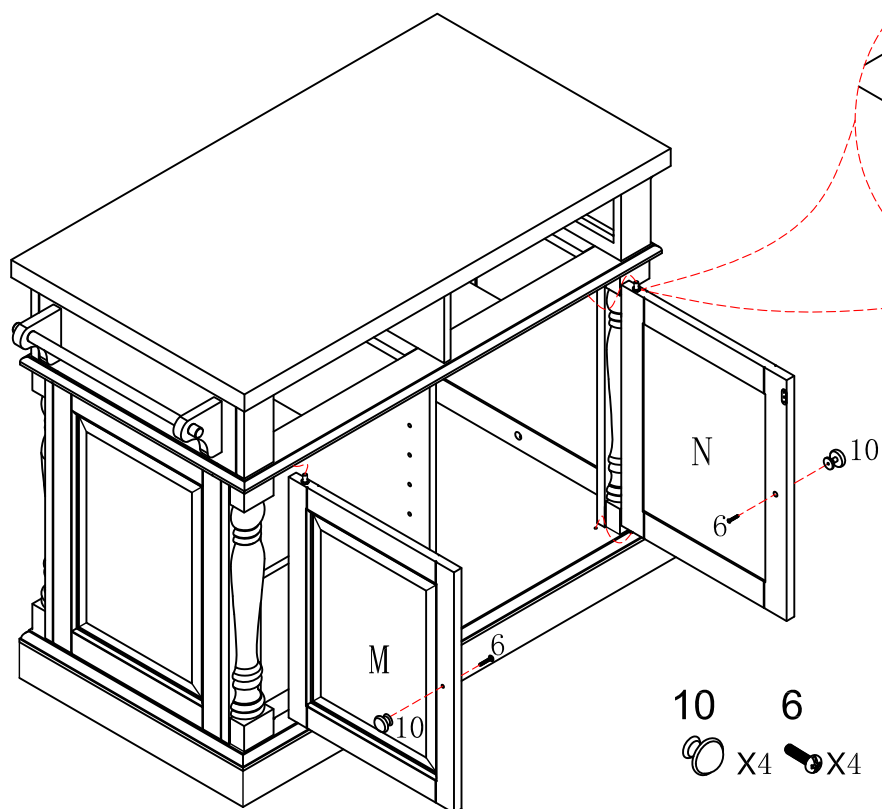




Step 9

Attach Doors (M&N) to the cabinet by placing bottom pin hinge into the pre-drilled holes at the bottom & depressing the top spring loaded pin hinge to fit the doors into place.


NOTE: Be sure that pin hinges have fully extended into the pre-drilled holes to secure the doors into place.

10 6
 X4  X4

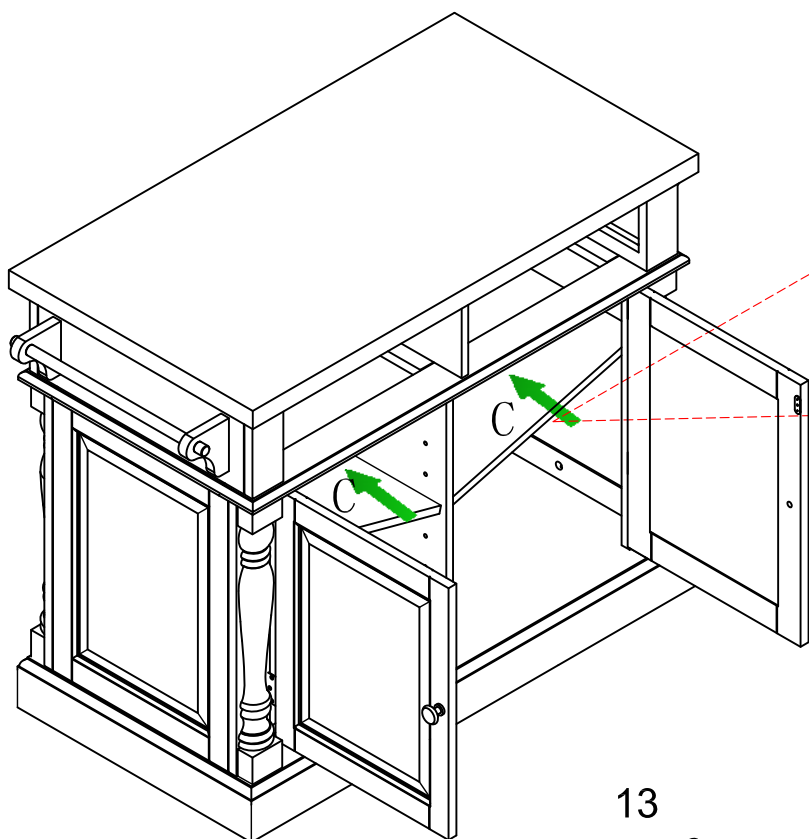


Step 10

Insert the Shelf Holders (Part #13) at the desired height inside the cabinet. Insert the Adjustable Shelves (C) into the cabinet.

13
 X8

Step 11

Insert the assembled drawers into the cabinet. Pull one drawer open enough to reach inside and insert the 60mm Wood Dowel (Part #3) into the pre-drilled hole in the Upper Partition Panel (E). NOTE: Wood Dowel (Part #3) will act as a "stop" to keep the drawers from coming out completely once it is inserted.

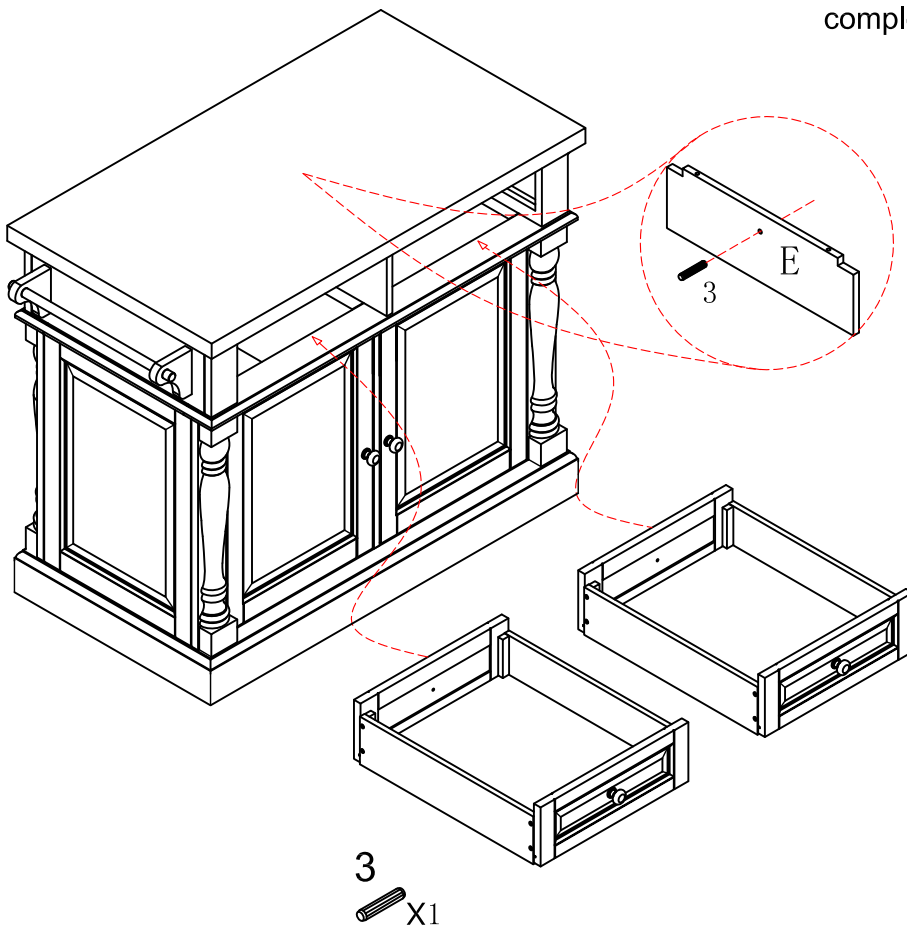

Congratulations! You are finished.