



PLATFORM BED FRAME

ASSEMBLY INSTRUCTIONS





Before assembling your Platform bed frame, please read through these instructions carefully, familiarize yourself with the different parts.

Instructions apply for all sizes of bed
> Twin > Full > Queen

PARTS LIST

- | | | |
|---|-----------|-------|
| 1 | MID RAIL | 1 PC |
| 2 | LEFT LEG | 1 PC |
| 3 | RIGHT LEG | 1 PC |
| 4 | LONG RAIL | 2 PCS |


HARDWARE

- | | |
|--|---|
|  (a) JCB M6 X 120mm(4 3/4") - 2 pcs
Spare - 1 pc |  (c) Barrel Nut - 6 pcs
Spare - 2 pcs |
|  (b) JCB M6 X 70mm(2 3/4") - 4 pcs
Spare - 1 pc |  (d) Allen Wrench - 1pc
Spare - 1pc |


NOTE : WE INCLUDE SPARE HARDWARE IN CASE THE ALLEN WRENCH, JCB, OR BARREL NUT ARE DAMAGED DURING ASSEMBLY.

Step 1

Attach the legs (2)(3) to mid rail (1), using JCB M6 X 120mm (a) and barrel nut (c). Tighten with the Allen wrench (d).

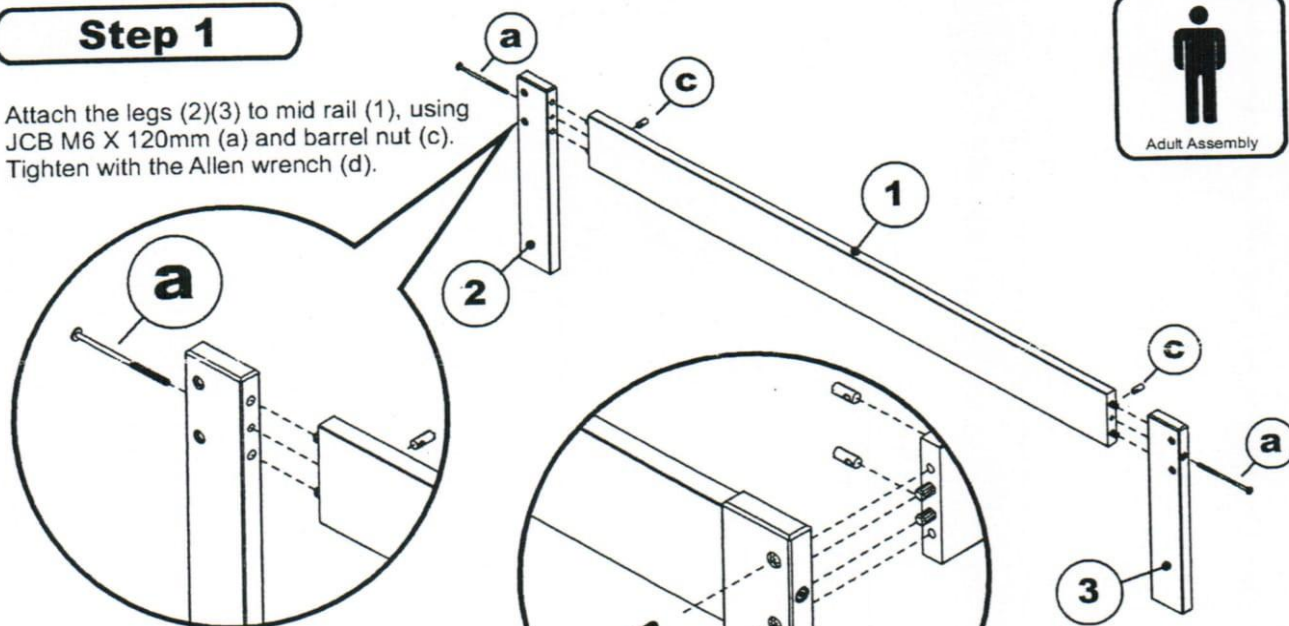

Step 2

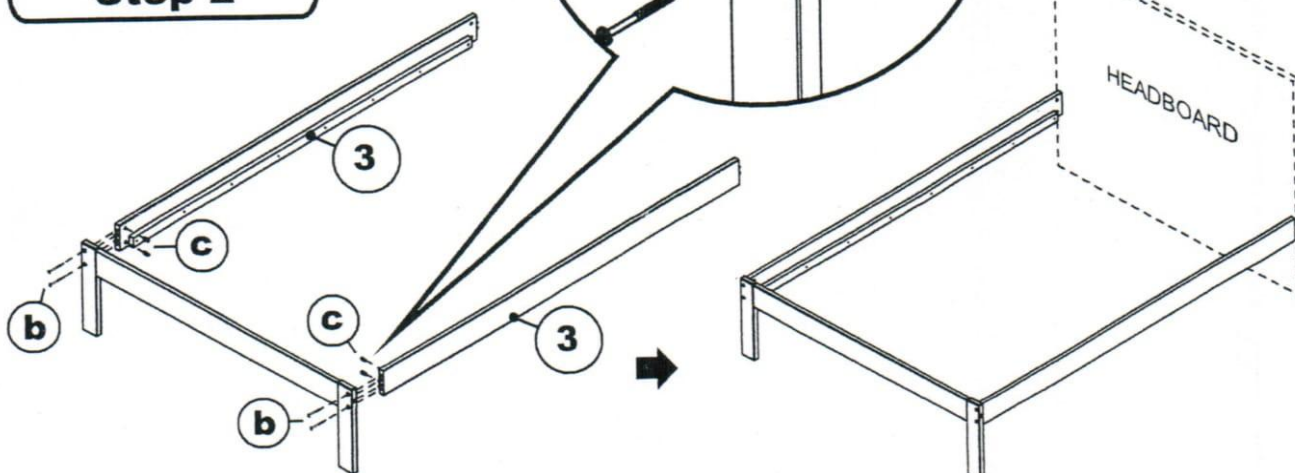

Attach long rail (3) to the mid rail assemblies, using JCB M6 X 70mm (b) and barrel nut (c) as shown. Tighten with allen wrench (d). For Headboard assembly, follow assembly instructions included with headboard.