



ASSEMBLY INSTRUCTIONS

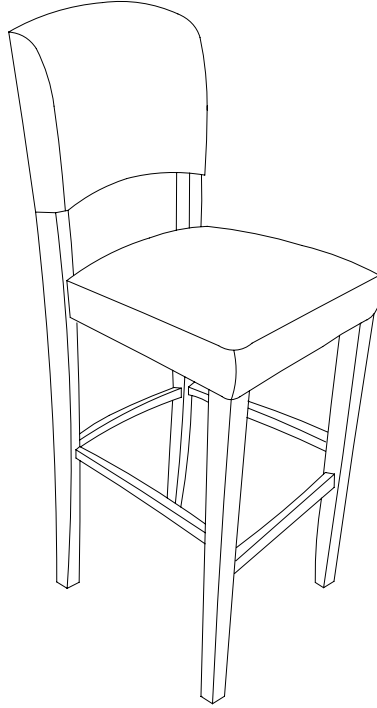

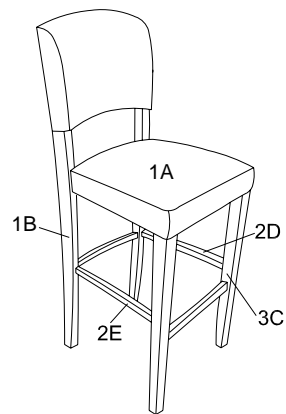










24" COUNTER STOOL



ASSEMBLY INSTRUCTIONS



PARTS LIST

PARTS	GRAPHICS	DESCRIPTION	QUANTITY
1A		SEAT ASSEMBLY	1
1B		BACK ASSEMBLY	1
3C		FRONT LEG ASSEMBLY	1
2D		RIGHT SIDE STRETCHER	1
2E		LEFT SIDE STRETCHER	1
F		SHORT BOLT	2
G		BACK LEG BOLT	4
H		FRONT LEG BOLT	4
I		SPRING WASHER	10
J		FLAT WASHER	10
K		ALLEN HEXAGONAL WRENCH	1
L		WOOD SCREW	4
M		ADHESIVE PADS	4

ASSEMBLY INSTRUCTIONS

PREPARATION:

SELECT A WORK SURFACE. WE RECOMMEND A TABLE TOP. PLEASE PROTECT IT VERY WELL, INCLUDING THE EDGES TO PREVENT ANY DAMAGES; YOU MAY USE A BLANKET AND THE CARDBOARD FROM THE STOOL BOX.

YOU WILL NEED TO USE YOUR OWN PHILLIPS SCREWDRIVER WITH #2 SIZE HEAD.

STEP-1: CONNECT SEAT-1A TO BACK-1B AS SHOWN IN FIGURE-1

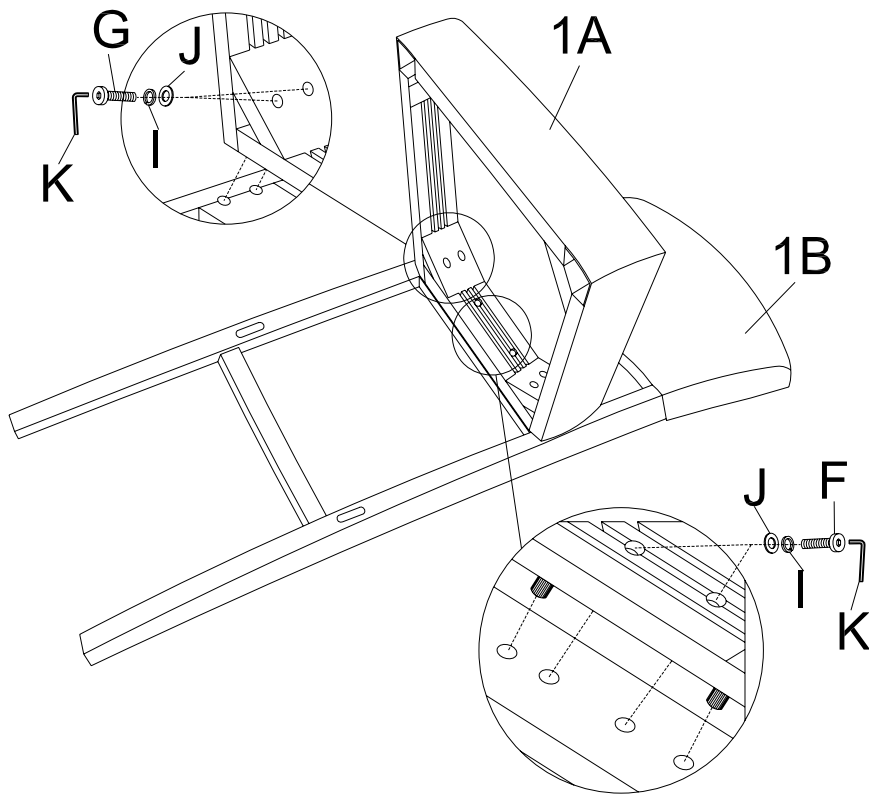


FIGURE-1

- 1.1 POSITION BACK-1B ON THE WORK SURFACE AS SHOWN IN FIGURE-1.
- 1.2 LOOK FOR TWO WOODEN DOWELS OUTSIDE SEAT-1A; INSERT THEM INTO THE CORRESPONDING HOLES IN THE RAIL OF BACK-1B.
- 1.3 INSERT ONE SPRING WASHER-J, THEN ONE FLAT WASHER-I OVER ONE BACK LEG BOLT-G; INSERT THE BOLT-G THROUGH ANY OF THE FOUR HOLES IN THE CORNER BRACKETS ADJACENT TO THE BACK LEGS; IF NECESSARY, MOVE THE BOLT-G AROUND TO FIND THE HOLE IN THE BACK LEG. TIGHTEN BY HAND.
- 1.4 REPEAT PROCEDURE 1.3 TO INSTALL THE REMAINING THREE SETS G+J+I.
- 1.5 REPEAT PROCEDURE 1.4 TO INSTALL TWO SHORT BOLTS WITH HARDWARE F+J+I TO SECURE SEAT-1A TO BACK-1B.

ASSEMBLY INSTRUCTIONS

STEP-2 : CONNECT THE SIDE STRETCHER TO THE BACK-1B AS SHOWN IN FIGURE-2

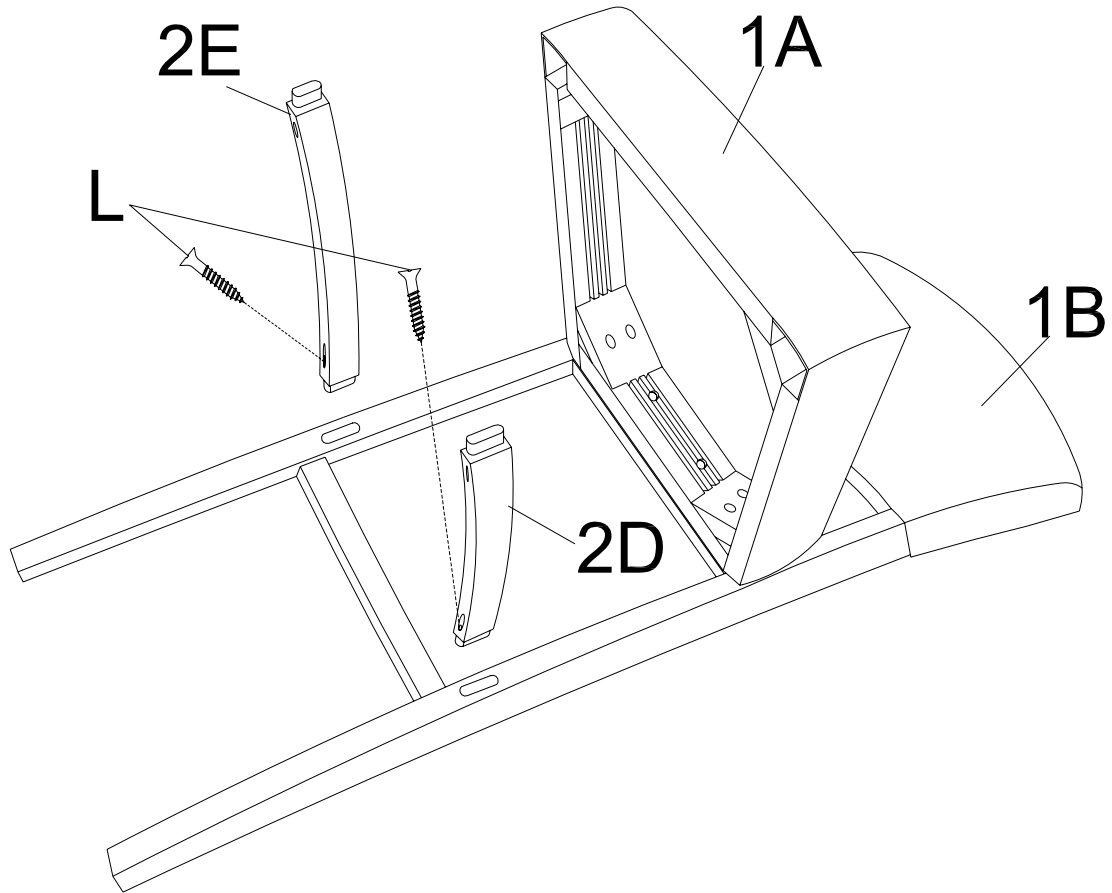


FIGURE-2

- 2.1 FOLLOW THE LABELS ON STRETCHERS 2D AND 2E INSERT THEM IN THE BACK LEGS AS SHOWN. SECURE CONNECTION WITH TWO WOOD SCREWS-L.

ASSEMBLY INSTRUCTIONS

STEP-3 : CONNECT THE FRONT LEG TO SEAT-1A AND SIDE STRETCHER AS SHOWN IN FIGURE-3

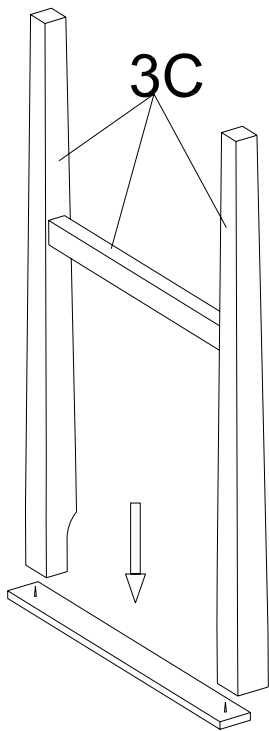


FIGURE-3A

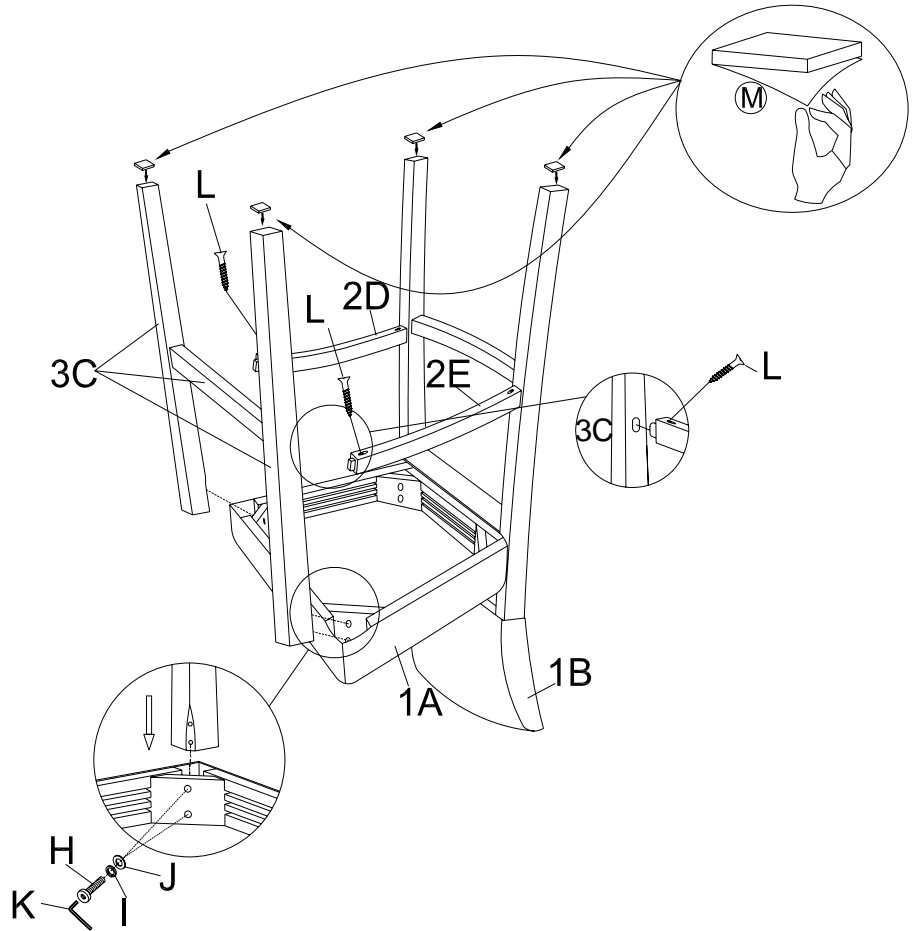


FIGURE-3B

- 3.1 REMOVE THE SHIPPING CLEAT FROM END OF FRONT LEG ASSEMBLY-3C.
- 3.2 TURN CHAIR AROUND WITH SEAT IN THE WORK SURFACE AS SHOWN IN FIGURE-3B.
- 3.3 CONNECT FRONT ASSEMBLY-3C TO STRETCHERS 2D AND 2E USING TWO WOOD SCREWS-G, THEN CONNECT IT TO SEAT-1A USING FOUR FRONT LEG BOLTS-H WITH FOUR SPRING WASHERS-I, AND FOUR FLAT WASHERS-J AS SHOWN IN FIGURE-3B.
- 3.4 PLACE FOUR FOOT PAD-M TO THE LEGS OF THE STOOL AS SHOWN.

ASSEMBLY INSTRUCTIONS

MAINTENANCE:

- 4.1 YOUR STOOL ASSEMBLY IS NOW COMPLETED. ENJOY USING IT !
- 4.2 DO NOT DISCARD THE ALLEN HEXAGONAL WRENCH-D; KEEP IT FOR FUTURE USE.
- 4.3 PERIODICALLY CHECK ALL CONNECTIONS AND RE-TIGHTEN BOLTS AND WOOD SCREWS IF NECESSARY. DO NOT OVER-TIGHTEN TO AVOID STRIPPING WOOD OR METAL NUTS.
- 4.4 CLEAN THE LACQUER FINISH IF NECESSARY WITH CLEAN WATER DAMP CLOTH. IF YOU DO NOT MIND A CHANGE OF LACQUER SHEEN THEN YOU MAY USE A NON-ABRASIVE FURNITURE CLEANER. DO NOT USE HOUSEHOLD CLEANING CHEMICALS.
- 4.5 CLEAN THE UPHOLSTERY WITH A WATER DAMP CLOTH. DO NOT USE HOUSEHOLD CHEMICALS.