


## Storage Console

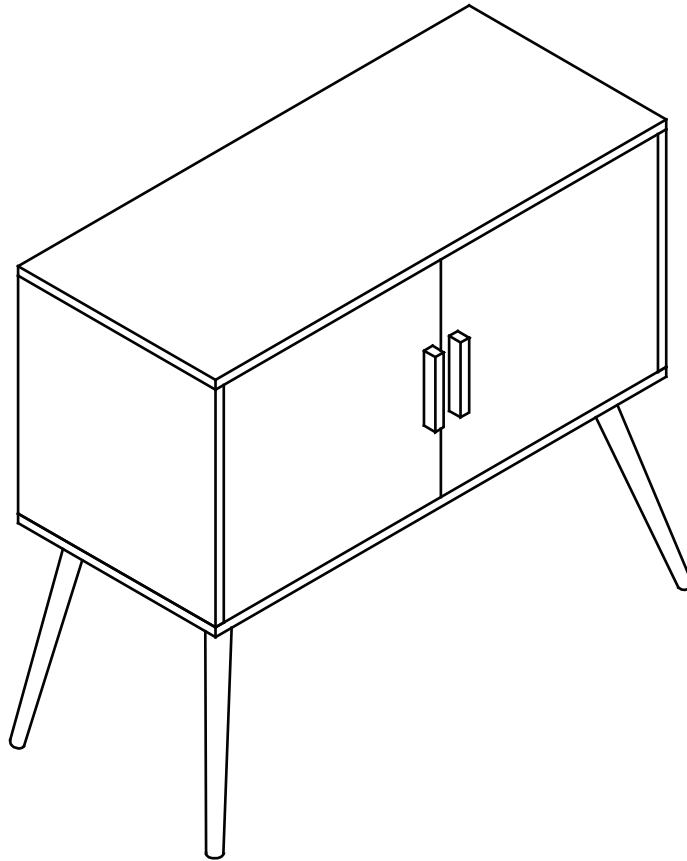


## Assembly instructions


We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish.

Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.


\*Special Note: We recommend the use of a hand held screwdriver to avoid the stripping of screw heads.\*

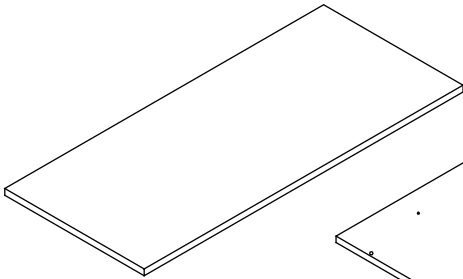


① x1

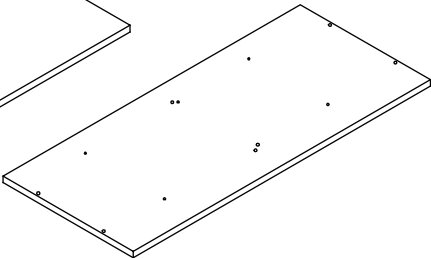


② x1

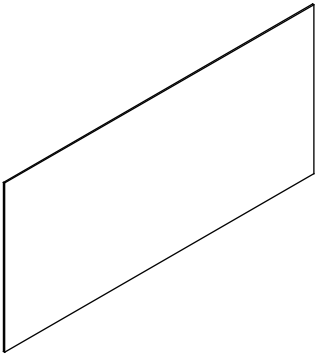


③ x1

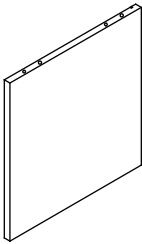


④ x1

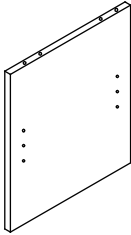


⑤ x1

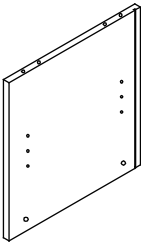


⑥ x1

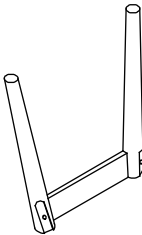


⑦ x2

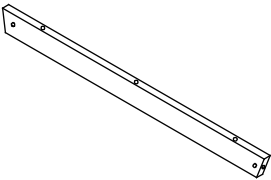


⑧ x2

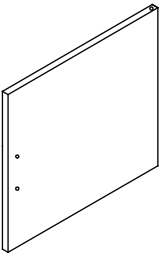


⑨ x1

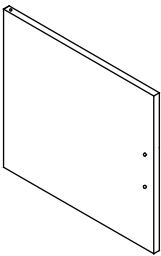


⑩ x1

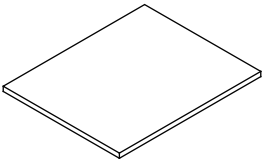


⑪ x2




A x6  
Cam Bolt




B x6  
Cam Lock




C x4  
Hinge Screw




D x4  
Door Pin




E x4  
Allen Bolt




F x4  
Lock Nut




G x6  
Dowel




H x8  
Support Pin




I x2  
Bracket




J x6  
Screw




K x2  
Magnet




L x4  
Screw




M x2  
Handle



N x4  
Handle Screw





O x6  
Large Screw




P x4  
Pad

Assembling the unit with cams and wood dowels.

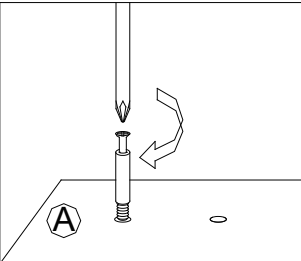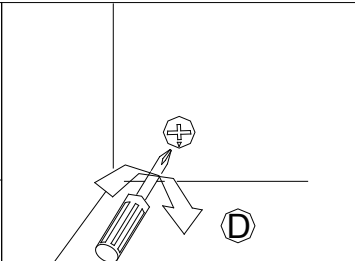		
Gently screw cam bolt into the threaded anchor.	Insert cam lock with arrow pointing down. Screw the cam firmly into locked position.	


## Step 1

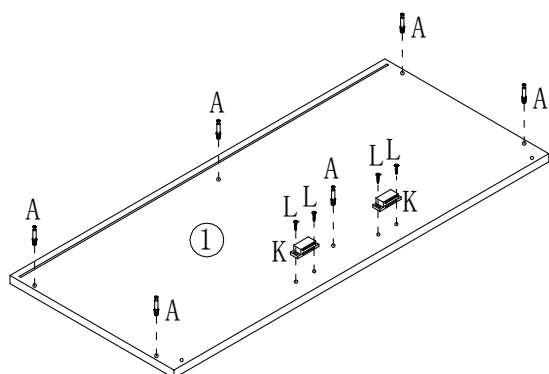

1.Screw Cam bolts(A)into Panel ① .

2.Attach Magnets(K)to Panel ① using Screws(L).


## Step 2

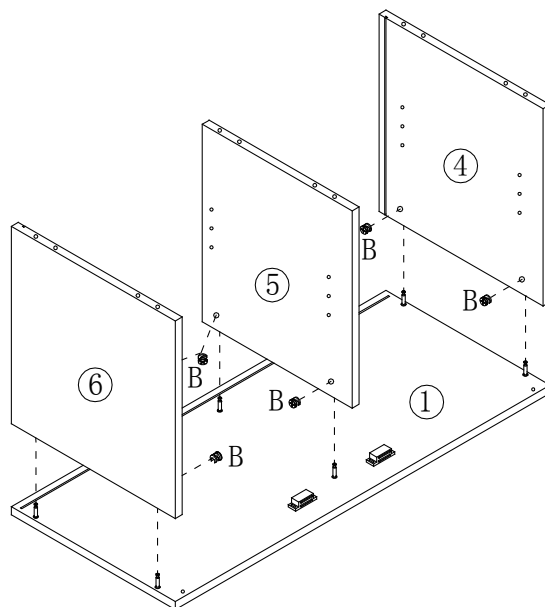

1.Insert Cam locks (B) into Panels ④, ⑤ and ⑥.


2.Connect Panels ④, ⑤, ⑥ to Panel ① by gently tightening Cam Locks (B).

## Step 3

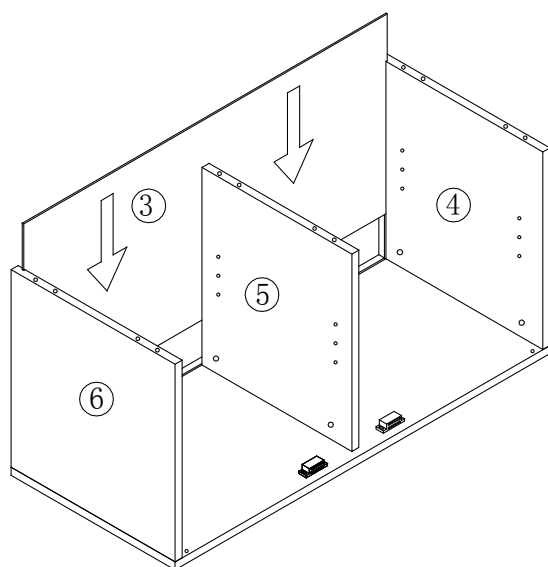

1.Slide Back Panel ③ into grooves of Panels.

## Step 4

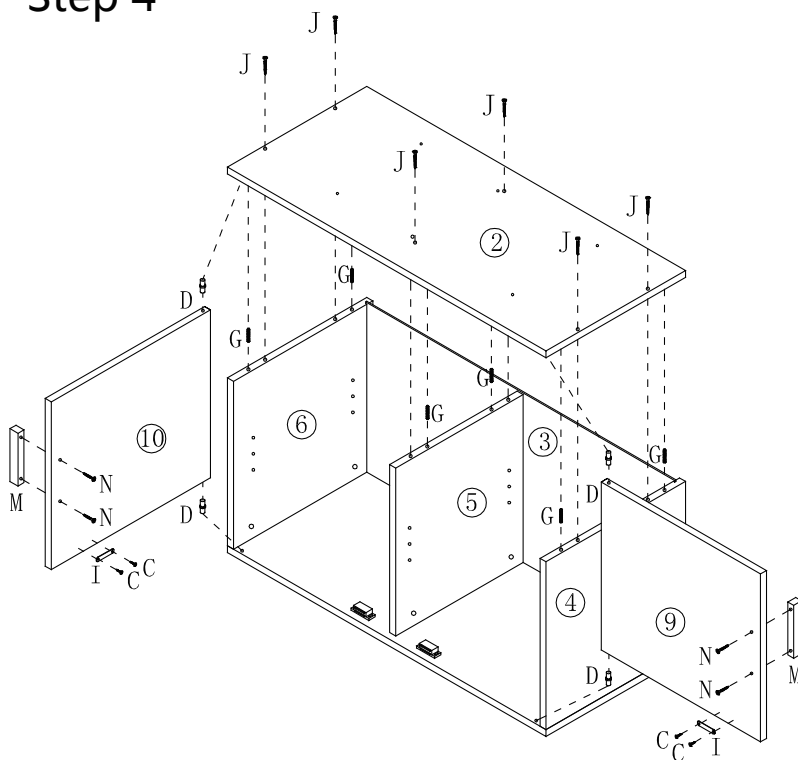

1.Decide which side of Doors ⑨ and ⑩ you would like on display

2.Attach Handles (M) to Doors ⑨ and ⑩, on side you want to display , with Screws (N).

3.Insert Dowels (G) into assembly.


4.Place Door Pins (D) into Doors ⑨ and ⑩ and carefully place onto assembly.

5.Place panel ② onto assembly , making sure to line up Door pins(D) and Dowels(G), and fasten with Screws(J).

6.Attach Bracket (I) to Doors ⑨ and ⑩ using Screws (C) as shown.


Note: Threads on barrel nut(F) must face holes.

## Step 5

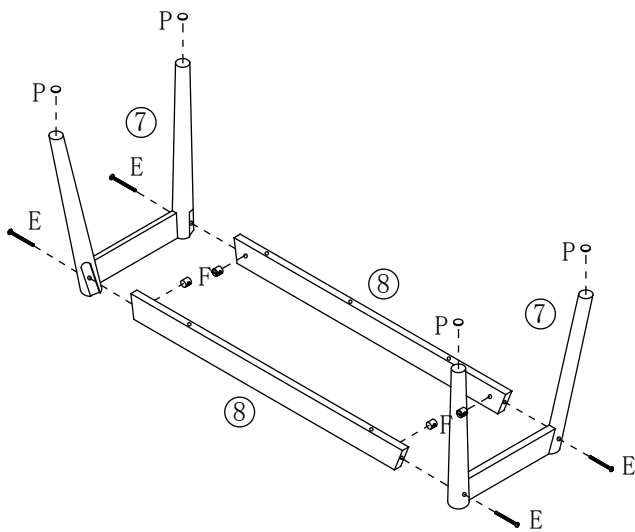


1. Attach Legs ⑦ to Side Bars ⑧ using Bolts (E) and Lock Nuts (F).
2. Place Pads (P) onto bottoms of Legs ⑦.

## Step 6

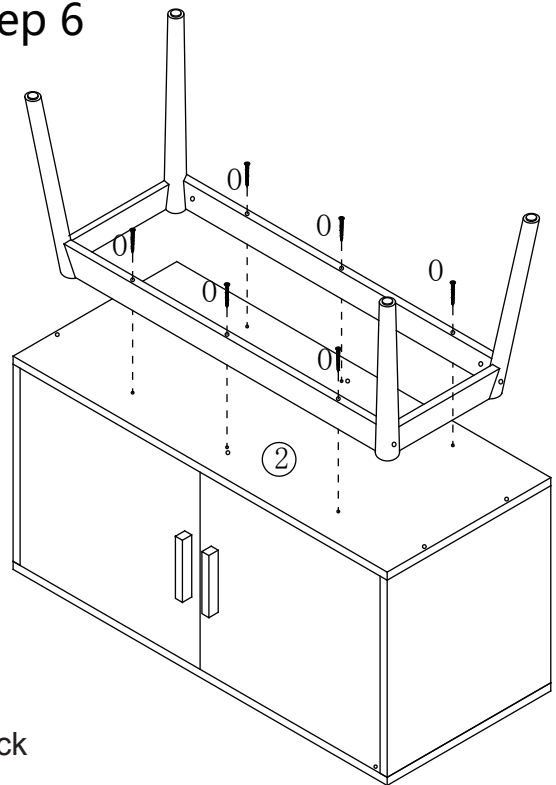

1. Attach Leg Assembly to Panel ② using Screws(O).

## Step 7

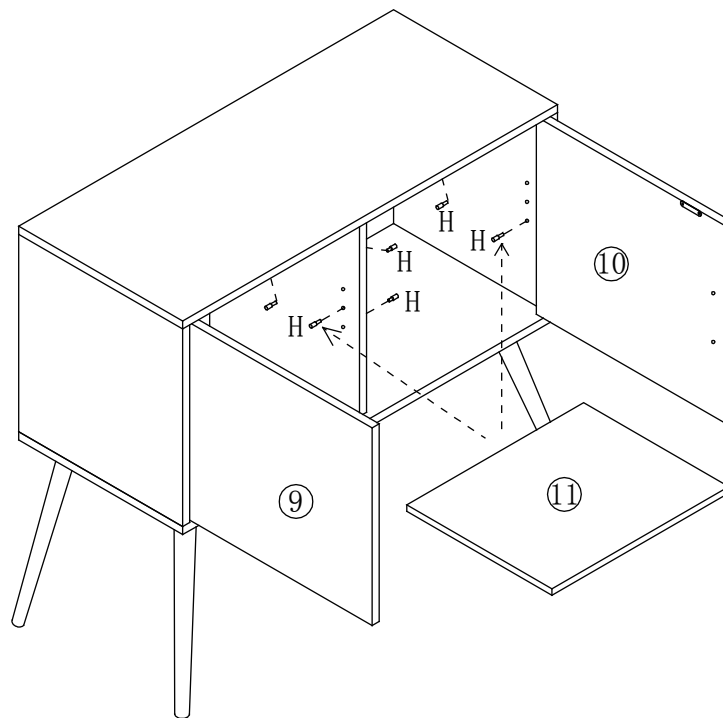

1. Place Support Pins(H) into desired holes.
2. Carefully place Inner Shelves ⑪ onto Support Pins(H).
3. Enjoy.